If you have any comments or concerns, please feel free to contact our customer service department at:

Toll-free: 1-800-835-0438

OR

Email: info@gofia.com

SEAT COVERS By

The Leader in Custom Fit



Featuring

SUPER-GRIP®

THE SLIP RESISTANT FASTENING SYSTEM

INSTALLATION INSTRUCTIONS FOR TR42-3

Thank you for purchasing one of our fine quality products. Your seat cover is engineered from high quality materials and designed with precision to give you a long-lasting, well-adjusted fit.

The **Super Grip Buckles** are self-locking. For proper usage, see diagram.

CUSHION COVER: 60 SIDE

- 1. position seat cover over seat cushion to align opening for seat belt and release latch
- 2. pull seat cover down tightly over corners
- 3. unlatch seat cushion and place in up position
- 4. pass the front straps under the seat and secure to back buckles

Repeat above steps for 40 side

BACK REST COVER:

- 1. locate four loops and straps sewn into backrest cover
- 2. locate the 4 bolts at the back, top of seat
- 3. beginning with right side, hook loops over the four bolts see diagram (b)
- 4. position the right and left straps behind the edge of the back rest see diagram (c)
- 5. position the two center straps down the front of backrest
- pull down tightly on backrest cover so that the side borders tuck in behind the backrest.
- 7. buckle right and left straps to bottom backrest buckles
- pass two centre straps around metal brackets located at the botto behind backrest see figure (d)
- 9. buckle centre two straps to bottom backrest buckles
- 10. adjust all straps/buckles to equalize tension for a uniform fit

DIAGRAM (c

WARNING: SEATS WITH INTEGRATED SEAT AIRBAGS MUST BE COVERED ONLY WITH SEATCOVERS DESIGNED WITH OPENINGS THAT WILL NOT INTERFERE WITH THE DEPLOYMENT OF THE AIRBAG.. NEVER INSTALL SEAT COVERS WITHOUT THESE OPENINGS AS THIS MAY INTERFERE WITH THE PROPER DEPLOYMENT OF THE AIR BAGS AND COULD RESULT IN SERIOUS INJURY.

fia