 


SEAT COVERS
BY



SUPER-GRIP®

THE SLIP RESISTANT FASTENING SYSTEM

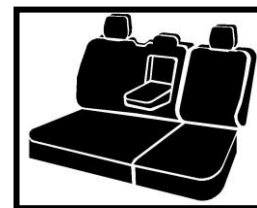

INSTALLATION INSTRUCTIONS
FOR

NP92-53/ Oe32-53/ SL62-53/ SP82-53/ TR42-53/ TRS42-53

Thank you for purchasing one of our fine quality products. Your seat cover is engineered from high quality materials and designed with precision to give you a long-lasting, well-adjusted fit.

A. CUSHION COVERS – 40 & 60 PORTION:

- | | |
|---|--|
| 1) Center cover on cushion. | 4) Attach side velcro to the underside of cushion |
| 2) Release latch and lift seat to ¾ up position | 5) Adjust all velcro, straps and buckles to equalize tension and ensure a snug fit |
| 3) Tuck back flap through crevice, locate straps under seat and secure to front buckles on cover. | |

B. BACKREST COVER – 40 PORTION:

- | | |
|--|--|
| 1) Undo velcro on seat cover. | 6) With cushion in up position, locate strap and secure to buckle on cover |
| 2) Slip cover over headrest and backrest. Holding cushion in ¾ up position allows for better access. | 7) Apply side Velcro to bottom flap (see note below) |
| 3) Lift headrest, and close Velcro on cover. | 8) Repeat on other side |
| 4) Pass straps behind the seat straight down | 9) Adjust all velcro, straps and buckles to equalize tension and ensure a snug fit |
| 5) Smooth cover tightly from top to bottom, tuck bottom cover through crevice | |

C. BACKREST COVER – 60 PORTION:


- | | |
|---|---|
| 1) Undo Velcro on cover | 7) Install adhesive back velcro (included) on inside edge of armrest well to align with velcro on seat cover. NOTE: BEFORE SECURING VELCRO, CLEAN AREA WITH ALCOHOL SWAB PROVIDED. |
| 2) Slip cover over headrest and backrest. Ensure cover is installed under seat belt strap. Holding cushion in ¾ up position allows for better access. | 8) Apply side velcro to bottom flap (see note below) |
| 3) Lift headrest and close Velcro on cover. | 9) Repeat on other side |
| 4) Pass straps behind the seat straight down | 10) Adjust all velcro, straps and buckles to equalize tension and ensure a snug fit |
| 5) Smooth cover tightly from top to bottom, tuck bottom cover through crevice | |
| 6) With cushion in up position, locate strap and secure to buckle on cover | |

D. ARMREST COVER


- | | |
|--|--|
| 1) Fold down armrest | 3) Material can be tucked in between cup holder and armrest for a cleaner finish |
| 2) Slip cover over armrest and attach velcro | |

NOTES:

 1) SELF-LOCKING SUPER-GRIP® BUCKLE:

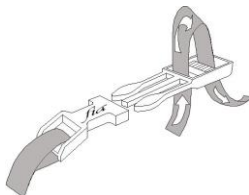

 5) BACKREST COVER BOTTOM FLAP INSTALLATION

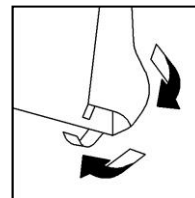

WARNING: SEATS WITH INTEGRATED SEAT AIRBAGS MUST BE COVERED ONLY WITH SEATCOVERS DESIGNED WITH OPENINGS THAT WILL NOT INTERFERE WITH THE DEPLOYMENT OF THE AIRBAG.. NEVER INSTALL SEAT COVERS WITHOUT THESE OPENINGS AS THIS MAY INTERFERE WITH THE PROPER DEPLOYMENT OF THE AIR BAGS AND COULD RESULT IN SERIOUS INJURY.



Fia Inc. Winnipeg, Canada R3L 0N3 Telephone (204) 475-0515 Toll-Free: 1-800-835-0438
Fax: (204) 284-8246 E-Mail: info@gofia.com Website: www.gofia.com