SEAT COVERS

fia



# **SUPER-GRIP®**



## INSTALLATION INSTRUCTIONS FOR NP92-58/ OE32-58/ SL62-58/ SP82-58/ TR42-58/ TRS42-58

Thank you for purchasing one of our fine quality products. Your seat cover is engineered from high quality materials and designed with precision to give you a long-lasting, well-adjusted fit.

## **BACKREST COVER:**

- 1) Remove head rest (see note)
- 2) Slip cover over backrest. Ensure cover is installed under seat belt
- 3) Pass straps behind the seat straight down. Holding cushion up in  $^{3}$ 4 position for steps 3, 4, 5, 6 allows for better access
- 4) Tuck bottom of cover through crevice under backrest
- 5) Smooth cover tightly from top to bottom

- 6) Locate straps and secure to buckles on seat cover
- 7) Locate bottom right flap through crevice and hold at back of seat With other hand bring the side flap around and attach (see note).
- 8) Repeat on left side
- 9) Adjust all straps, buckles and velcro

#### **CUSHION COVER:**

- 1) Center cover on the seat
- 2) Tuck back flap through crevice
- 3) Lift seat and pass straps under seat and buckle

 
- 4) Pass side straps and buckle
- 5) Adjust straps and buckles to equalize tension

## NOTES:

1) SELF-LOCKING SUPER-GRIP® BUCKLE:



- B) Push in side release buttons
   Lift off
  (If unable to remove consult dealership)
- (If unable to remove consult dealership)



### 3) RE-INSTALLATION OF HEADRESTS

- A) Ensure pre-cut holes in seat cover align with holes in headrest base.
- B) Replace headrests

5) BOTTOM FLAP INSTALLATION



WARNING: SEATS WITH INTEGRATED SEAT AIRBAGS MUST BE COVERED ONLY WITH SEATCOVERS DESIGNED WITH OPENINGS THAT WILL NOT INTERFERE WITH THE DEPLOYMENT OF THE AIRBAG.. NEVER INSTALL SEAT COVERS WITHOUT THESE OPENINGS AS THIS MAY INTERFERE WITH THE PROPER DEPLOYMENT OF THE AIR BAGS AND COULD RESULT IN SERIOUS INJURY.

fia

Fia Inc. Winnipeg, Canada R3L 0N3 Telephone (204) 475-0515 Toll-Free: 1-800-835-0438 Fax: (204) 284-8246 E-Mail: info@gofia.com Website: www.gofia.com