



FEATURING
SUPER-GRIP®
THE SLIP RESISTANT FASTENING SYSTEM

**INSTALLATION INSTRUCTIONS
FOR
NP92-77/ Oe32-77/ SL62-77/ SP82-77/ TR42-77/ TRS42-77**

Thank you for purchasing one of our fine quality products. Your seat cover is engineered from high quality materials and designed with precision to give you a long-lasting, well-adjusted fit.

A) CUSHION COVER – 40 PORTION

1. Center cover on seat
2. Tuck back flap through crevice
3. Lift seat up and apply side Velcro in seat
4. Pass front straps through buckles and secure
5. Place seat down smooth cover and adjust Velcro and straps to ensure a snug fit.

B) CUSHION COVER – 60 PORTION

- 1.Center cover on the seat. Cover has opening with velcro for seat belt buckle
2. Detach velcro closure and place around the seat belt base
3. Re attach velcro closure
4. Tuck back flap through crevice
5. Lift seat up and apply side velcro in seat
6. Pass front straps through buckles and secure
7. Place seat down smooth cover and adjust velcro and straps to ensure a snug fit.


C) BACKREST COVER - 40 SECTION

1. Open all velcro closures on cover
2. Headrest is not removable; cover has allowance for headrest.
3. Slip cover over backrest. Place latch handle through opening on cover
4. Unlatch backrest and hold down in $\frac{3}{4}$ position
5. Pass bottom velcro on cover through crevice and place backrest in fold flat position
6. Close side velcro and pull bottom velcro through crevice and velcro at back
7. Place backrest in $\frac{3}{4}$ up position and tuck in cover flap around headrest post
8. Smooth cover from top to bottom. Adjust velcro if required.

D) BACKREST COVER - 60 SECTION

1. Open all velcro closures and zipper on cover
2. Remove center headrest (see note below)
3. Door side headrest is not removable; cover has allowance for headrest.
4. Slip cover over backrest. Place latch handle through opening on cover
5. Ensure cover is installed under seat belt
6. Unlatch backrest and hold down in $\frac{3}{4}$ position
7. Pass bottom velcro on cover through crevice and place backrest in fold flat position
8. Close zipper and pull bottom velcro through crevice and velcro at back
9. Place backrest in $\frac{3}{4}$ up position and tuck in cover flap around HR post
10. Smooth cover from top to bottom. Adjust velcro if required. Re-install center headrest.

1) SELF-LOCKING SUPER-GRIP® BUCKLE:

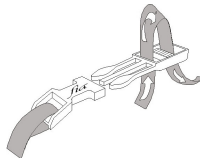

2) HEAD REST REMOVAL:

- Push in side release buttons
- Lift off (If unable to remove consult dealership)

