

If you have any comments or concerns,
please feel free to contact our
customer service department at:
Toll-free: 1-800-835-0438
OR
Email: info@gofia.com

SEAT COVERS
BY

fia
The Leader in Custom Fit

FEATURING

SUPER-GRIP®

THE SLIP RESISTANT FASTENING SYSTEM



INSTALLATION INSTRUCTIONS
FOR
Oe37-14/ SL67-14/ TR47-14

Thank you for purchasing one of our fine quality products. Your seat cover is engineered from high quality materials and designed with precision to give you a long-lasting, well-adjusted fit. The **Super Grip Buckles** are self-locking. For proper usage, see diagram.

INSTRUCTIONS:

- 1) Move seat to most forward position
- 2) Remove head rest (see note)
- 3) Slip cover over backrest – pull down firmly

A) BACKREST COVER:

- 4) Tuck flaps under backrest and attach to velcro at back
- 6) Adjust velcro to equalize tension
- 7) Replace headrests (see note)

 
- 1) Center cover on the seat
- 2) Pass the front strap under seat and buckle

B) CUSHION COVER:

- 3) Pass side straps around back of seat and buckle
- 4) Adjust straps and buckles to equalize tension

NOTES:

1) SELF-LOCKING SUPER-GRIP® BUCKLE:

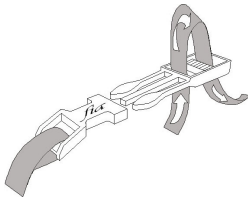


2) HEAD REST REMOVAL:

- A) - Insert paper clip into holes at base to release
- Lift off

OR

 - B) - Push in side release buttons
- Lift off
(If unable to remove consult dealership)

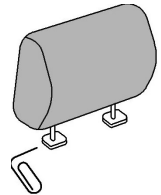

3) RE-INSTALLATION OF HEADRESTS

- Locate headrest base and put a small slit in the stretch fabric to accommodate each of the posts
- Stretch fabric will not run
- Replace headrests

WARNING: SEATS WITH INTEGRATED SEAT AIRBAGS MUST BE COVERED ONLY WITH SEATCOVERS DESIGNED WITH OPENINGS THAT WILL NOT INTERFERE WITH THE DEPLOYMENT OF THE AIRBAG.. NEVER INSTALL SEAT COVERS WITHOUT THESE OPENINGS AS THIS MAY INTERFERE WITH THE PROPER DEPLOYMENT OF THE AIR BAGS AND COULD RESULT IN SERIOUS INJURY.

fia

Fia Inc. Winnipeg, Canada R3L 0N3 Telephone (204) 475-0515 Toll-Free: 1-800-835-0438
Fax: (204) 284-8246 E-Mail: info@gofia.com Website: www.gofia.com

06-19-13