If you have any comments or concerns, please feel free to contact our customer service department at:

Toll-free: 1-800-835-0438

OR

Email: info@gofia.com

SEAT COVERS





THE SLIP RESISTANT FASTENING SYSTEM

INSTALLATION INSTRUCTIONS FOR

NP97-16/ Oe37-16/ SL67-16/ SP87-16/ TR47-16/ TRS47-16

Thank you for purchasing one of our fine quality products. Your seat cover is engineered from high quality materials and designed with precision to give you a long-lasting, well-adjusted fit.

INSTRUCTIONS:

- 1) Remove head rest (see note)
- 2) Open zipper
- 3) Slip cover over backrest under seat belt
- 4) Close zipper (see note)

BACKREST COVER

- 5) Tuck flaps under backrest and attach to Velcro at back
- 6) Adjust Velcro to equalize tension
- 7) Replace headrests (see note)

CUSHION COVER

4) Adjust straps and buckles to equalize tension

- 1) Center cover on the seat
- 2) Pass the front strap under seat. Buckle to back flap
- 3) Pass side straps through the opening between the molded plastic and the seat. Buckle to back flap

NOTES:

1) SELF-LOCKING SUPER-GRIP® BUCKLE:



3) ZIPPERS:

- For ease in installation the zipper is longer than the cover.
- Tuck excess zipper under cover

2) HEAD REST REMOVAL:

- A) Insert paper clip into holes at base to release
 - Lift off

<u>OR</u>

- B) Push in side release buttons
- Lift off

(If unable to remove consult dealership)



4) RE-INSTALLATION OF HEADRESTS

- A) Ensure pre-cut holes in seat cover align with holes in headrest base.
- B) Replace headrests

WARNING: SEATS WITH INTEGRATED SEAT AIRBAGS MUST BE COVERED ONLY WITH SEATCOVERS DESIGNED WITH OPENINGS THAT WILL NOT INTERFERE WITH THE DEPLOYMENT OF THE AIRBAG.. NEVER INSTALL SEAT COVERS WITHOUT THESE OPENINGS AS THIS MAY INTERFERE WITH THE PROPER DEPLOYMENT OF THE AIR BAGS AND **COULD RESULT IN SERIOUS INJURY.**

Fia Inc. Winnipeg, Canada R3L 0N3 Telephone (204) 475-0515 Toll-Free: 1-800-835-0438 Fax: (204) 284-8246 E-Mail: info@gofia.com Website: www.gofia.com

6-21-13