

If you have any comments or concerns,
please feel free to contact our
customer service department at:
Toll-free: 1-800-835-0438
OR
Email: info@gofia.com

SEAT COVERS
BY


fia
The Leader in Custom Fit

FEATURING
SUPER-GRIP®

**THE SLIP RESISTANT FASTENING SYSTEM
INSTALLATION INSTRUCTIONS**

FOR

 NP97-39/ OE37-39/ SL67-39/ SP87-39/ TR47-39/ TRS47-39

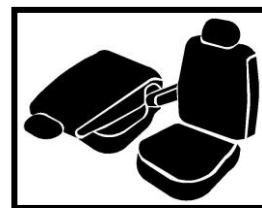

Thank you for purchasing one of our fine quality products. Your seat cover is engineered from high quality materials and designed with precision to give you a long-lasting, well-adjusted fit.

**NOTE: THE TWO HEADREST COVERS ARE NOT IDENTICAL. THE BIGGER COVER IS FOR THE DRIVER'S SIDE.
THE TWO CUSHION COVERS ARE NOT IDENTICAL. THE LONGER COVER IS FOR THE DRIVER'S SIDE.**

A) CUSHION COVER – DRIVER SIDE

- 1) Center cover on seat
- 2) Pass side strap on narrow side band through the opening between the molded plastic and the seat (door side) and buckle to side strap (See note below)
- 3) Pass flap and straps through the crevice and under back flap on seat
- 4) Pull straps to front of seat and attach to center and outside buckles.
- 5) Adjust straps and buckles to equalize tension

B) BACKREST COVER – DRIVER SIDE

- 1) Remove headrests (see note)
- 2) Open Velcro on the side seam to allow for fitting around armrest (driver side only)
- 3) Slip cover over backrest and pull down firmly (see air bag warning below)
- 4) Pass flap and straps through the crevice and under back flap on seat
- 5) Pull straps to front of seat and attach to corresponding buckles.
- 6) Adjust all straps to equalize tension
- 7) Attach velcro on back to carpet

C) BACKREST COVER – PASSENGER SIDE


- 1) Remove head rest (see note)
- 2) Slip cover over backrest placing latch through opening provided (see air bag warning below)
- 3) Pull cover down firmly through crevice then attach shorter velcro on both sides
- 4) Tuck stretchable material under plastic molded table on the back.
- 5) Pull the longer velcro and strap around the existing bar
- 6) Adjust velcro to equalize tension
- 7) Reinstall headrest (see note)

D) CUSHION COVER – PASSENGER SIDE

- 1) Center cover on seat
- 2) Pass side strap on narrow side band through the opening between the molded plastic and the seat (door side) and buckle to side strap
- 3) Pass the back strap under seat and buckle to front. (See note below)
- 4) Adjust straps and buckles to equalize tension


NOTES:

1) SELF-LOCKING SUPER-GRIP® BUCKLE:

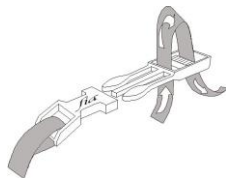

2) HEAD REST REMOVAL:

Push in side release buttons
- Lift off
(If unable to remove consult dealership)

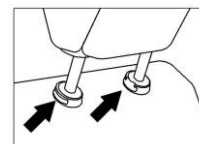

3) RE-INSTALLATION OF HEADRESTS

- A) Ensure pre-cut holes in seat cover align with holes in base.
- B) Replace headrests

WARNING: DO NOT BLOCK AIR BAGS

WHEN INSTALLING SEAT COVERS:

- 1) Seats with integrated seat airbags must be covered only with seat covers designed with openings. Make sure that the openings in the sides of the seat covers are positioned so that the seat covers do not block or interfere with the deployment of the air bag. The attached flap tucks inside the cutout and should be able to open freely in case of deployment.
- 2) Constantly check your seat covers to ensure they are properly positioned to allow for complete air bag deployment.

LIMITATION LIABILITY: The manufacturer shall not be liable for any damages or for the breach of any warranty, express or implied, whether of merchantability or fitness for any purpose or otherwise, or for any other obligation or liability arising out of the installation of the seat covers or the movement of the seat covers after installation.

fia

Fia Inc. Winnipeg, Canada R3L 0N3 Telephone (204) 475-0515 Toll-Free: 1-800-835-0438
Fax: (204) 284-8246 E-Mail: info@gofia.com Website: www.gofia.com

3-27-18