

If you have any comments or concerns,  
please feel free to contact our  
customer service department at:  
Toll-free: 1-800-835-0438  
OR  
Email: info@gofia.com

SEAT COVERS  
BY

*fia*  
The Leader in Custom Fit


FEATURING

**SUPER-GRIP®**

**THE SLIP RESISTANT FASTENING SYSTEM**

INSTALLATION INSTRUCTIONS  
FOR

 Oe37-64/ SL67-64/ SP87-64/ TR47-64

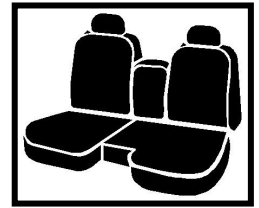


Thank you for purchasing one of our fine quality products. Your seat cover is engineered from high quality materials and designed with precision to give you a long-lasting, well-adjusted fit.

**INSTRUCTIONS:**

 - A) BACKREST COVER X 2:**
- 1) Remove head rest (see note)
  - 2) Slip cover over backrest (see warning below)
  - 3) Tuck flaps under backrest and attach to Velcro at back
  - 4) Adjust Velcro to equalize tension
  - 5) Replace headrests (see note)
- B) CUSHION COVER - "60" PORTION:**
- 1) For seat with cup holder (see NOTE)
  - 2) Position cover over driver cushion
  - 3) Pass the front straps under seat. Buckle to back flap
  - 4) Pass side straps through the opening between the molded plastic and the seat. Buckle to back flap
  - 5) Secure velcro to carpet on seat
  - 6) Adjust all straps, buckles and velcro to equalize tension
- C) CUSHION COVER - "40" PORTION:**
- 1) Position cover over passenger cushion
  - 2) Pass the front strap under seat. Buckle to back flap
  - 3) Pass side straps through the opening between the molded plastic and the seat. Buckle to back flap
  - 4) Adjust straps and buckles to equalize tension
- D) ARMREST / STORAGE COMPARTMENT:**
- 1) Open armrest / storage compartment
  - 2) Center cover under armrest
  - 3) Position adhesive backed velcro (supplied) inside the console to align with the velcro on cover. **NOTE: BEFORE POSITIONING VELCRO, CLEAN AREA WITH ALCOHOL SWAB PROVIDED**
- E) ARMREST LID**
- 1) Open armrest / storage compartment
  - 2) Slide cover over lid
  - 3) Adjust cover to go over back and front edge of lid

**NOTES:**

**1) SELF-LOCKING SUPER-GRIP® BUCKLE:**

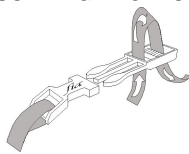


**3) RE-INSTALLATION OF HEADRESTS**

- A) Ensure pre-cut holes in seat cover align with holes in headrest base.
- B) Replace headrests

**2) HEAD REST REMOVAL:**

 - A) Insert paper clip into holes at base to release  
Lift off
- OR**
- B) Push in side release buttons  
Lift off  
(If unable to remove consult dealership)

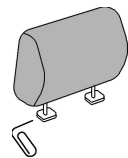

**4) CUP HOLDER**

- A) Slide cup holder up to release from bolts
- B) After the seat cover has been installed, locate the bolts through the stretch fabric and make one slit for each bolt just large enough to allow the bolt to come through (THE STRETCH FABRIC WILL NOT RUN)
- C) Re-install cup holder

**WARNING: DO NOT BLOCK AIR BAGS**

**WHEN INSTALLING SEAT COVERS:**

- 1) Seats with integrated seat airbags must be covered only with seat covers designed with openings. Make sure that the openings in the sides of the seat covers are positioned so that the seat covers do not block or interfere with the deployment of the air bag. The attached flap tucks inside the cutout and should be able to open freely in case of deployment.
- 2) Constantly check your seat covers to ensure they are properly positioned to allow for complete air bag deployment.

**LIMITATION LIABILITY:** The manufacturer shall not be liable for any damages or for the breach of any warranty, express or implied, whether of merchantability or fitness for any purpose or otherwise, or for any other obligation or liability arising out of the installation of the seat covers or the movement of the seat covers after installation.

*fia*

Fia Inc. Winnipeg, Canada R3L 0N3 Telephone (204) 475-0515 Toll-Free: 1-800-835-0438  
Fax: (204) 284-8246 E-Mail: info@gofia.com Website: www.gofia.com