 


If you have any comments or concerns,  
please feel free to contact our  
customer service department at:  
Toll-free: 1-800-835-0438  
OR  
Email: [info@gofia.com](mailto:info@gofia.com)

SEAT COVERS  
BY

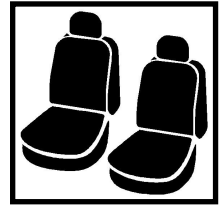

FEATURING  
**SUPER-GRIP® THE SLIP RESISTANT FASTENING SYSTEM**

**INSTALLATION INSTRUCTIONS  
FOR  
OE38-29/ SL68-29/ SP88-29**

Thank you for purchasing one of our fine quality products. Your seat cover is engineered from high quality materials and designed with precision to give you a long-lasting, well-adjusted fit.


**INSTRUCTIONS FOR:**

 **ONE PIECE BUCKET SEAT COVER**

- 1) Remove headrest (see notes)
- 2) Unhook back bottom flap of seat backrest by removing elastic with clip from under cushion
- 3) Move seat to most forward position
- 4) Slip cover over backrest
- 5) Pull down firmly and feed center flap with long strap through crevice
- 6) Reach long straps from under cushion and buckle to front
- 7) Pass long side strap through the opening between the molded plastic and the seat
- 8) Pass short side strap with buckle and buckle side straps together
- 9) Adjust all straps and buckles to equalize tension
- 10) Slip elastic with clip (previously removed in step 2) through the opening on the bottom of cover
- 11) Replace elastic with clip back under the seat

**NOTES:**

**1) SELF-LOCKING SUPER-GRIP® BUCKLE:**

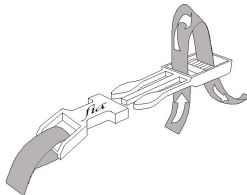

**3) RE-INSTALLATION OF HEADRESTS**

- A) Ensure pre-cut holes in seat cover align with holes in headrest base.
- B) Replace headrests

**2) HEAD REST REMOVAL:**

Recline backrest when removing head rest. Return to upright position.

- Push in side release buttons

Lift off

(If unable to remove consult dealership)

**WARNING: DO NOT BLOCK AIR BAGS**

**WHEN INSTALLING SEAT COVERS:**

- 1) Seats with integrated seat airbags must be covered only with seat covers designed with openings. Make sure that the openings in the sides of the seat covers are positioned so that the seat covers do not block or interfere with the deployment of the air bag. The attached flap tucks inside the cutout and should be able to open freely in case of deployment.
- 2) Constantly check your seat covers to ensure they are properly positioned to allow for complete air bag deployment.

**LIMITATION LIABILITY:** The manufacturer shall not be liable for any damages or for the breach of any warranty, express or implied, whether of merchantability or fitness for any purpose or otherwise, or for any other obligation or liability arising out of the installation of the seat covers or the movement of the seat covers after installation.



Fia Inc. Winnipeg, Canada R3L 0N3 Telephone (204) 475-0515 Toll-Free: 1-800-835-0438  
Fax: (204) 284-8246 E-Mail: [info@gofia.com](mailto:info@gofia.com) Website: [www.gofia.com](http://www.gofia.com)

8-26-13