

FEATURING  
**SUPER-GRIP® THE SLIP RESISTANT FASTENING SYSTEM**

**INSTALLATION INSTRUCTIONS  
FOR**

**NP98-38/ Oe38-38/ SL68-38/ SP88-38/ TR48-38/ TRS48-38**

Thank you for purchasing one of our fine quality products. Your seat cover is engineered from high quality materials and designed with precision to give you a long-lasting, well-adjusted fit. **FOR EASE IN INSTALLATION, PLEASE INSTALL CUSHION COVERS FIRST.**

**CUSHION COVER – “40” PORTION**

- 1) Move the seat to most forward and uppermost positions
- 2) Release back flap on bottom of backrest by removing the plastic clip underneath the seat
- 3) Place cover on seat cushion ensuring long side strap is on the door side
- 4) Pass back flap of cover through crevice
- 5) Feed straps under seat and buckle to front of cushion cover
- 6) Pass the side strap through the opening between the seat and the molded plastic and under the seat
- 7) Buckle to the other side strap
- 8) Adjust straps to equalize tension for a better fit

**BACKREST COVER – “40” PORTION**

- 1) Due to the difficulty in removing the headrests, cover has allowances for the headrests
- 2) Slip cover over backrest pull down firmly and tuck flap on headrest opening (see air bag warning below)
- 3) Smooth cover and tuck flap under backrest through crevice
- 4) Re-install previously removed plastic clip underneath the seat cushion
- 5) Pull flap forward and attach Velcro from cover
- 6) Adjust Velcro to equalize tension for a better fit

**BACKREST COVER/ARMREST COVER – “20” PORTION**

- 1) Place the armrest/storage compartment in up position
- 2) Open zipper slip cover over armrest and under seat belt
- 3) Close zipper and place pull tab on seat through opening
- 4) Smooth cover tuck back flap to crevice
- 5) Place armrest in down position
- 6) Position adhesive back Velcro supplied around the edge of cup holder and inside the storage compartment align with Velcro on cover. **NOTE: BEFORE POSITIONING VELCRO, CLEAN AREA WITH ALCOHOL SWAB PROVIDED.**
- 7) Adjust all Velcro to equalize tension for a better fit

**LID COVER/ARMREST – “20” PORTION**


- 1) Open lid, slip cover over lid
- 2) Snug and align all openings on cover to lid

**CUSHION COVER – “20” PORTION**

- 1) Center cover on seat
- 2) Pass side strap around the back and buckle to other side.
- 3) Smooth cover and tuck back part of cover in between cushion and plastic molding
- 4) Position adhesive Velcro supplied to align with Velcro on cover  
**NOTE: BEFORE POSITIONING VELCRO, CLEAN AREA WITH ALCOHOL SWAB PROVIDED.**
- 5) For a cleaner look tuck the bottom front material in between seat and carpeting
- 6) Adjust straps and buckles to equalize tension

**NOTES:**

- 1) **SELF-LOCKING SUPER-GRIP® BUCKLE:**

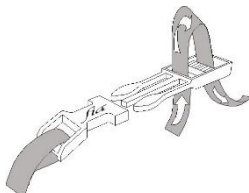

## **WARNING: DO NOT BLOCK AIR BAGS**

### **WHEN INSTALLING SEAT COVERS:**

- 1) Seats with integrated seat airbags must be covered only with seat covers designed with openings. Make sure that the openings in the sides of the seat covers are positioned so that the seat covers do not block or interfere with the deployment of the air bag. The attached flap tucks inside the cutout and should be able to open freely in case of deployment.
- 2) Constantly check your seat covers to ensure they are properly positioned to allow for complete air bag deployment.

**LIMITATION LIABILITY:** The manufacturer shall not be liable for any damages or for the breach of any warranty, express or implied, whether of merchantability or fitness for any purpose or otherwise, or for any other obligation or liability arising out of the installation of the seat covers or the movement of the seat covers after installation.



Fia Inc. Winnipeg, Canada R3L 0N3 Telephone (204) 475-0515 Toll-Free: 1-800-835-0438  
Fax: (204) 284-8246 E-Mail: [info@gofia.com](mailto:info@gofia.com) Website: [www.gofia.com](http://www.gofia.com)