 


If you have any comments or concerns,  
please feel free to contact our  
customer service department at:  
Toll-free: 1-800-835-0438  
OR  
Email: info@gofia.com

SEAT COVERS  
BY

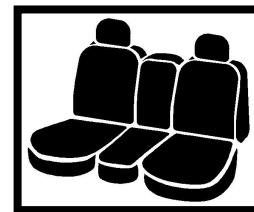

FEATURING  
**SUPER-GRIP®**  
THE SLIP RESISTANT FASTENING SYSTEM

INSTALLATION INSTRUCTIONS  
FOR  
NP99-29/ OE39-29/ SL69-29/ SP89-29/ TR49-29/ TRS49-29

Thank you for purchasing one of our fine quality products. Your seat cover is engineered from high quality materials and designed with precision to give you a long-lasting, well-adjusted fit.

**INSTRUCTIONS:**

**A) BACKREST COVERS – “40” PORTIONS:**

- |  |   |
|--|---|
| 1) Remove head rest (see note on reverse)  | 4) Tuck flaps through crevice, under plastic panel and up to attach to Velcro at back |
| 2) Move seat to most forward position  | 5) Replace headrests (see note on reverse)  |
| 3) Slip cover over backrest and pull down firmly (see airbag warning on reverse) |   |

**B) CUSHION COVERS – “40” PORTIONS:**

- |   |   |
|---|---|
| 1) Position cover on seat to allow seat belt buckles through opening provided | 3) Pass side straps through the opening between the molded plastic and the seat |
| 2) Pass straps through crevice, under seat and buckle to front                | 4) Pass the straps around the back and buckle                                   |
|   | 5) Adjust straps and buckles to equalize tension                                |

**C) BACKREST COVER – “20” PORTION**

 
- |  |   |
|--|---|
| 1) Open armrest / storage compartment  | 4) Position adhesive back Velcro, supplied, to align with the velcro on cover |
| 2) Center cover under armrest  |   |
| 3) Snug cover at back of armrest so the velcro on the cover is positioned through the crevice where lid and armrest are hinged | <b>NOTE: BEFORE PLACING VELCRO, CLEAN AREA WITH ALCOHOL SWAB PROVIDED.</b>    |

**D) CUSHION COVER – CENTER “20” PORTION**

- |   |   |
|---|---|
| 1) Undo seat belt buckle from the elastic loop on seat  | 5) Position seat belt buckle through elastic loop on seat cover |
| 2) Center cover on the seat                             | 6) Adjust straps and buckles to equalize tension                |
| 3) Pass front straps under seat and buckle to back flap |   |
| 4) Pass side strap around back of seat and buckle       |   |

**NOTES:**

**1) SELF-LOCKING SUPER-GRIP® BUCKLE:**

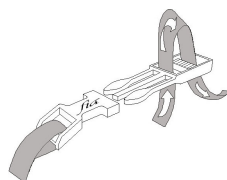


**2) HEAD REST REMOVAL:**

- A) - Insert paper clip into holes at base to release  
- Lift off

**OR**

- B) - Push in side release buttons  
- Lift off

 (If unable to remove consult dealership)



**3) RE-INSTALLATION OF HEADRESTS**

- Ensure pre-cut holes in seat cover align with holes in base
- Replace headrest

**WARNING: DO NOT BLOCK AIR BAGS**

**WHEN INSTALLING SEAT COVERS:**

- 1) Seats with integrated seat airbags must be covered only with seat covers designed with openings. Make sure that the openings in the sides of the seat covers are positioned so that the seat covers do not block or interfere with the deployment of the air bag. The attached flap tucks inside the cutout and should be able to open freely in case of deployment.
- 2) Constantly check your seat covers to ensure they are properly positioned to allow for complete air bag deployment.

