If you have any comments or concerns, please feel free to contact our customer service department at: Toll-free: 1-800-835-0438 OR Email: info@gofia.com





THE SLIP RESISTANT FASTENING SYSTEM INSTALLATION INSTRUCTIONS FOR OE39-30/ SL69-30/ SP89-30/ TR49-30

The Leader in Custom Fit

Thank you for purchasing one of our fine quality products. Your seat cover is engineered from high quality materials and designed with precision to give you a long-lasting, well-adjusted fit.

A) BACKREST COVER

INSTRUCTIONS:

1) Remove head rest (see note)

2) For seats with armrest: open velcro closure (to

- allow for armrest) on the side seam
- 3) Slip cover over backrest
- 4) For seats with armrest: fasten side velcro
- 1) Move seat to most forward position
- 2) Center cushion cover on seat

3) Pull straps to front from underneath the seat at crevice

4) Buckle to the front of the seat

NOTES:

1) SELF-LOCKING SUPER-GRIP® BUCKLE:



2) HEAD REST REMOVAL:

A) - Insert paper clip into holes at base to release
 Lift off

OR

B) - Push in side release buttons
- Lift off
(If unable to remove consult dealership)

6	
	- Th
E E	~

WARNING: SEATS WITH INTEGRATED SEAT AIRBAGS MUST BE COVERED ONLY WITH SEATCOVERS DESIGNED WITH OPENINGS THAT WILL NOT INTERFERE WITH THE DEPLOYMENT OF THE AIRBAG. NEVER INSTALL SEAT COVERS WITHOUT THESE OPENINGS AS THIS MAY INTERFERE WITH THE PROPER DEPLOYMENT OF THE AIR BAGS AND COULD RESULT IN SERIOUS INJURY.

ia

crevice 7) move backrest to upright position

8) Replace headrest (see note)

5) Recline backrest to most flat position

6) Pass the straps attached to center flap through

B) CUSHION COVER

- 5) Pass side straps to the back of the seat and buckle to back flap of backrest
- 6) Adjust all straps and buckles to equalize tension for a uniform fit

3) RE-INSTALLATION OF HEADRESTS

- A) Ensure pre-cut holes in seat cover align with holes in base.
- B) Replace headrests