

SEAT COVERS
BY




FEATURING

SUPER-GRIP®

**THE SLIP RESISTANT FASTENING SYSTEM
INSTALLATION INSTRUCTIONS**

FOR

 NP99-45/ Oe39-45/ SL69-45/ SP89-45/ TR49-45/ TRS49-45

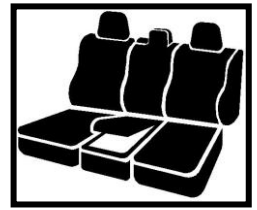

Thank you for purchasing one of our fine quality products. Your seat cover is engineered from high quality materials and designed with precision to give you a long-lasting, well-adjusted fit.

A) CUSHION COVER

- 1) Move the seat to most forward and uppermost positions
- 2) Release back flap on bottom of backrest by removing elastic from the plastic hook underneath the seat cushion
- 3) Align cover on seat and position seat belt buckle through opening provided ensuring long side strap is on the door side
- 4) Pass back flap of cover through crevice
- 5) Feed straps under seat and attach to front center and two sides buckles of cover
- 6) Pass the side strap through the space between the seat and the molded plastic and under the seat
- 7) Buckle to the other side strap
- 8) Adjust straps to equalize tension

B) BACKREST COVER

- 1) Remove headrest (see note 2 below)
- 2) Slip cover over backrest and pull down firmly (see air bag warning below)
- 3) Pass long straps through crevice and attach to corresponding buckles of cushion cover.
- 4) Re-install the elastic attached to the bottom back flap of the seat to the plastic hook under the seat
- 5) Apply Velcro from stretch material to bottom bib of backrest
- 6) Adjust all velcro, straps and buckles to equalize tension and ensure a snug fit
- 7) Replace headrest (see note 3 below)

C) CUSHION COVER – 20 PORTION

- 1) Open cushion lid to up position
- 2) Slip cover over lid and attach velcro strips
- 3) With cushion lid closed, pass back flap through crevice between seat and plastic molding
- 4) Open cushion lid to up position
- 5) Pull back flap and apply velcro to carpet
- 7) Pull side Velcro and apply to carpet
- 8) Snug and adjust velcro for a better fit

D) BACKREST COVER – 20 PORTION

 
- 1) Open zipper on cover
- 2) Slip cover over backrest and under seat belt and close zipper
- 3) Snug cover at back of storage compartment
- 4) Position adhesive backed Velcro supplied to align with velcro on cover and attach on top of plastic molding (see note 4 below)
- 5) With backrest down, open storage compartment
- 6) Position adhesive backed velcro supplied to inside of storage compartment to align with the velcro tabs on cover and attach. (see note 4 below)
- 7) Snug front cover to fit around the cup holder
- 8) Position adhesive backed velcro supplied to align with velcro on cover and attach to plastic molding. (see note 4 below)
- 9) Adjust all velcro to equalize tension

E) ARMREST / STORAGE COMPARTMENT LID COVER :


- 1) Open armrest / storage compartment
- 2) Slip cover over lid, with Velcro on back of lid
- 3) Snug cover on back corners with Velcro under lid.
- 4) Position adhesive backed velcro (supplied) on underside of lid to align with the velcro on cover and attach (see note 4 below)

NOTES:

1) SELF-LOCKING SUPER-GRIP® BUCKLE:

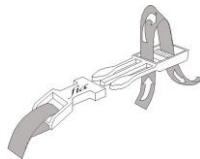

 - 2) HEAD REST REMOVAL:
- Press in side release buttons
 - Lift off

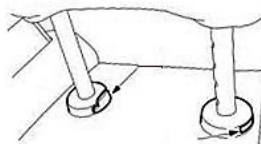

3) RE-INSTALLATION OF HEADRESTS

- Ensure pre-cut holes in seat cover align with holes in base.
- Replace headrests

- 4) BEFORE POSITIONING VELCRO, clean area with alcohol swab provided.

WARNING: DO NOT BLOCK AIR BAGS WHEN INSTALLING SEAT COVERS:

- 1) Seats with integrated seat airbags must be covered only with seat covers designed with openings. Make sure that the openings in the sides of the seat covers are positioned so that the seat covers do not block or interfere with the deployment of the air bag. The attached flap tucks inside the cutout and should be able to open freely in case of deployment.
- 2) Constantly check your seat covers to ensure they are properly positioned to allow for complete air bag deployment.

LIMITATION LIABILITY: The manufacturer shall not be liable for any damages or for the breach of any warranty, express or implied, whether of merchantability or fitness for any purpose or otherwise, or for any other obligation or liability arising out of the installation of the seat covers or the movement of the seat covers after installation.



Fia Inc. Winnipeg, Canada R3L 0N3 Telephone (204) 475-0515 Toll-Free: 1-800-835-0438
Fax: (204) 284-8246 E-Mail: info@gofia.com Website: www.gofia.com