

# INSTALLATION INSTRUCTIONS

### 2021+ FORD BRONCO ROOF LINE SR MOUNT KIT



#### PRODUCTS INCLUDE:

- (2) MOUNTS #46723
- \*Lights sold seperately.

#### **RECOMMENDED TOOLS:**

- T30 Torx bit
- 10mm Socket

- 7/16" Socket
- Philips Screw Driver

#### **IMPORTANT**

THANK YOU FOR PURCHASING RIGID INDUSTRIES' PRODUCTS FOR YOUR VEHICLE.

Please read through all of these Instructions and tips before proceeding with the installation. We do our best to provide a simple installation process for all applications however a professional installation is always recommended.

Always disconnect any power sources connected to your vehicle before servicing fuses or electrical systems.

#### STEP: 1

Remove the factory stud covers above the windshield. Pry the rear of the covers to remove.





# FIG INSTALLATION INSTRUCTIONS

#### STEP: 2

After the cover has been removed, proceed to remove the two flanged nuts on each side with a 10mm socket.







### STEP: 3

Install the rubber isolators as shown.



### STEP: 4


Assemble the brackets with the correct cover. Use the supplied self tapping screws(8X included) with a Phillips screwdriver.



#### STEP: 5

Using the supplied flange nuts, attach the assembly to the vehicle using a 10mm socket. Tighten to 10 Nm (88.5in-lbs).



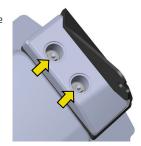

# FIG INSTALLATION INSTRUCTIONS

### STEP: 6

Install stud caps into the covers using some firm pressure for a press fit.



#### STEP: 7

Once the brackets assemblies have been installed, the light bar can be mounted. Black washers are included with the vehicle specific mounting kit in place of the chrome stainless washer.



#### STEP: 8

Afterwards, install the rubber cover on the studs on each end of the light bar.






## **FIGURE INSTALLATION INSTRUCTIONS**

#### STEP: 9

Recommended routing for wiring is along the top edge of the roof line. Peel back the rubber seal for wire routing.



#### **STEP: 10**

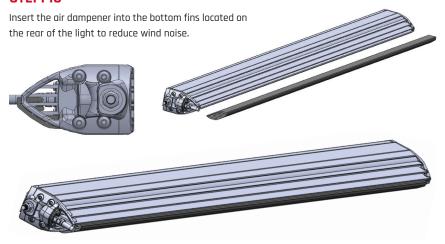

Wiring: Wire your lights according to the instructions included with the light. Take care to avoid any heat sources and sharp or abrasive surfaces.

> Your installation is now complete. Welcome to the Rigid Nation!

#### WARRANTY INFORMATION