13345


KIA SEDONA / HYUNDAI ENTOURAGE

(FITS LONG WHEEL BASE ONLY! 119")

08/07/2020

GROSS LOAD CAPACITY WHEN USED AS A WEIGHT CARRYING HITCH: $3,500\,$ LBS. TRAILER WEIGHT & $350\,$ LBS. TONGUE WEIGHT. GROSS LOAD CAPACITY WHEN USED AS A WEIGHT DISTRIBUTION HITCH: $4,000\,$ LBS. TRAILER WEIGHT & $400\,$ LBS. TONGUE WEIGHT

DO NOT EXCEED VEHICLE MANUFACTURER'S RECOMMENDED TOWING CAPACITY.

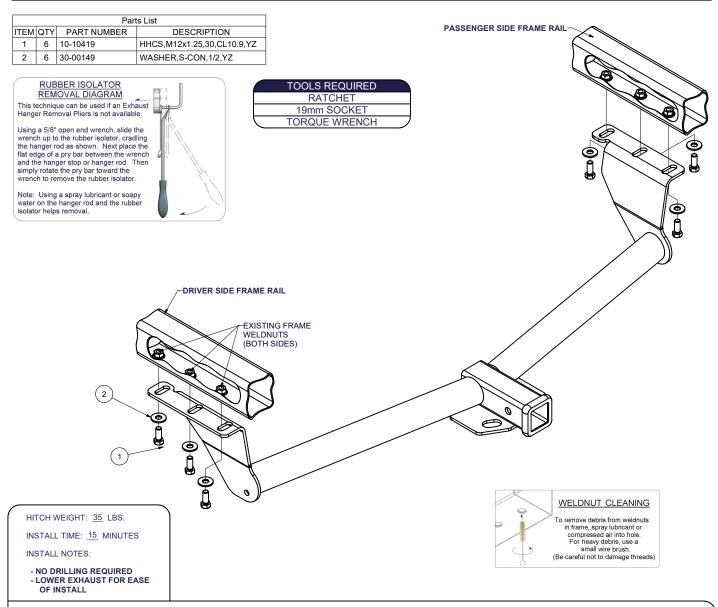

INSTALLATION STEPS

- 1) Remove the exhaust from it's hangers to provide access to frame fastener locations.
- 2) Raise hitch on the passenger side over exhaust pipe and rotate hitch into position.
- 3) Secure hitch by loosely installing all (6) 12mm hex bolts and (6) conical washers as shown.
- 4) Push hitch forward against installed bolts.
- 5) Torque all 12mm fasteners to 86 ft-lb.
- 6) Re-attach previously removed exhaust hangers.

PERIODICALLY CHECK THIS RECEIVER HITCH TO ENSURE THAT ALL FASTENERS ARE TIGHT AND THAT ALL STRUCTURAL COMPONENTS ARE SOUND.

Curt Manufacturing Inc., warrants this product to be free of defects in material and/or workmanship at the time of retail purchase by the original purchaser. If the product is found to be defective, Curt Manufacturing Inc., may repair or replace the product, at their option, when the product is returned, prepaid, with proof of purchase. Alteration to, misuse of, or improper installation of this product voids the warranty. Curt Manufacturing Inc.'s liability is limited to repair or replacement of products found to be defective, and specifically excludes liability for incidental or consequential loss or damage.