




EGR

INSTALLATION INSTRUCTIONS

Tools Required

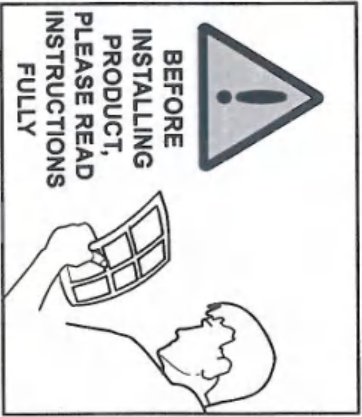

MADE IN USA

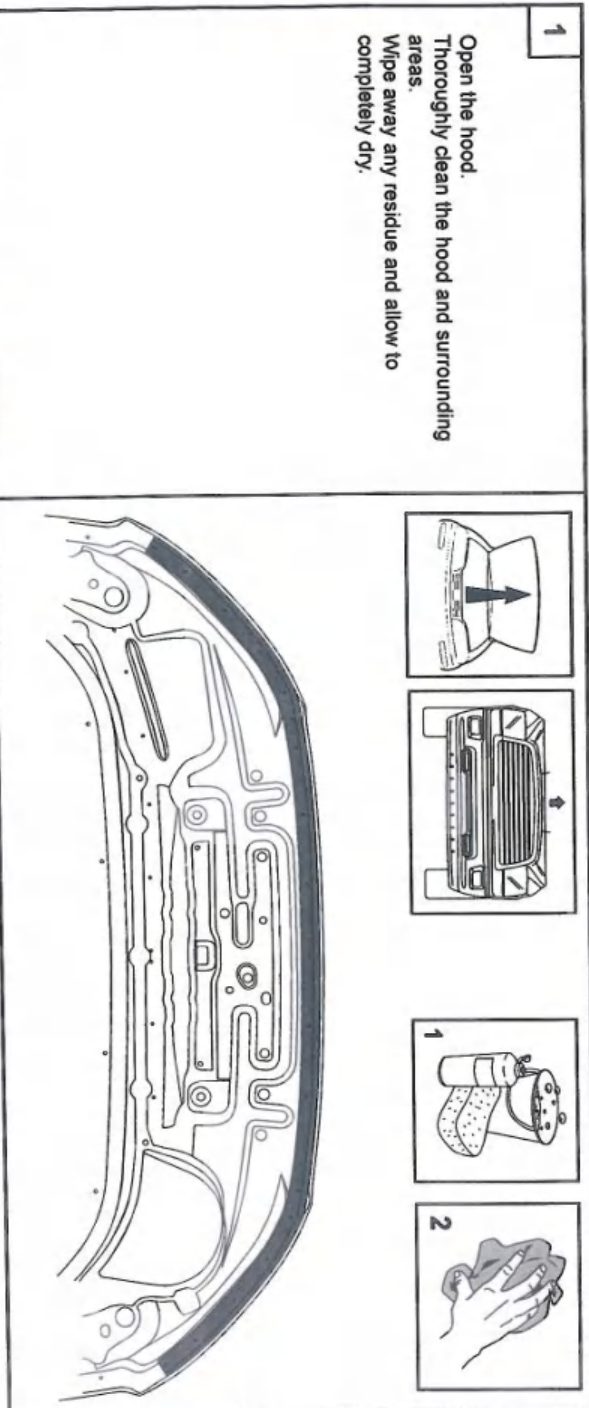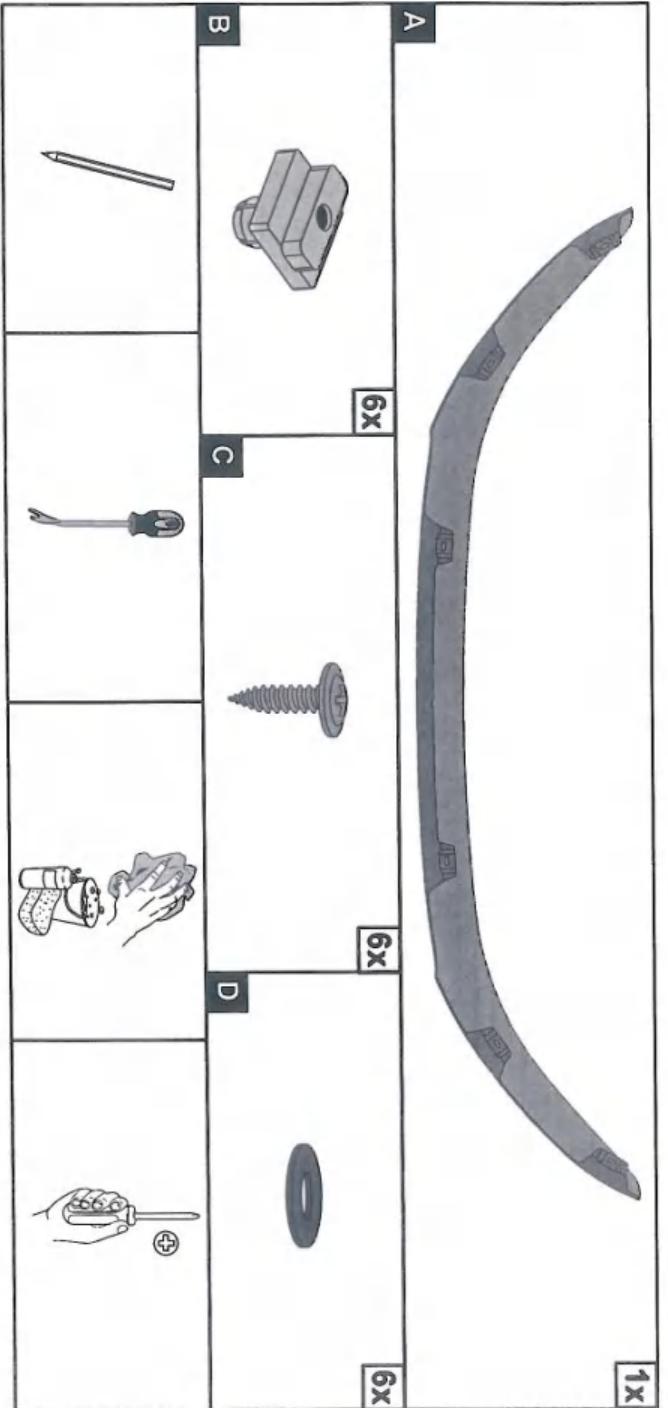


SUP523 11-23-2018

EGR

INSTALLATION INSTRUCTIONS


2

Trifold fit the Hood Deflector centrally onto the hood, align the front edge of the Hood Deflector with the hood lip.
Note where the six slots on the tags correspond to the screws on the underside of the hood.

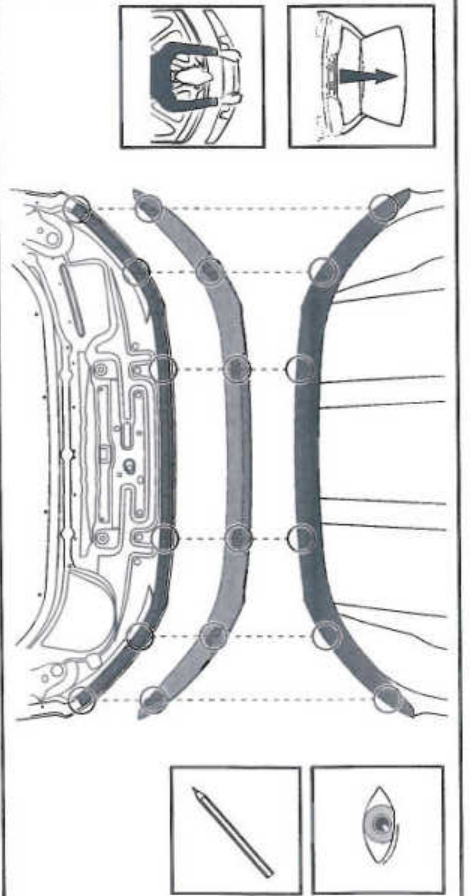


3

At the previously noted screw locations carefully remove the screws attaching the hood seal and discard.

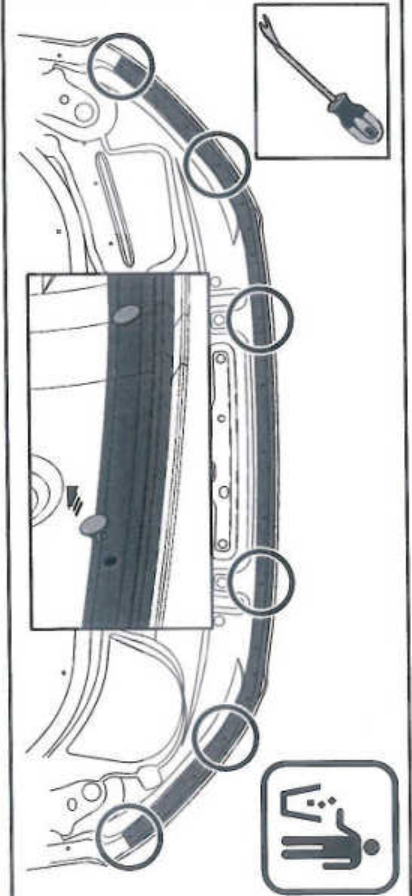

4

Gently peel back the rubber seal and insert a screw plug into the vacant holes in the underside of the hood.

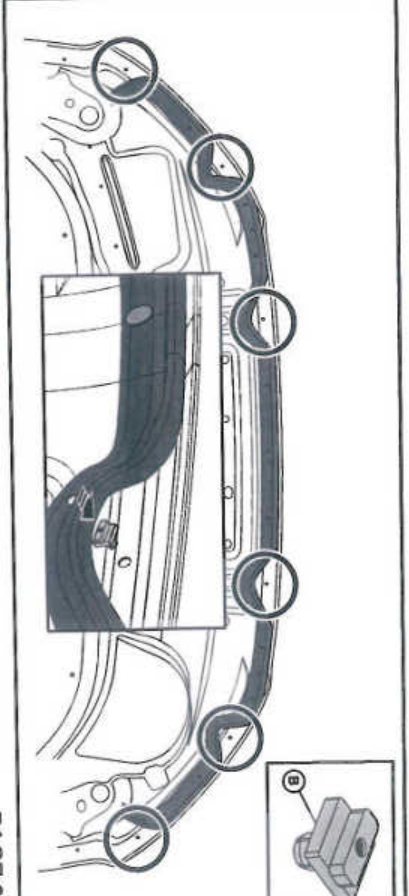

EGR

INSTALLATION INSTRUCTIONS

5

Fit the Hood Deflector and align the slots in the tags with the plugs in the hood. Ensure the rectangular boss on the plug is nested into the slot.

6

Insert the six self tapping screws and washers into the plugs and secure the Hood Protector to the hood. Return the rubber seal back to its original position over the hood protector tags.

7

Re-check and ensure that the Hood Deflector is centered on the hood. Wash the Hood Deflector and surrounding areas.