






# INSTALLATION INSTRUCTIONS


## Tools Required



BEFORE  
INSTALLING  
PRODUCT,  
PLEASE READ  
INSTRUCTIONS  
FULLY



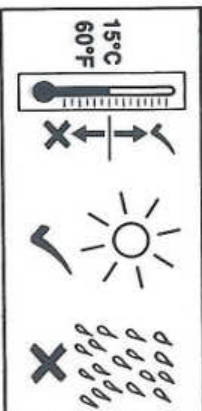
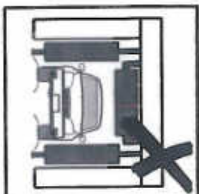
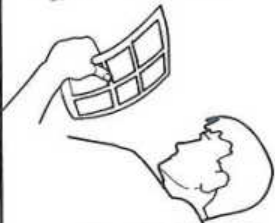


MADE IN USA

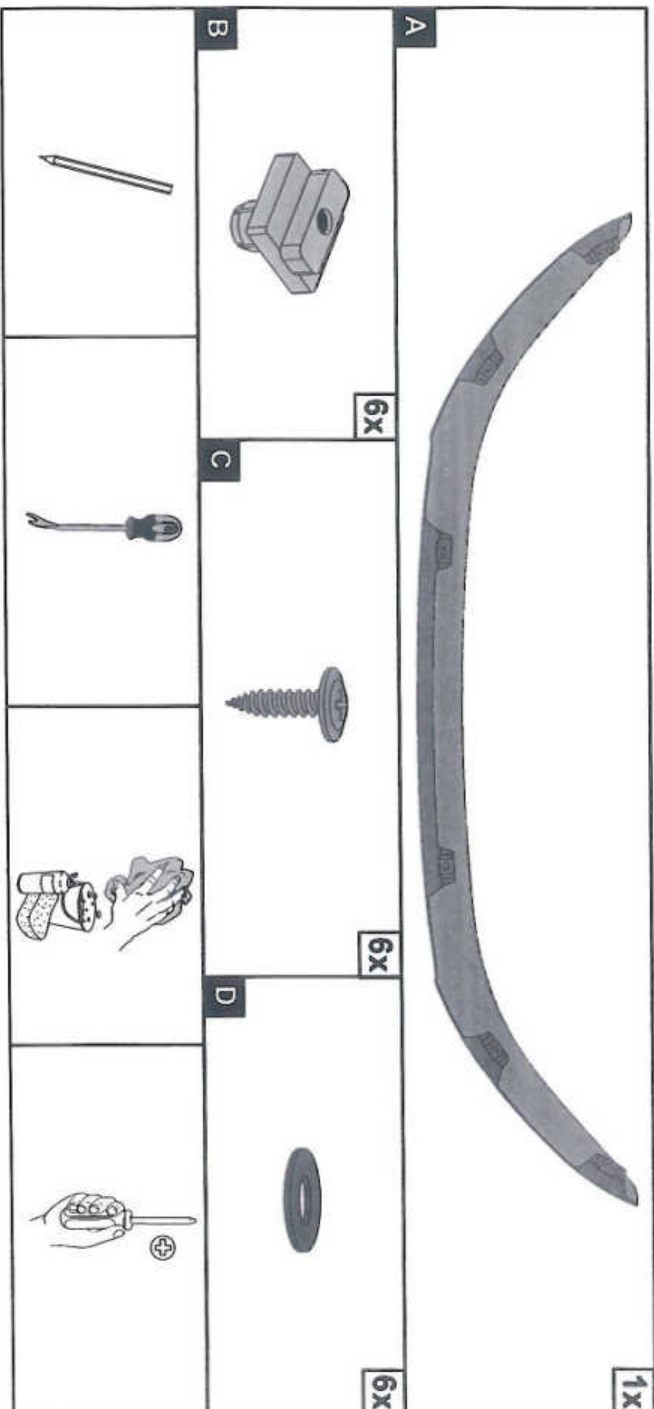

1

Open the hood.  
Thoroughly clean the hood and surrounding  
area.  
Wipe away any residue and allow to  
completely dry.

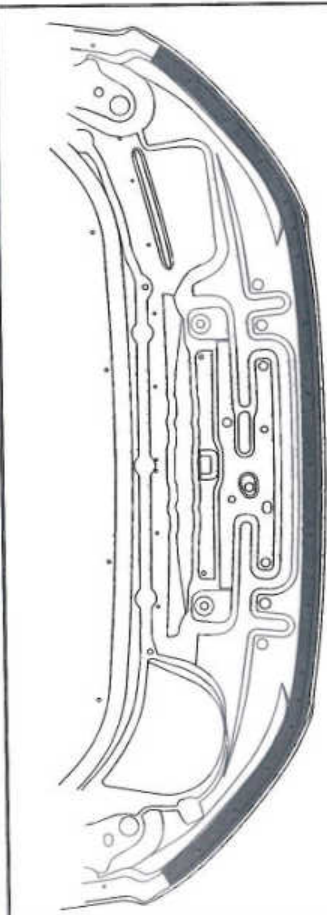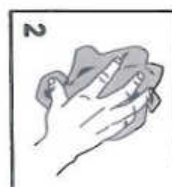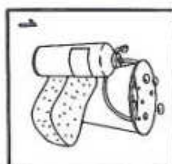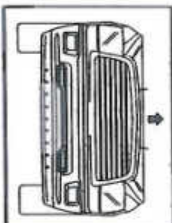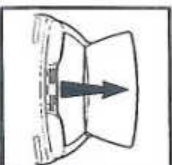




# EGR

## INSTALLATION INSTRUCTIONS

2


Trial fit the Hood Deflector centrally onto the hood, align the front edge of the Hood Deflector with the hood lip.

Note where the six slots on the tags correspond to the scrives on the underside of the hood.

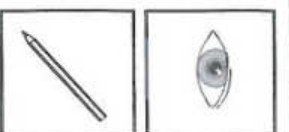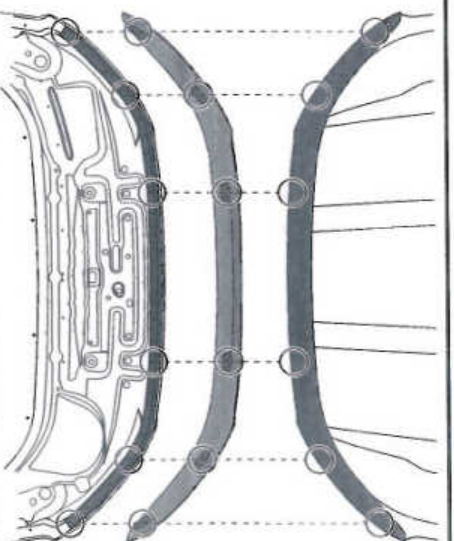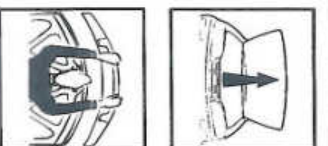


3

At the previously noted scrivet locations carefully remove the scrives attaching the hood seal and discard.

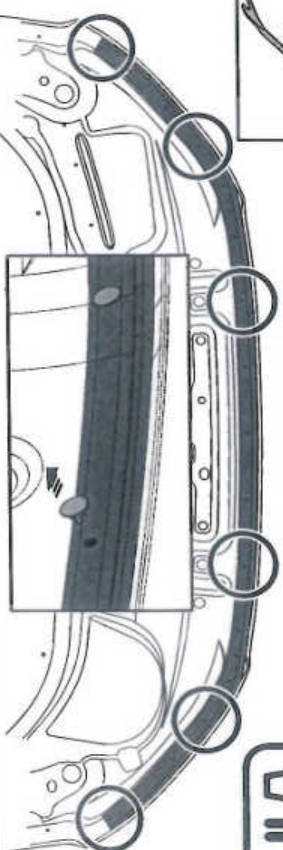

4

Gently peel back the rubber seal and insert a screw plug into the vacant holes in the underside of the hood.

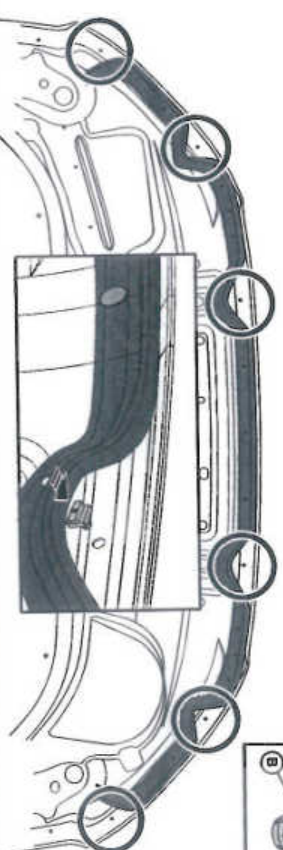


# EGR

## INSTALLATION INSTRUCTIONS

5


Fit the Hood Deflector and align the slots in the tags with the plugs in the hood.  
Ensure the rectangular boss on the plug is nested into the slot.

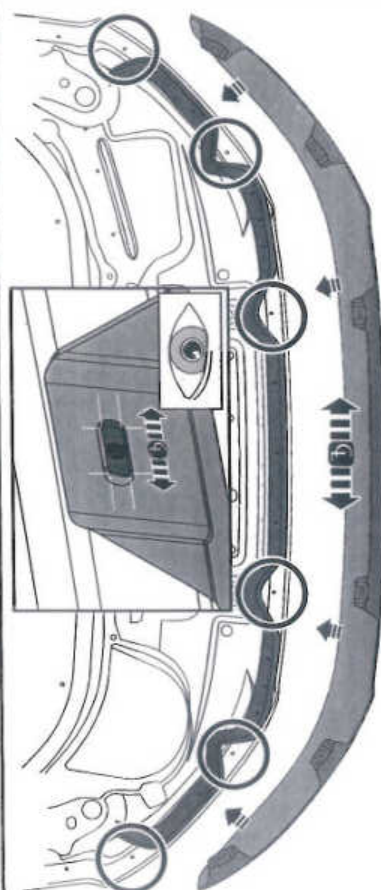

6

Insert the six self tapping screws and washers into the plugs and secure the Hood Protector to the hood.

Return the rubber seal back to its original position over the hood protector tags.

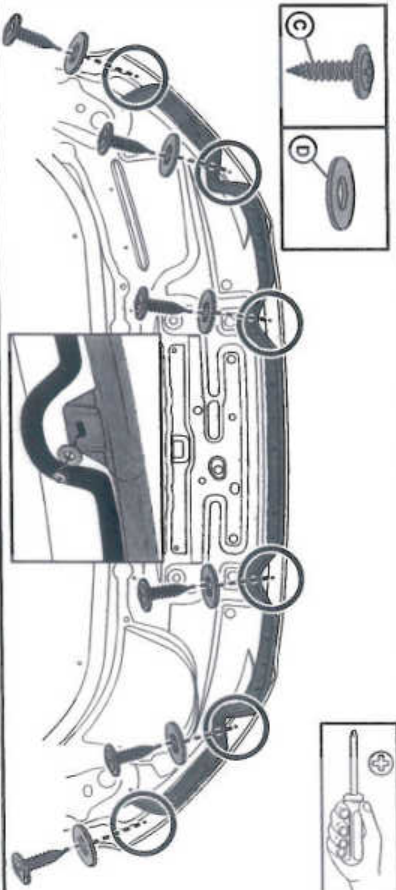

7

Re-check and ensure that the Hood Deflector is centered on the hood.

Wash the Hood Deflector and surrounding areas.

