



STEP SEVEN

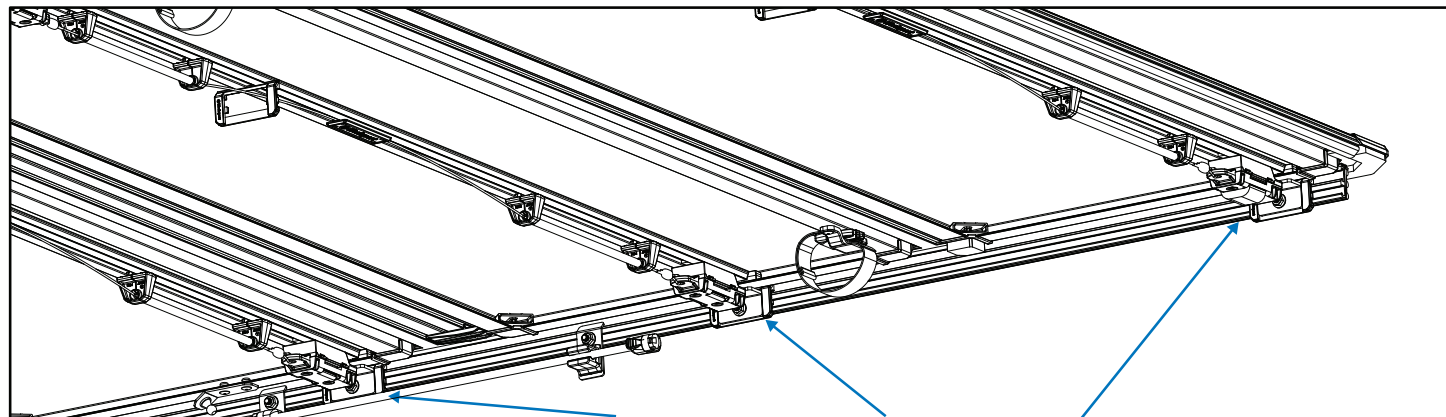


1. If needed loosen the 10mm nuts on the strikers aligning them with the slam latches and retighten the nuts. Striker should sit on the quick latches when in a rested position, align vertically as needed.

STEP EIGHT

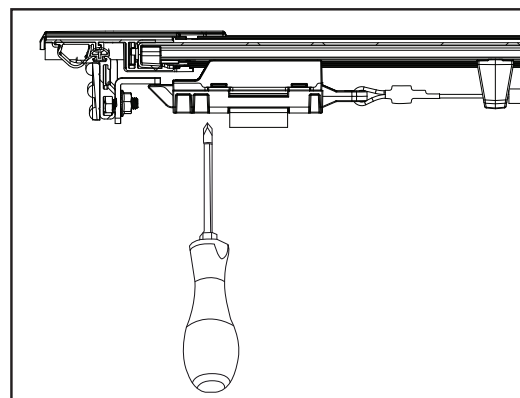


1. Completely fold and unfold the tonneau cover a couple of times to make sure it functions properly.

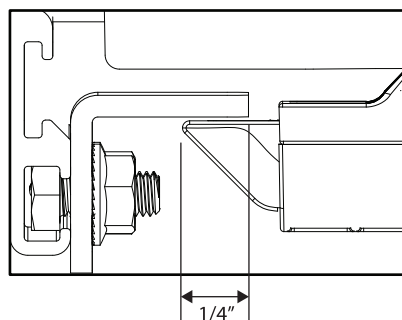

If needed, adjust the position of the quick latches using a #2 Phillips screwdriver. Loosen both screws and slide the quick latch to engage the striker approximately 6mm (1/4"). Tighten screws securely.

STEP NINE

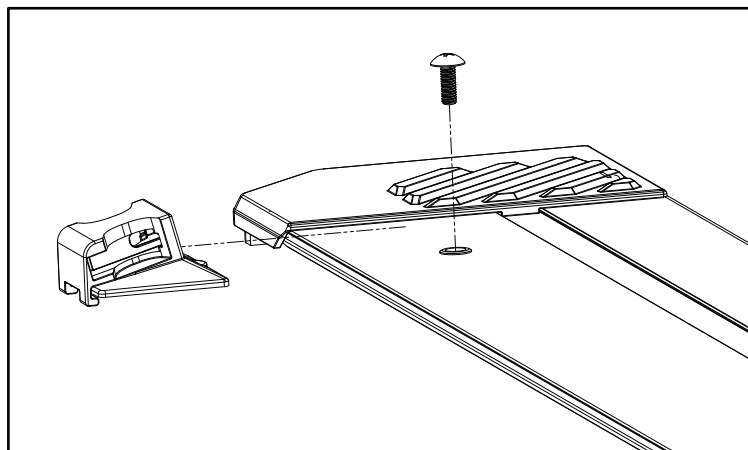


1. Install the female buckles by hooking the buckle ears under the front panel and then secure it with the provided screws

Worksport's AL4 comes with all the features you would expect in a quality tonneau cover and is proudly designed, manufactured, and stocked in the USA with domestic and imported parts and offer free, same-day shipping on most of our products.

Hardware Kit 102962:

- 1) 1 X #100860 Bulkhead Wall Seal
- 2) 1 X #100378 Hex Wrench
- 3) 2 X #102867 Female Buckle Kit
- 4) 1 X #102866 Retention Knob Assembly Kit
- 5) 1 X #102961 Retainer Bracket Kit
- 6) 1 X #102118 Nut Install Tool

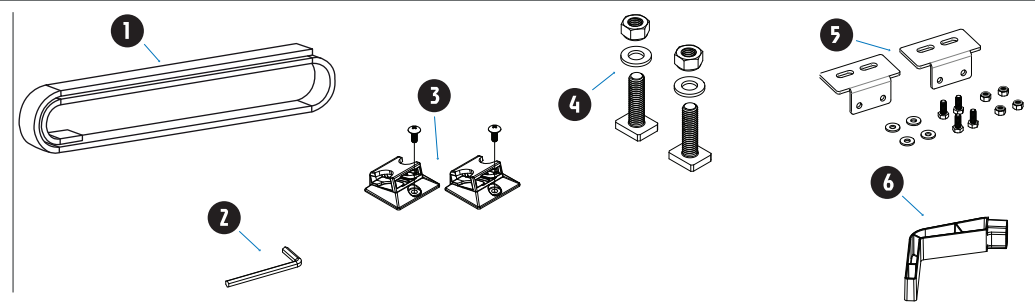


Tools Required:

Utility Knife

No. 2 Phillips Head Screwdriver



10mm & 13mm Socket or Wrench

Rails:

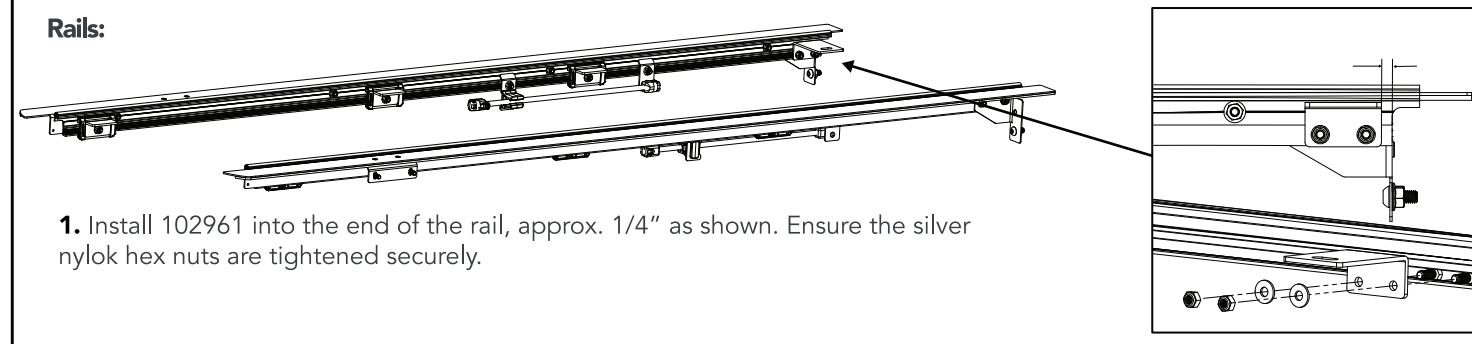

1. Install 102961 into the end of the rail, approx. 1/4" as shown. Ensure the silver nylok hex nuts are tightened securely.


STEP ONE

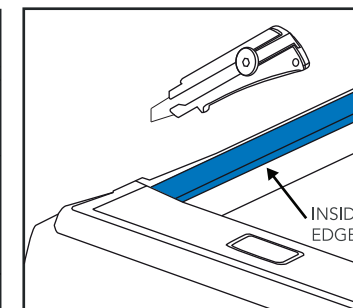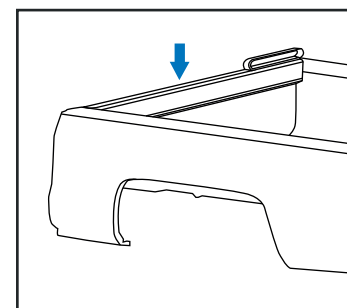


1. Clean the bulkhead wall of your truck bed (recommend alcohol) and allow to dry. Apply the adhesive foam seal to the inside edge of the bulkhead.

2. Ensure there is no gap between the seal and the plastic side caps of the bed. Trim any excess material flush using a knife.

STEP TWO

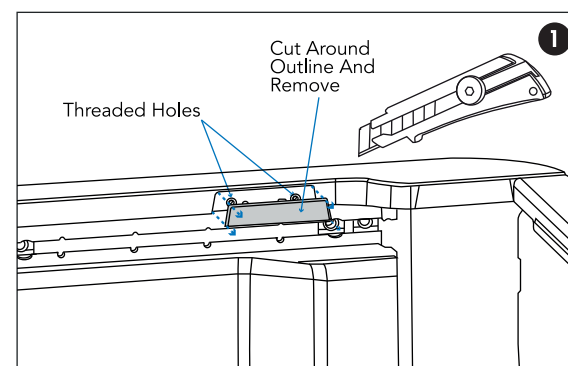


1. Using a utility knife, carefully cut the plastic bed rail caps to expose threaded holes

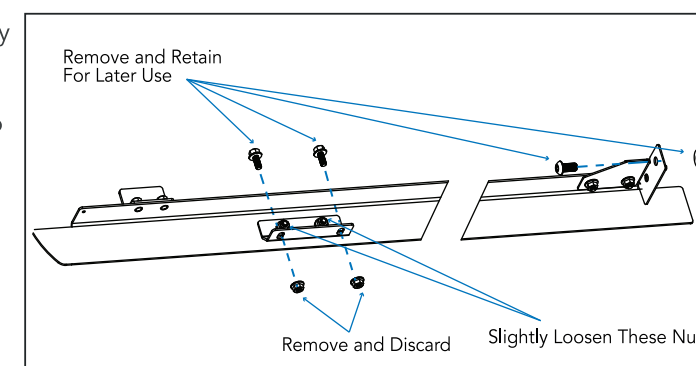


NOTE: There are two types of bulkhead holes in the beds. Identify which type you have.
Type A has an M8 threaded hole on the bottom and the upper hole is round or oval.
Type B has no M8 threaded hole and the upper hole is hexagon shaped.


STEP TWO (CONT.)

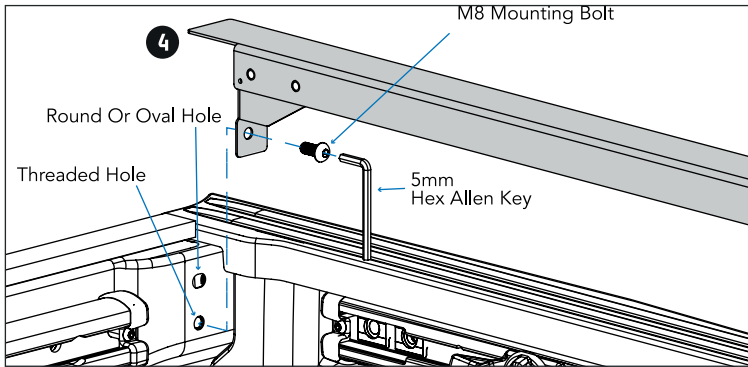


1. Install adapter rails using the mounting bolts. Do not fully tighten the bolt using the hex key.

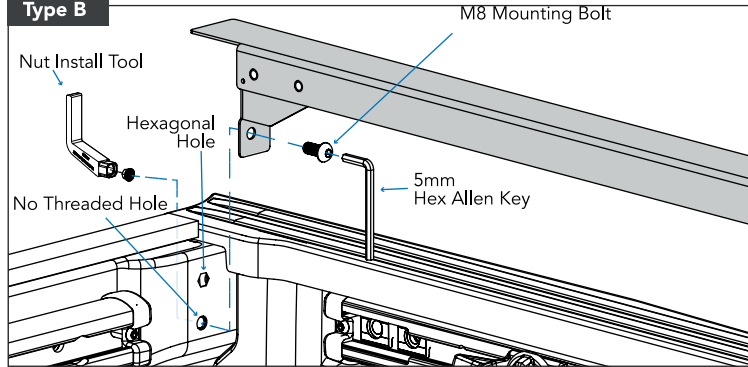

1. Press hex nut into the end of the install tool.
2. Carefully insert the install tool between the cab and the bed and align the hex nut with the lower hole in the bulkhead.
3. Align the rail hole with the hole in the bed and insert the M8 mounting bolt.
4. Thread the M8 mounting bolt into the hex nut while holding the install tool.
5. Remove the install tool.


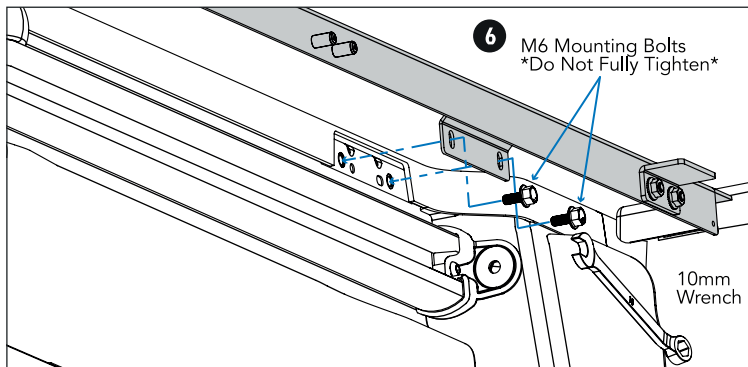


6. Align the rear adapter rail bracket with the threaded holes in the truck bed. Install the 2 M6 hex head mounting bolts but do not fully tighten.

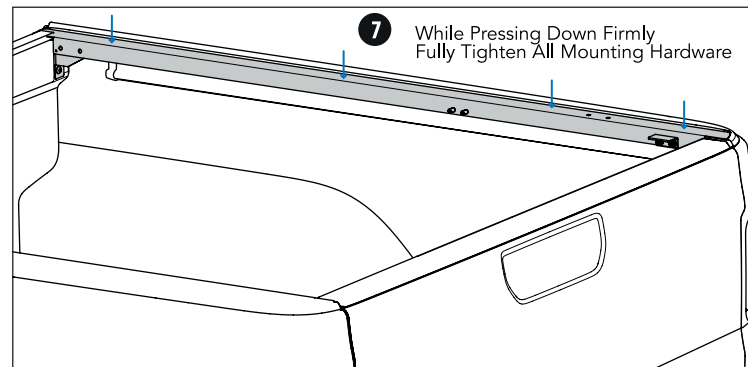


7. While holding the adapter rail firmly in place, tighten the rear hex head bolts using a 10mm wrench.
8. When completed, adapter rails should be completely sealed against the top surface of the truck bed caps.

STEP THREE

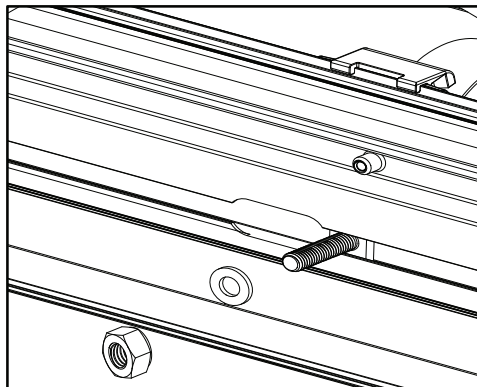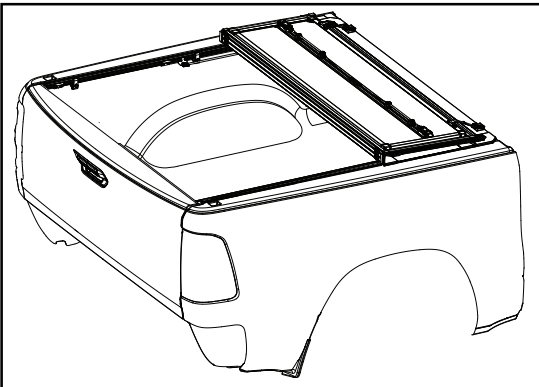


1. With assistance, take the tonneau cover from the box and place it near the bulkhead of the truck.
2. Unfold the small panel from the stack, insert retainer bolts in each side of the panel.
3. Remove the retainer nut and washer from the assembly.
4. At this time, install the front buckle from the kit with provided screws.

STEP FOUR

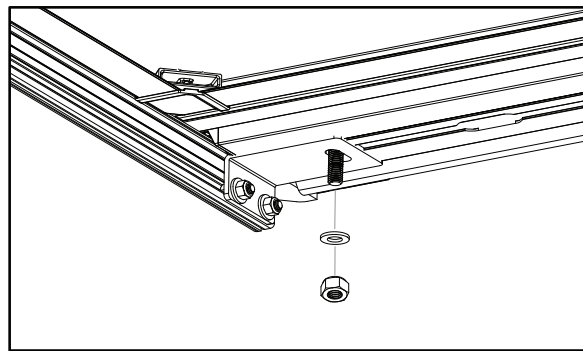


1. Fold the small front panel down, inserting the bolt into the retainer slot of the bracket mounted to the rail.
2. Put the washer and retainer nut back on the bolt, but leave it loose.

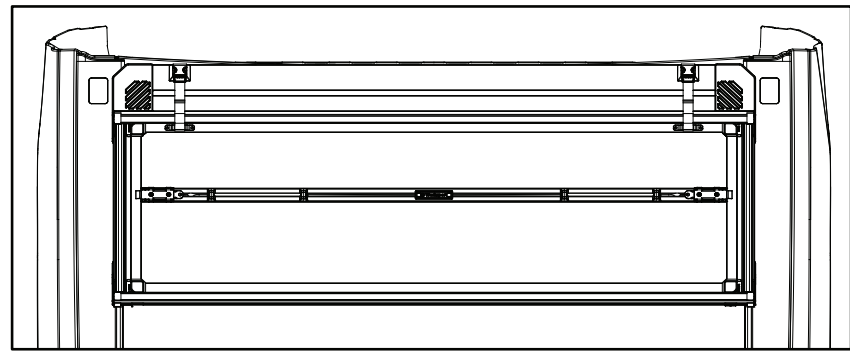

3. Align the tonneau cover on the bulkhead to the truck bed evenly spaced over the truck bed rails.
4. Ensure that the bulkhead seals are properly sitting on the previously applied adhesive foam seal.

STEP FIVE

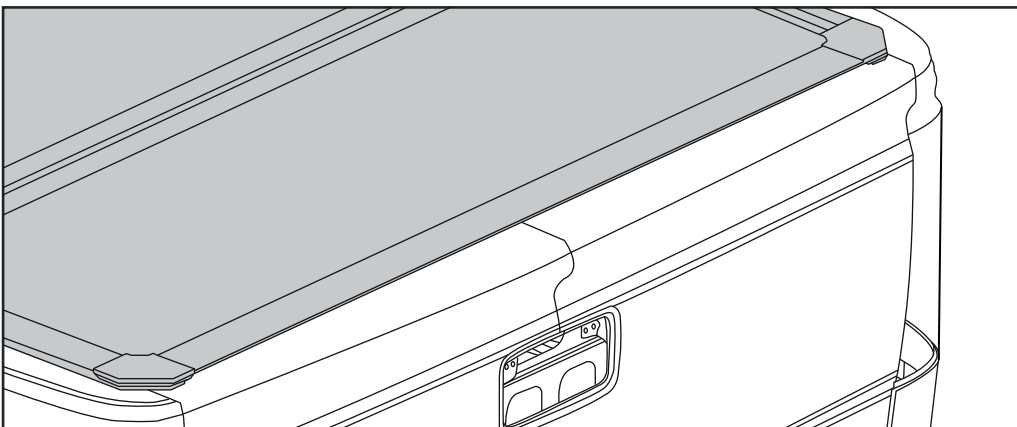


1. Close the tailgate and completely unfold the cover to check if it properly aligns on the tailgate.

2. Move the cover to the front and back or left and right as required to ensure it's evenly spaced and sealing on the truck bed.

Once the cover is correctly situated, fold it gently open so the tonneau does not move from the aligned position.

STEP SIX

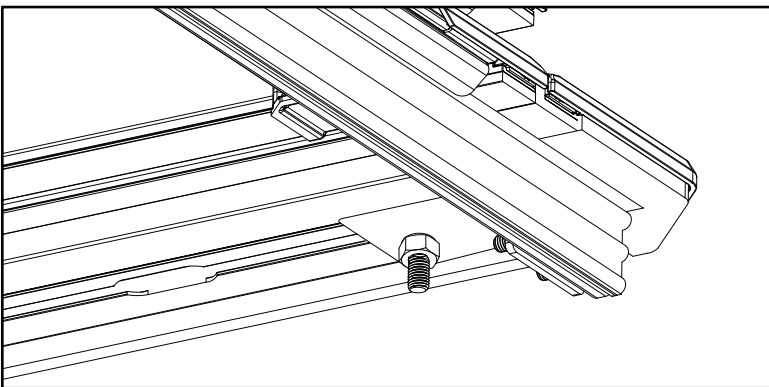

1. Tighten the nut on both sides down snugly.
2. Unfold the cover and ensure that everything remained aligned. If anything appears misaligned, repeat earlier steps.