



STEP EIGHT

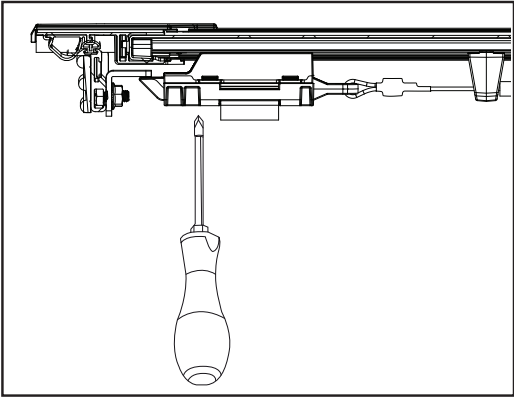


1. Completely fold and unfold the tonneau cover a couple of times to make sure it functions properly.

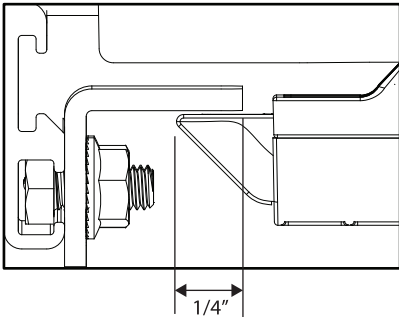

If needed, adjust the position of the quick latches using a #2 Phillips screwdriver. Loosen both screws and slide the quick latch to engage the striker approximately 6mm (1/4"). Tighten screws securely.


STEP NINE

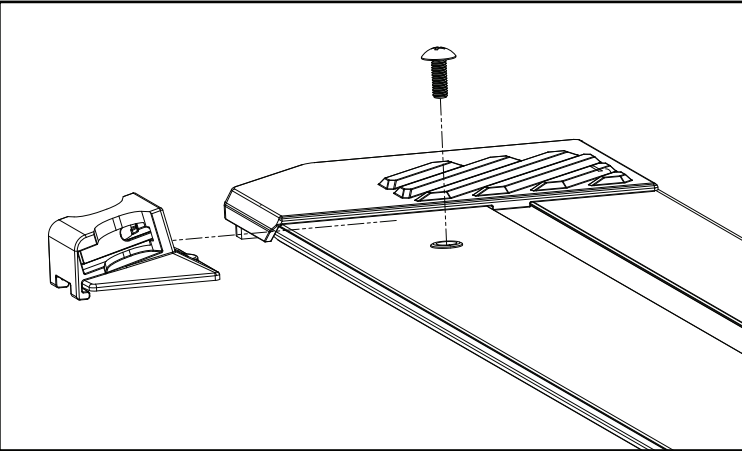

1. Install the female buckles by hooking the buckle ears under the front panel and then secure it with the provided screws

Hardware Kit 102868:

- 1) 1 X #102840 Bulkhead Wall Seal
- 2) 1 X #101909 Clamp Kit
- 3) 2 X #102867 Female Buckle Kit
- 4) 1 X #102866 Retention Knob Assembly Kit
- 5) 1 X #102956 Retainer Bracket Kit

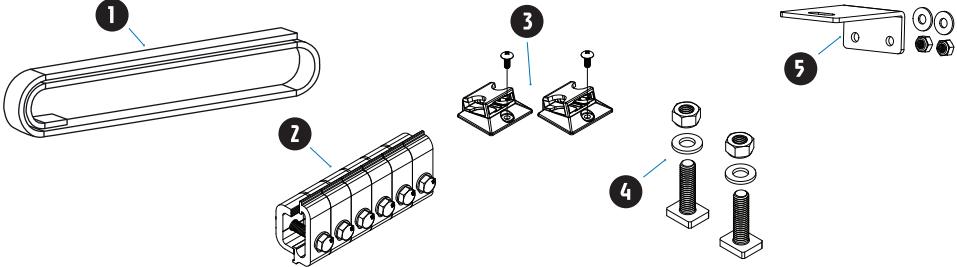


Tools Required:

- Utility Knife
- No. 2 Phillips Head Screwdriver
- 10mm & 13mm Socket or Wrench



Rails:



1. Install 102956 into the end of the rail, approx. 1/4" as shown. Ensure the silver nylok hex nuts are tightened securely.

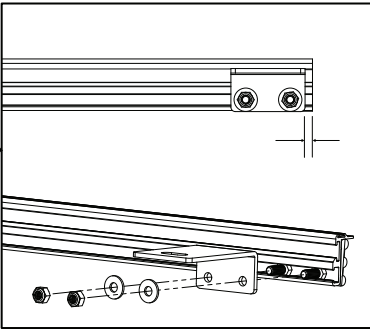


STEP ONE

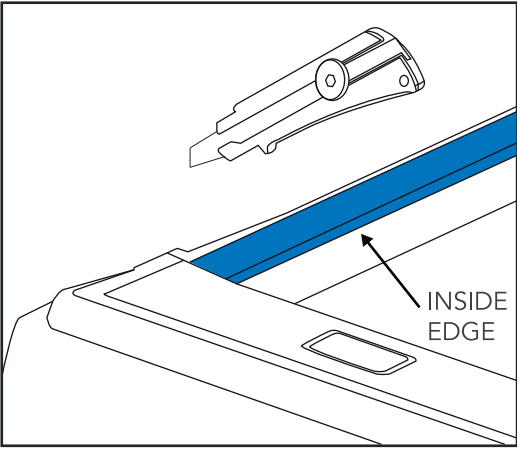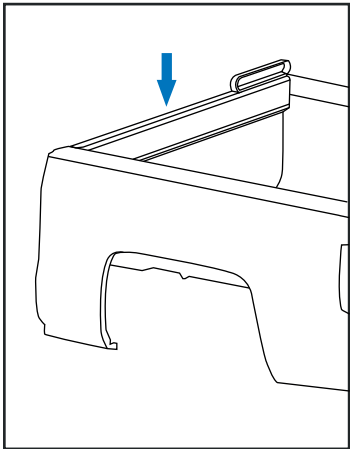



- 1. Clean the bulkhead wall of your truck bed (recommend alcohol) and allow to dry. Apply the adhesive foam seal to the inside edge of the bulkhead.
- 2. Ensure there is no gap between the seal and the plastic side caps of the bed. Trim any excess material flush using a knife.

STEP TWO

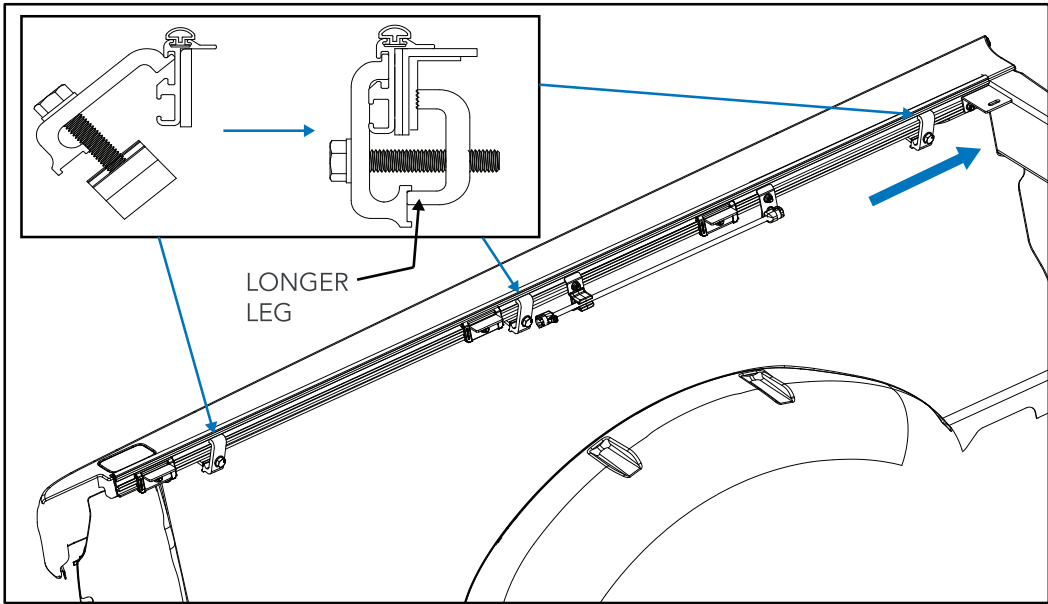


*The longer leg with the smooth face goes down and intersects with the mating clamps

STEP THREE

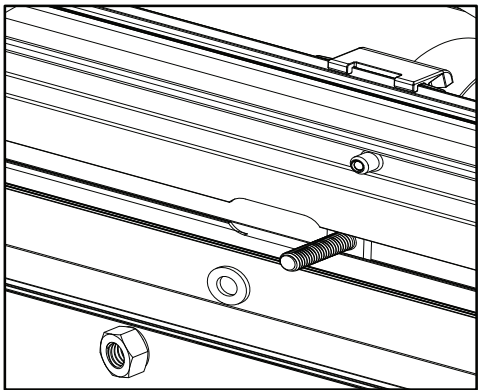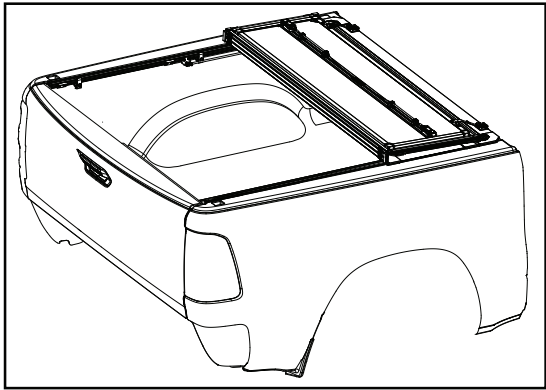


- 1. With assistance, take the tonneau cover from the box and place it near the bulkhead of the truck.
- 2. Unfold the small panel from the stack, insert retainer bolts in each side of the panel.
- 3. Remove the retainer nut and washer from the assembly.
- 4. At this time, install the front buckle from the kit with provided screws.

STEP FOUR

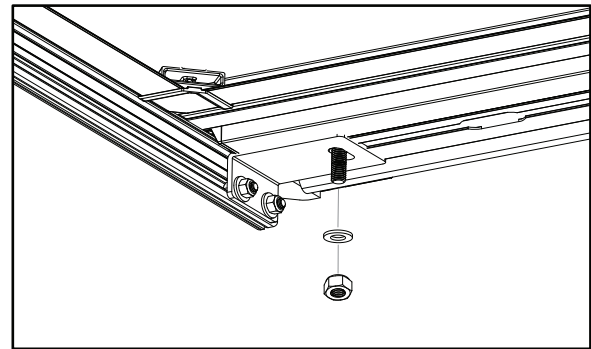


- 1. Fold the small front panel down, inserting the bolt into the retainer slot of the bracket mounted to the rail.
- 2. Put the washer and retainer nut back on the bolt, but leave it loose.

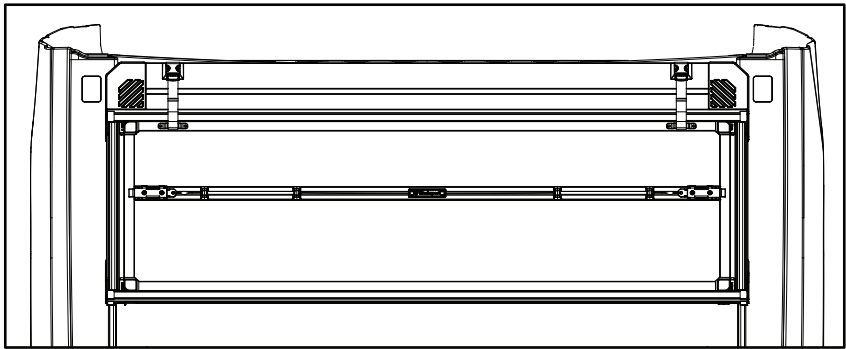


- 3. Align the tonneau cover on the bulkhead to the truck bed evenly spaced over the truck bed rails.
- 4. Ensure that the bulkhead seals are properly sitting on the previously applied adhesive foam seal.

STEP FIVE

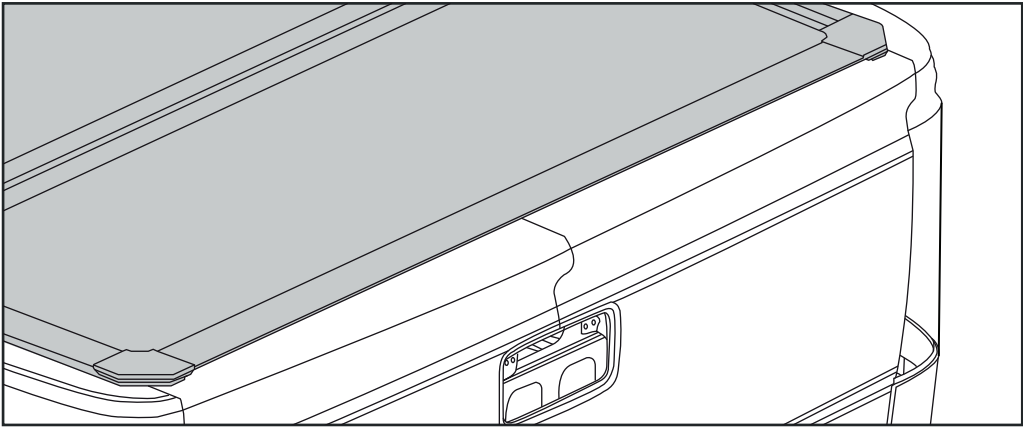


- 1. Close the tailgate and completely unfold the cover to check if it properly aligns on the tailgate.
 - 2. Move the cover to the front and back or left and right as required to ensure it's evenly spaced and sealing on the truck bed.
- Once the cover is correctly situated, fold it gently open so the tonneau does not move from the aligned position.

STEP SIX

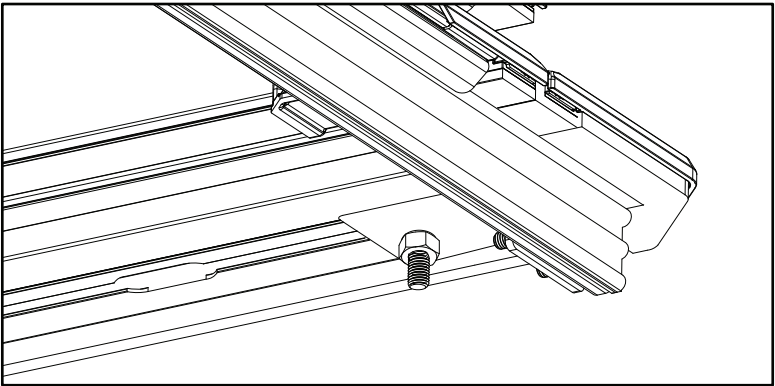

- 1. Tighten the nut on both sides down snugly.
- 2. Unfold the cover and ensure that everything remained aligned. If anything appears misaligned, repeat earlier steps.

STEP SEVEN

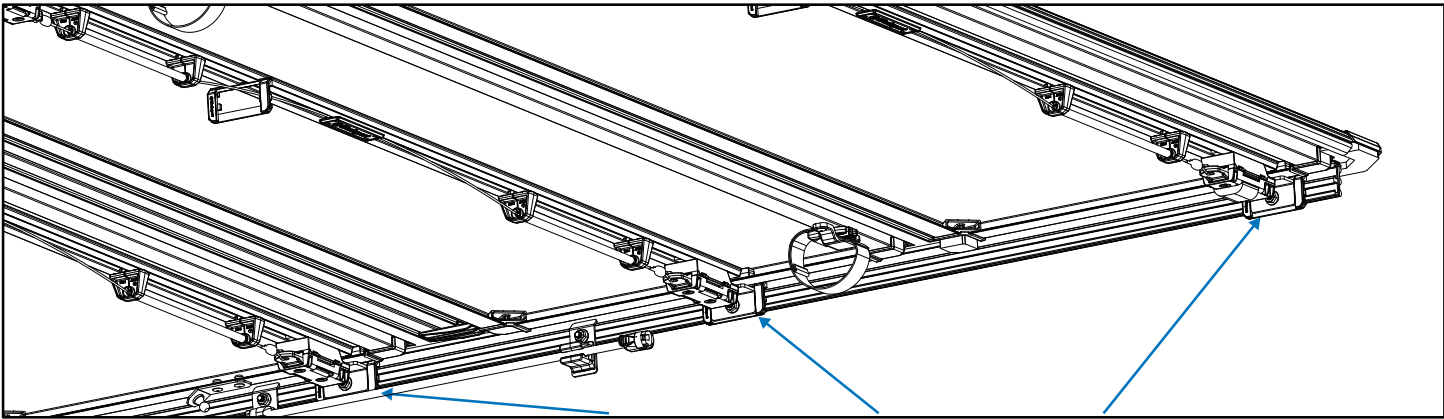

- 1. If needed loosen the 10mm nuts on the strikers aligning them with the slam latches and retighten the nuts. Striker should sit on the quick latches when in a rested position, align vertically as needed.