



STEP SEVEN

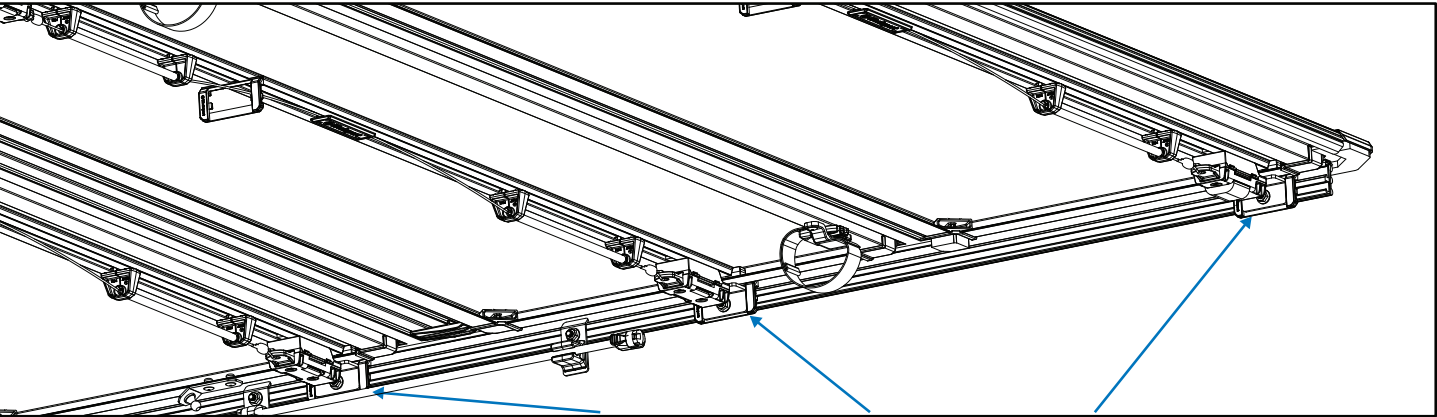


1. If needed loosen the 10mm nuts on the strikers aligning them with the slam latches and retighten the nuts. Striker should sit on the quick latches when in a rested position, align vertically as needed.

STEP EIGHT

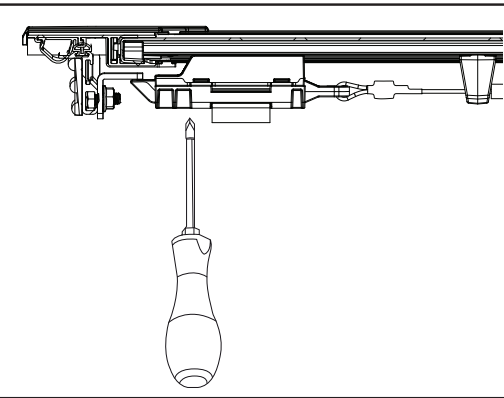


1. Completely fold and unfold the tonneau cover a couple of times to make sure it functions properly.

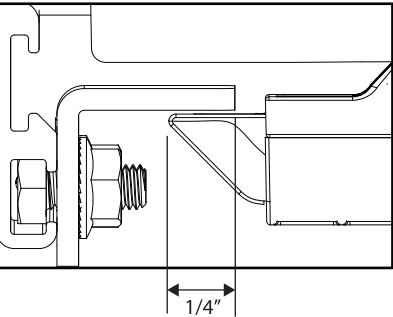

If needed, adjust the position of the quick latches using a #2 Phillips screwdriver. Loosen both screws and slide the quick latch to engage the striker approximately 6mm (1/4"). Tighten screws securely.

STEP NINE

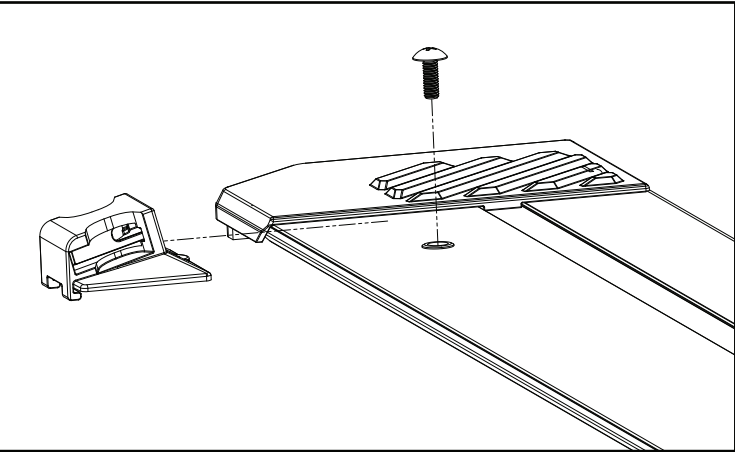


1. Install the female buckles by hooking the buckle ears under the front panel and then secure it with the provided screws

Workspport's AL4 comes with all the features you would expect in a quality tonneau cover and is proudly designed, manufactured, and stocked in the USA with domestic and imported parts and offer free, same-day shipping on most of our products.

Hardware Kit 103066:


- 1) 1 X #100859 Bulkhead Wall Seal
- 2) 1 X #103067 Mounting Kit
- 3) 2 X #102867 Female Buckle Kit
- 4) 1 X #102866 Retention Knob Assembly Kit
- 5) 1 X #102956 Retainer Bracket Kit

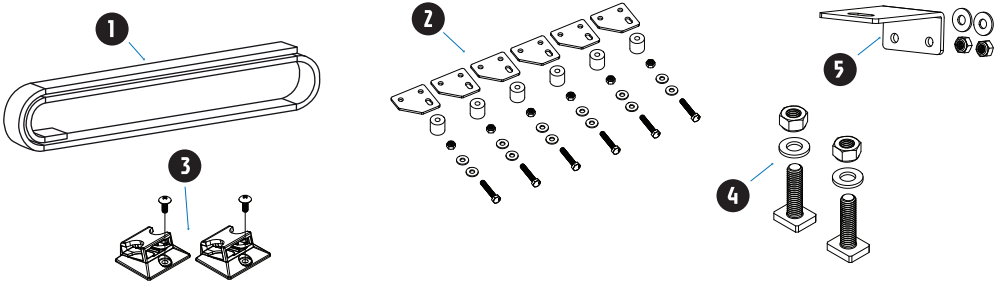

Tools Required:


- Utility Knife
- No. 2 Phillips Head Screwdriver
- 10mm & 13mm Socket or Wrench

Rails:

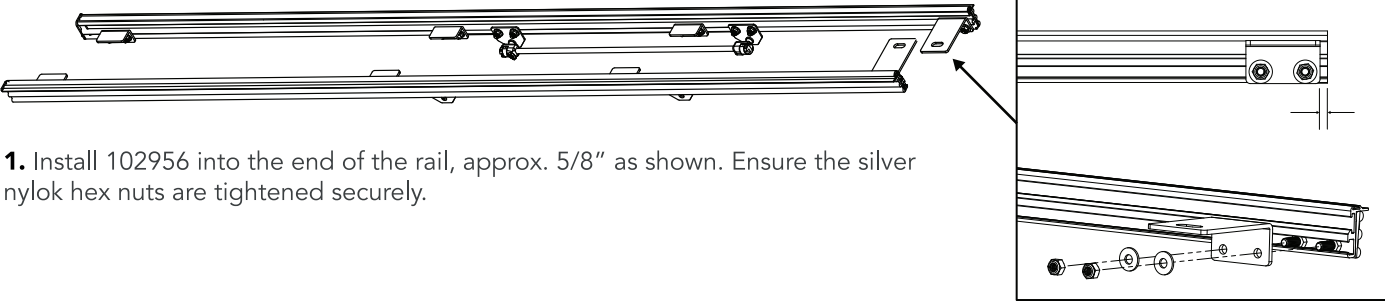


1. Install 102956 into the end of the rail, approx. 5/8" as shown. Ensure the silver nylok hex nuts are tightened securely.

STEP ONE

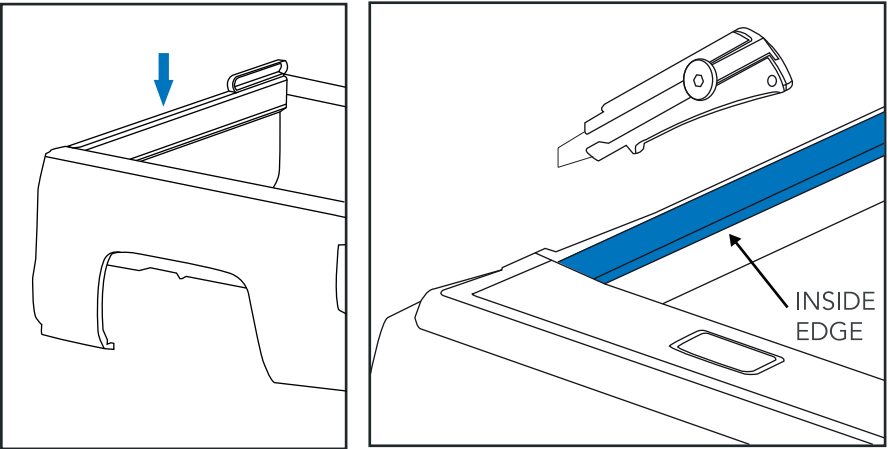

- 1. Clean the bulkhead wall of your truck bed (recommend alcohol) and allow to dry. Apply the adhesive foam seal to the inside edge of the bulkhead.
- 2. Ensure there is no gap between the seal and the plastic side caps of the bed. Trim any excess material flush using a knife.

STEP TWO

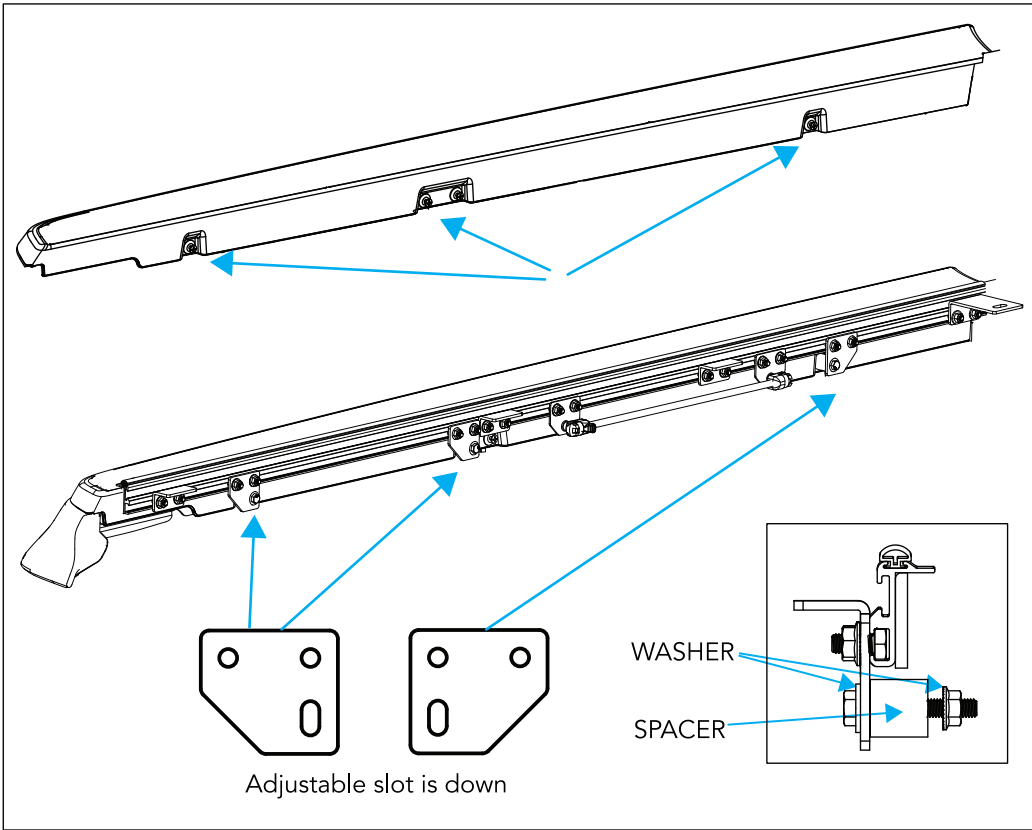


- 1. Remove the 3 screws and plastic inserts in the top photo.
- 2. Install the 3 brackets onto the rail prior to installing it on the truck. Leave them loosely attached at this time.

THE ORIENTATION OF EACH BRACKET IS IMPORTANT FOR SPACING PURPOSES.

PASSENGER IS MIRRORED.


- 3. Install the rail onto the truck bed. Order as shown, bolt, washer, bracket, spacer, truck flange, washer, nut.
- While pushing down and foward on the rail, tighten everything securely.**

STEP THREE

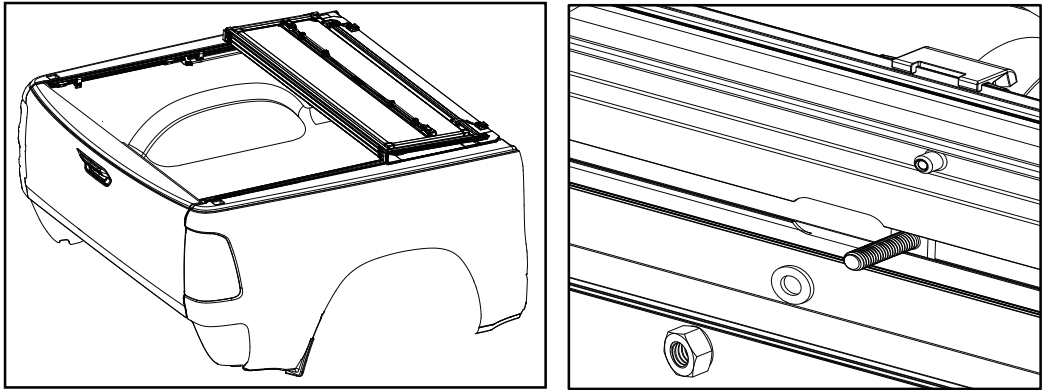


- 1. With assistance, take the tonneau cover from the box and place it near the bulkhead of the truck.
- 2. Unfold the small panel from the stack, insert retainer bolts in each side of the panel.
- 3. Remove the retainer nut and washer from the assembly.
- 4. At this time, install the front buckle from the kit with provided screws.

STEP FOUR

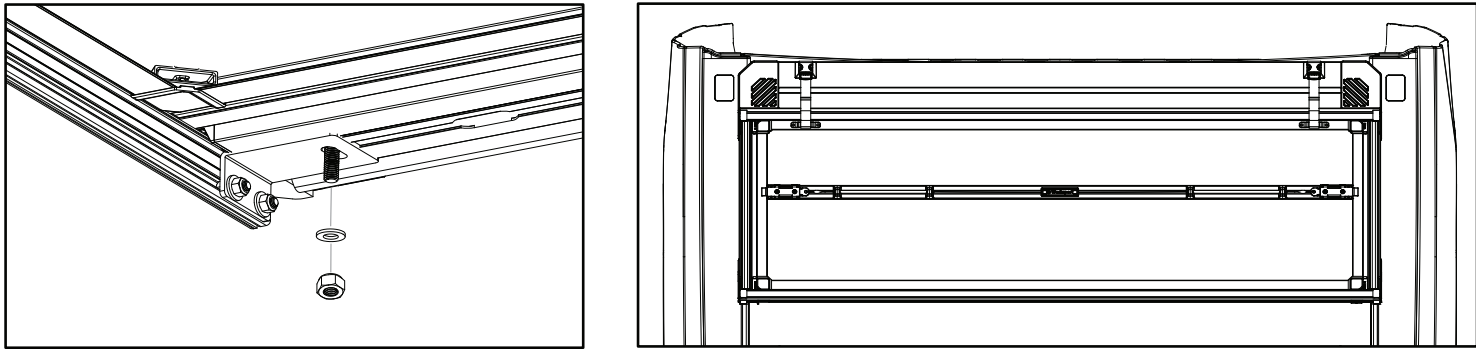


- 1. Fold the small front panel down, inserting the bolt into the retainer slot of the bracket mounted to the rail.
- 2. Put the washer and retainer nut back on the bolt, but leave it loose.
- 3. Align the tonneau cover on the bulkhead to the truck bed evenly spaced over the truck bed rails.
- 4. Ensure that the bulkhead seals are properly sitting on the previously applied adhesive foam seal.

STEP FIVE

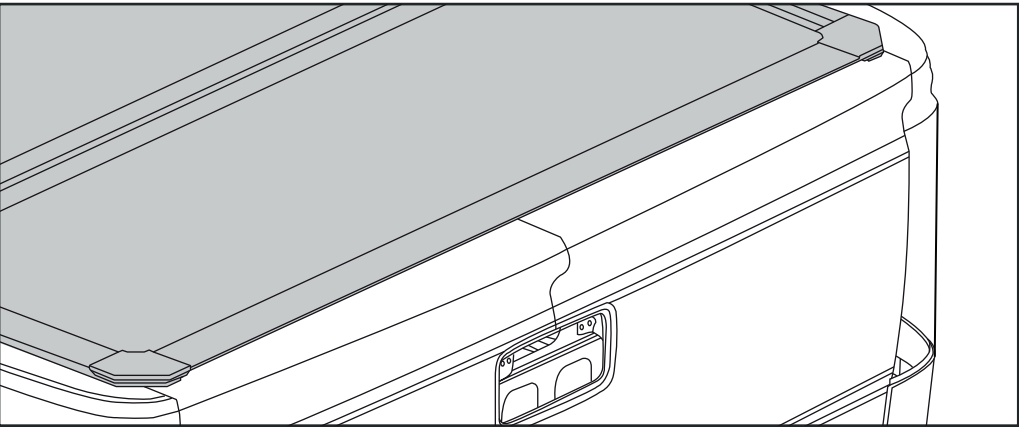

- 1. Close the tailgate and completely unfold the cover to check if it properly aligns on the tailgate.
 - 2. Move the cover to the front and back or left and right as required to ensure it's evenly spaced and sealing on the truck bed.
- Once the cover is correctly situated, fold it gently open so the tonneau does not move from the aligned position.

STEP SIX

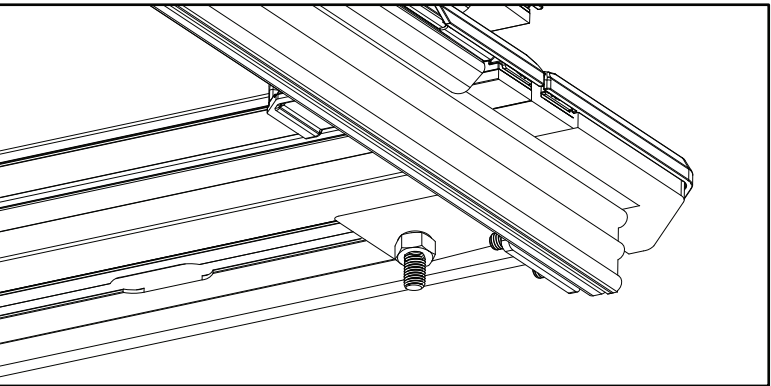

- 1. Tighten the nut on both sides down snugly.
- 2. Unfold the cover and ensure that everything remained aligned. If anything appears misaligned, repeat earlier steps.