



STEP EIGHT

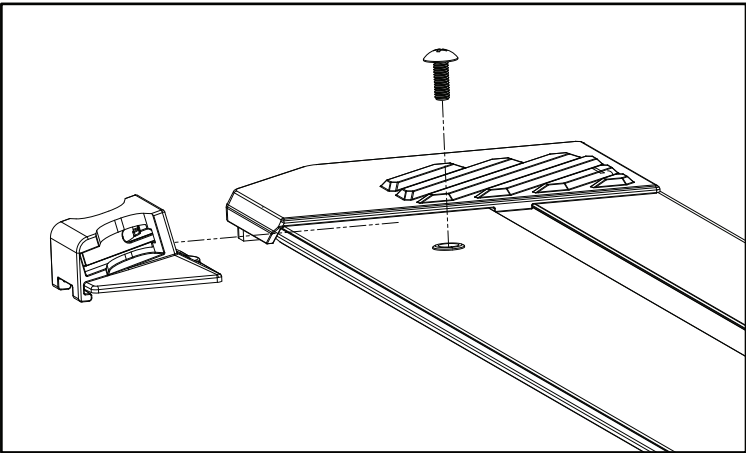

1. Install the female buckles by hooking the buckle ears under the front panel and then secure it with the provided screws

Hardware Kit 102873:

- 1) 1 X #101909 Clamp Kit
- 2) 2 X #102867 Female Buckle Kit
- 3) 1 X #102866 Retention Knob Assembly Kit
- 4) 1 X #102956 Retainer Bracket Kit

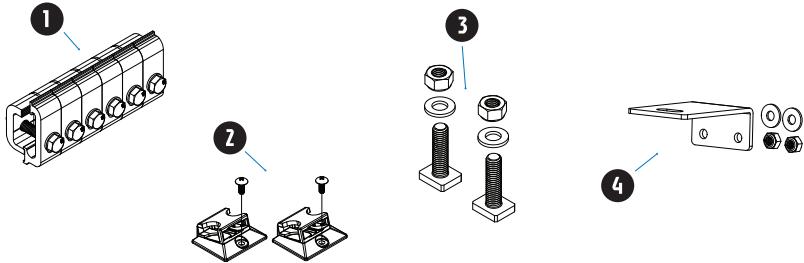


Tools Required:

- Utility Knife
- No. 2 Phillips Head Screwdriver
- 10mm & 13mm Socket or Wrench


Rails:



1. Install 102956 into the end of the rail, approx. 1/4" as shown. Ensure the silver nylok hex nuts are tightened securely.

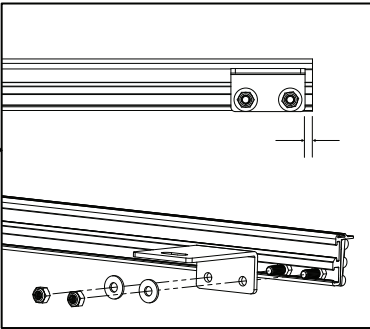


STEP ONE

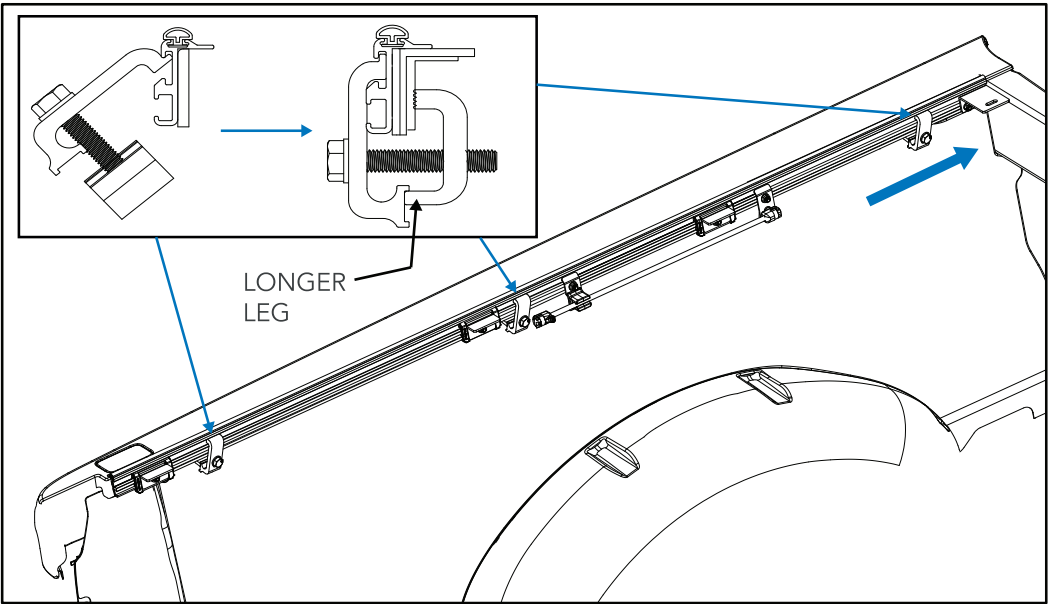

- 1. Loosen each clamp to the end of the threads to simplify installation. Orient clamps as shown (it's useful to rotate the rear clamp 90 degrees). Insert three clamps into each rail assembly at a slight angle. Position the clamp near the front, middle and rear of rail as illustrated.
- 2. Place rail assembly onto truck bed cap as shown, hold rail in place pushed against front bulkhead of the truck bed.
- 3. With assistance holding the rail in place if needed, rotate rear clamp back into vertical orientation and tighten it in place with 13mm wrench or socket.


*The longer leg with the smooth face goes down and intersects with the mating clamps

STEP TWO

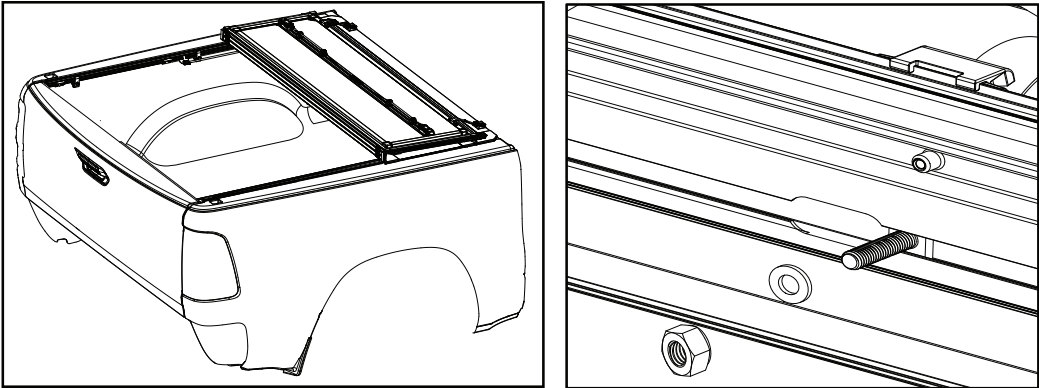


1. With assistance, take the tonneau cover from the box and place it near the bulkhead of the truck.
2. Unfold the small panel from the stack, insert retainer bolts in each side of the panel.
3. Remove the retainer nut and washer from the assembly.
4. At this time, install the front buckle from the kit with provided screws.

STEP THREE

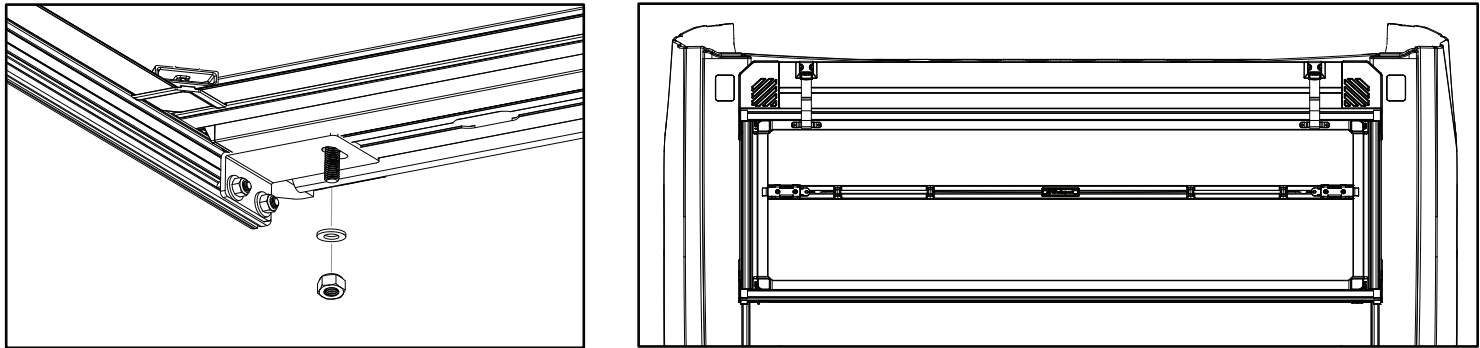


1. Fold the small front panel down, inserting the bolt into the retainer slot of the bracket mounted to the rail.
2. Put the washer and retainer nut back on the bolt, but leave it loose.
3. Align the tonneau cover on the bulkhead to the truck bed evenly spaced over the truck bed rails.
4. Ensure that the bulkhead seals are properly sitting on the previously applied adhesive foam seal.

STEP FOUR

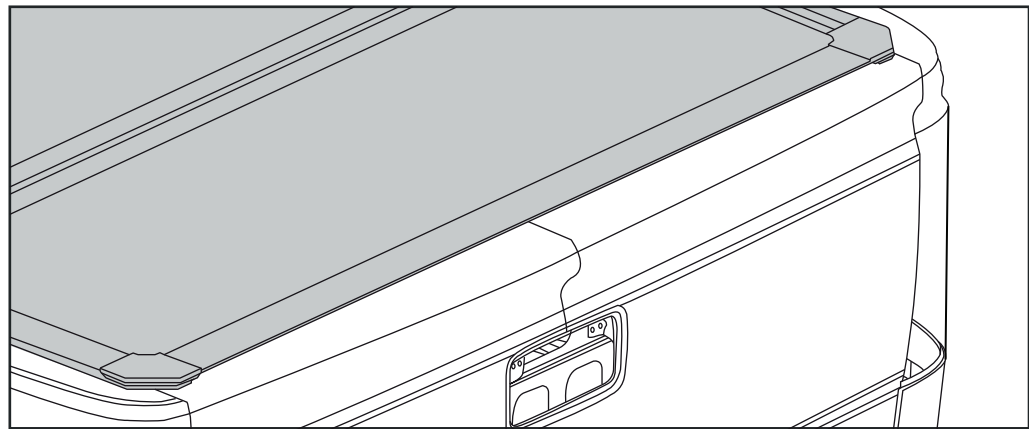


1. Close the tailgate and completely unfold the cover to check if it properly aligns on the tailgate.
 2. Move the cover to the front and back or left and right as required to ensure it's evenly spaced and sealing on the truck bed.
- Once the cover is correctly situated, fold it gently open so the tonneau does not move from the aligned position.

STEP FIVE

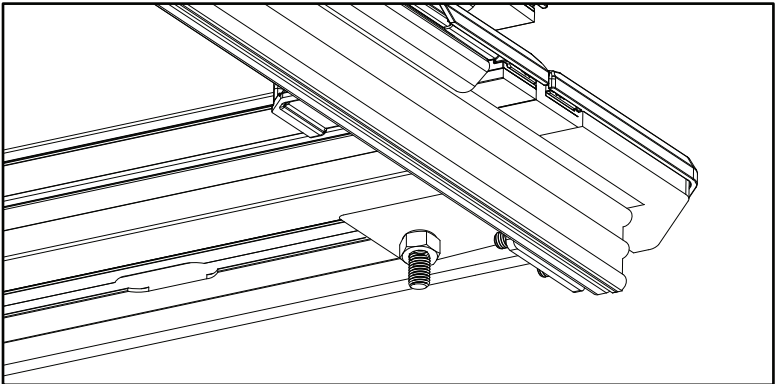


1. Tighten the nut on both sides down snugly.
2. Unfold the cover and ensure that everything remained aligned. If anything appears misaligned, repeat earlier steps.

STEP SIX

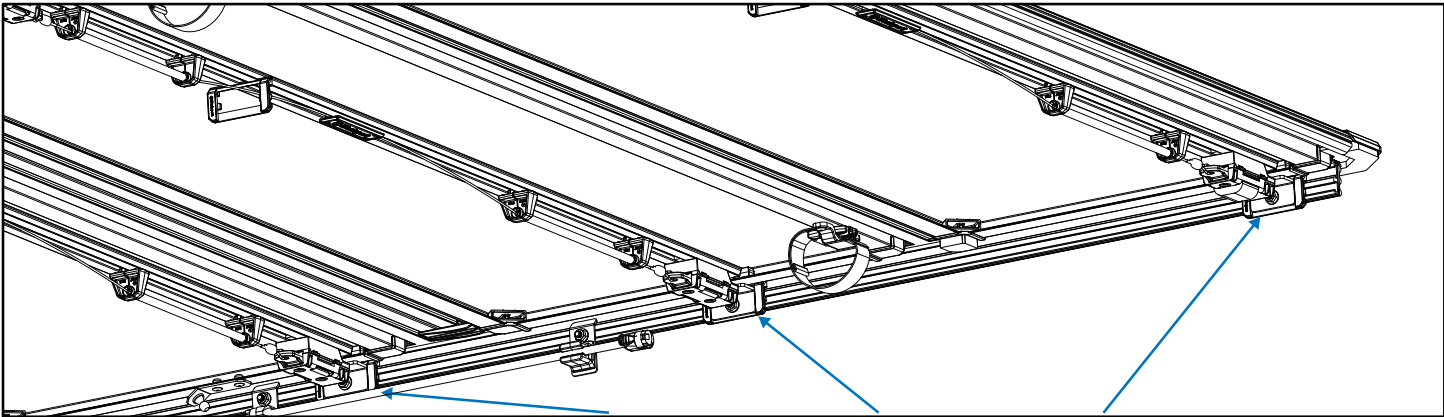


1. If needed loosen the 10mm nuts on the strikers aligning them with the slam latches and retighten the nuts. Striker should sit on the quick latches when in a rested position, align vertically as needed.

STEP SEVEN

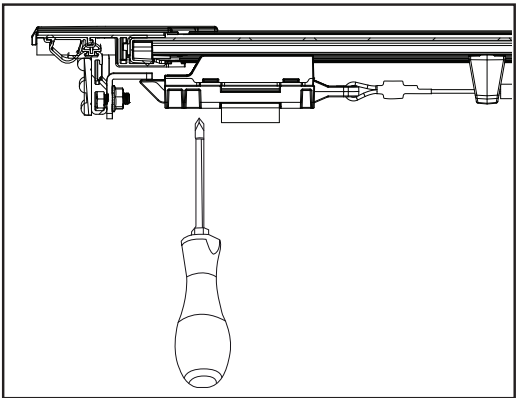

1. Completely fold and unfold the tonneau cover a couple of times to make sure it functions properly.

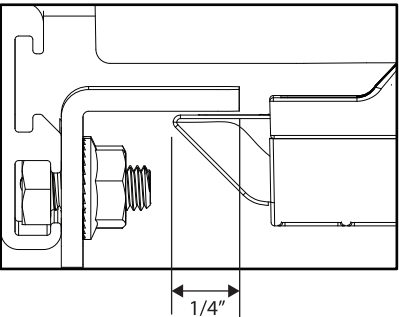

If needed, adjust the position of the quick latches using a #2 Phillips screwdriver. Loosen both screws and slide the quick latch to engage the striker approximately 6mm (1/4"). Tighten screws securely.