



STEP SEVEN

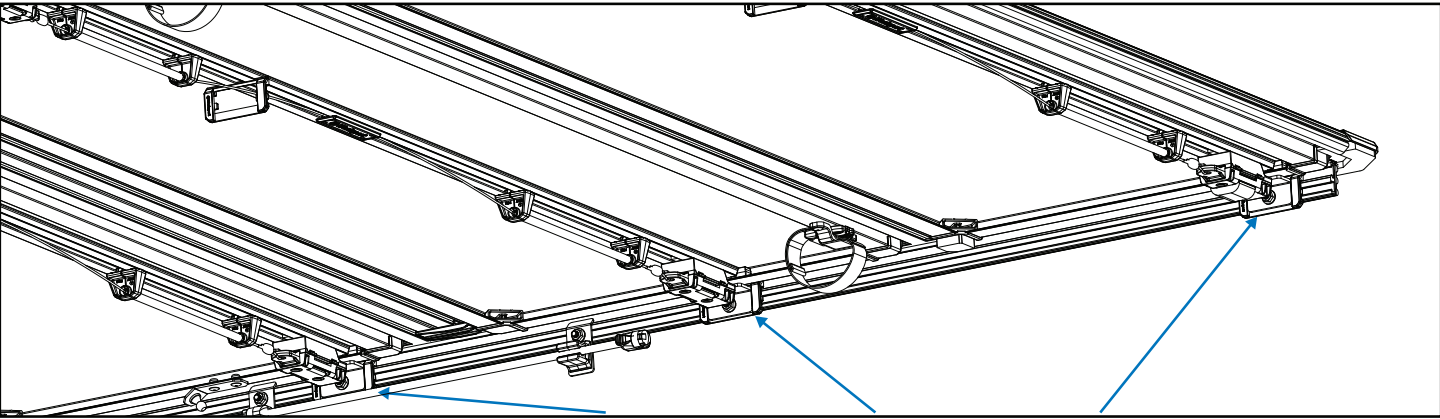


1. If needed loosen the 10mm nuts on the strikers aligning them with the slam latches and retighten the nuts. Striker should sit on the quick latches when in a rested position, align vertically as needed.

STEP EIGHT

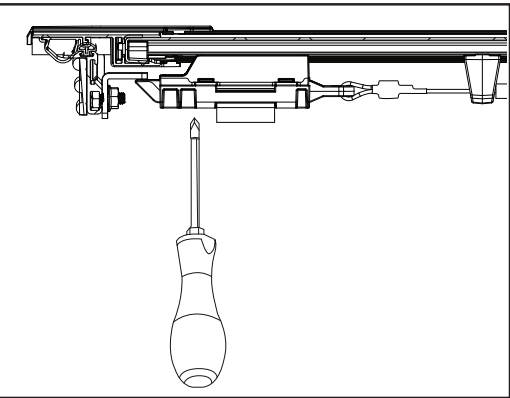


1. Completely fold and unfold the tonneau cover a couple of times to make sure it functions properly.

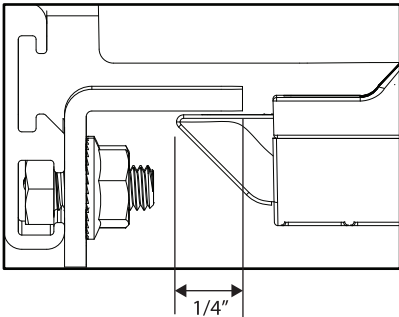

If needed, adjust the position of the quick latches using a #2 Phillips screwdriver. Loosen both screws and slide the quick latch to engage the striker approximately 6mm (1/4"). Tighten screws securely.

STEP NINE

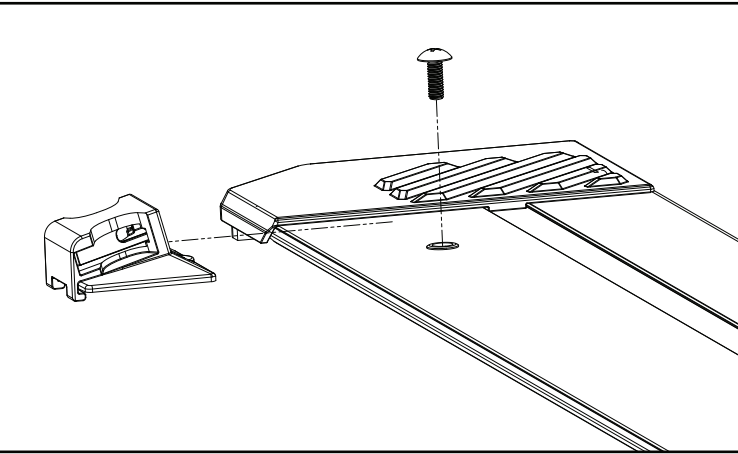


1. Install the female buckles by hooking the buckle ears under the front panel and then secure it with the provided screws

Worksport's AL4 comes with all the features you would expect in a quality tonneau cover and is proudly designed, manufactured, and stocked in the USA with domestic and imported parts and offer free, same-day shipping on most of our products.

Hardware Kit 103089:

- 1) 1 X #102840 Bulkhead Wall Seal
- 2) 4 X #102059 Mounting Clamp
- 3) 2 X #102867 Female Buckle Kit
- 4) 1 X #102866 Retention Knob Assembly Kit
- 5) 1 X #102956 Retainer Bracket Kit
- 6) 1 X #100268 3mm Wrench
- 7) 2 X #100419 Rambox Liner Seal
- 8) 2 X #102022 Bulkhead Pad
- 9) 2 X #100166 Tailgate Seal

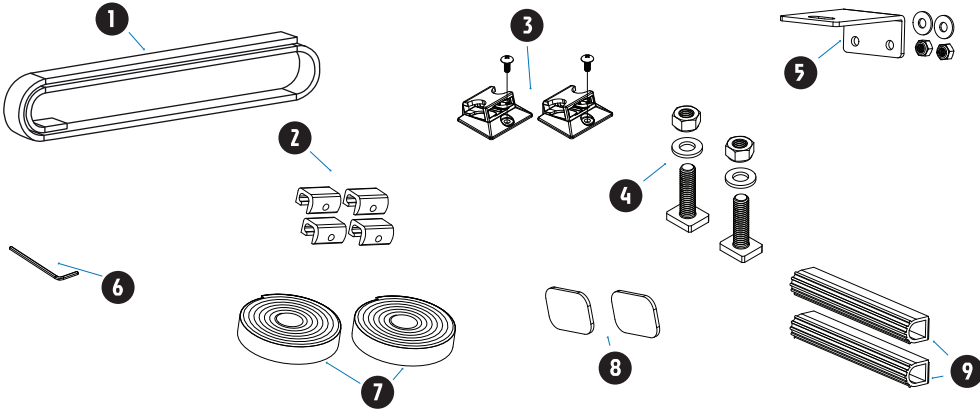


Tools Required:

Utility Knife


No. 2 Phillips Head Screwdriver

10mm & 13mm Socket or Wrench



Rails:

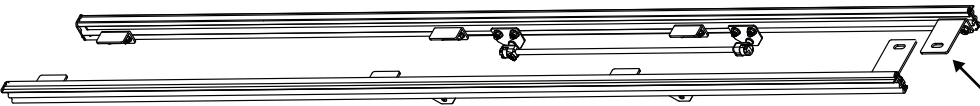

1. Install 102956 into the end of the rail, approx. 1/4" as shown. Ensure the silver nylok hex nuts are tightened securely.

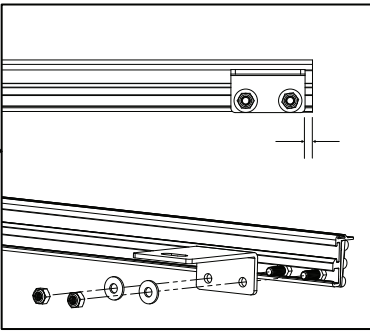


STEP ONE

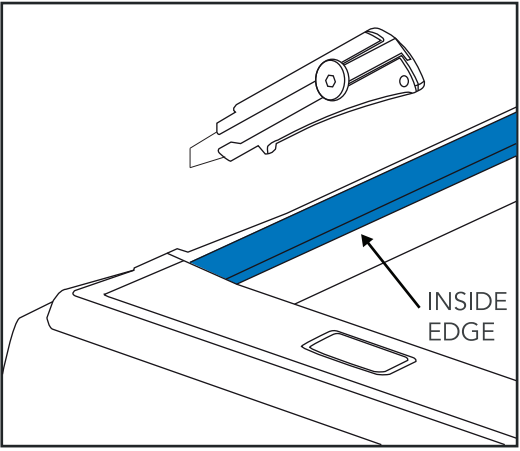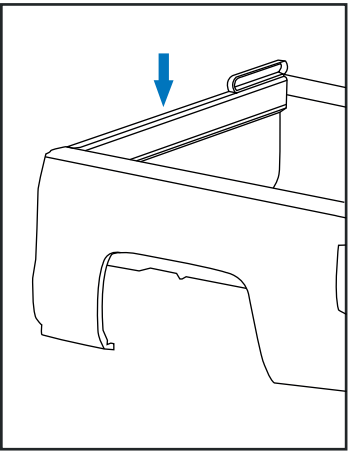


- 1. Clean the bulkhead wall of your truck bed (recommend alcohol) and allow to dry. Apply the adhesive foam seal to the inside edge of the bulkhead.
- 2. Ensure there is no gap between the seal and the plastic side caps of the bed. Trim any excess material flush using a knife.


STEP TWO

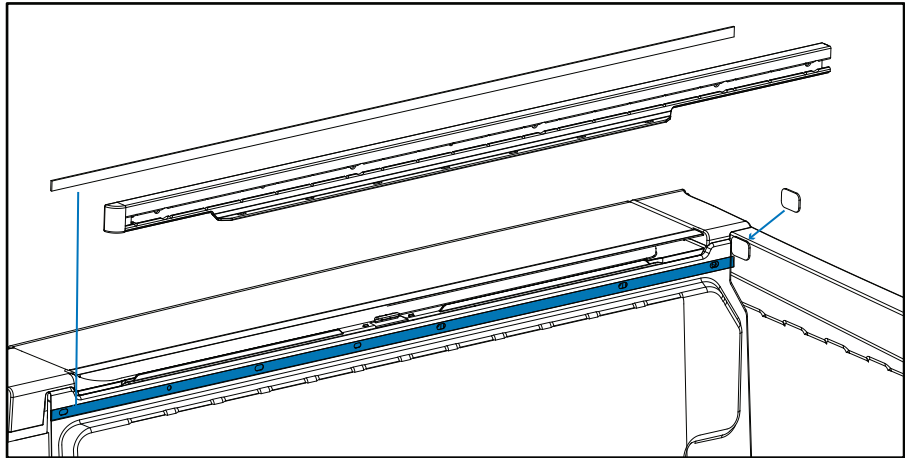



- 1. Remove the factory track bolts using a 10mm socket. Remove the factory rail.
- 2. Clean the area behind the track with a damp cloth. Apply Rambox track to bed seal (item #7) directly over the existing holes in the bed.
- 3. Clean the area and allow to dry then attach bulkhead pad seal (item #8) as shown. Seal should be flush with the bulkhead and touch against the side of the truck bed.
- 4. Reinstall the factory track, use caution to not overtighten the bolts.

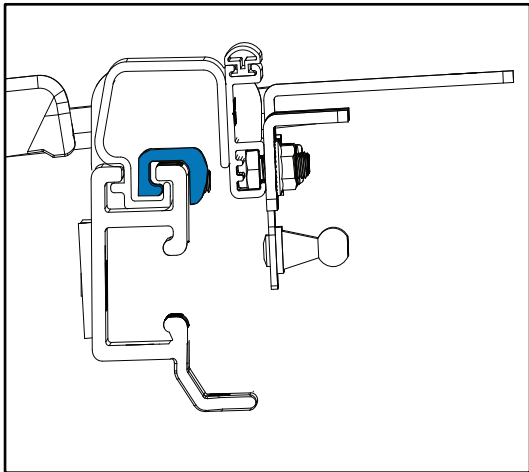

- 5. Identify and install the Rambox Accessory Rail into the factory track system as shown. Check the packing list for a detailed description of each part.
- 6. Identify and install the Accessory Rail Clamps (item #2), 2 each as shown on each side of the truck. Position one toward the front of the Accessory Rail and one near the rear, position is not critical.
- 7. Tight the clamps using the 3 mm hex key (item #6).
- 8. Clean the area and attach Tailgate Seal (item #9).

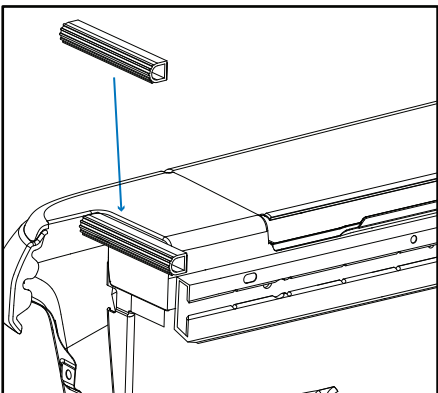


STEP THREE

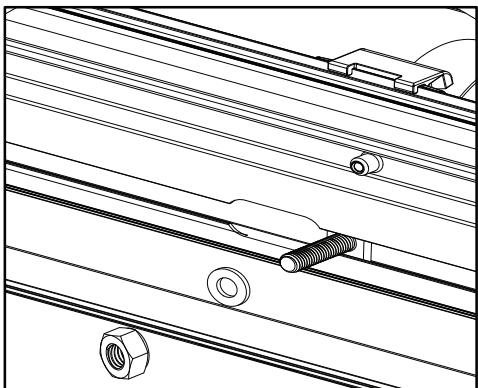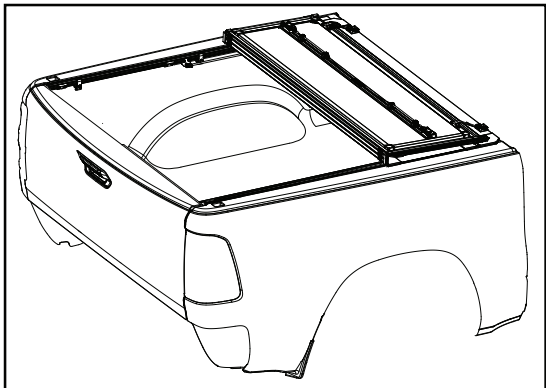


- 1. With assistance, take the tonneau cover from the box and place it near the bulkhead of the truck.
- 2. Unfold the small panel from the stack, insert retainer bolts in each side of the panel.
- 3. Remove the retainer nut and washer from the assembly.
- 4. At this time, install the front buckle from the kit with provided screws.

STEP FOUR

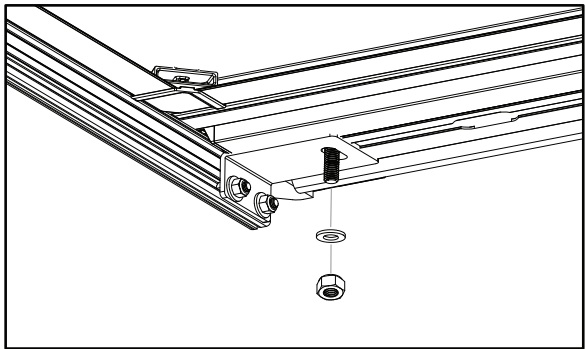


- 1. Fold the small front panel down, inserting the bolt into the retainer slot of the bracket mounted to the rail.
- 2. Put the washer and retainer nut back on the bolt, but leave it loose.

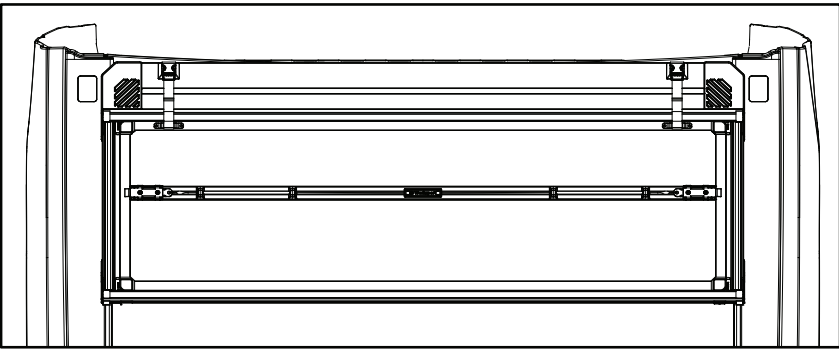


- 3. Align the tonneau cover on the bulkhead to the truck bed evenly spaced over the truck bed rails.
- 4. Ensure that the bulkhead seals are properly sitting on the previously applied adhesive foam seal.

STEP FIVE

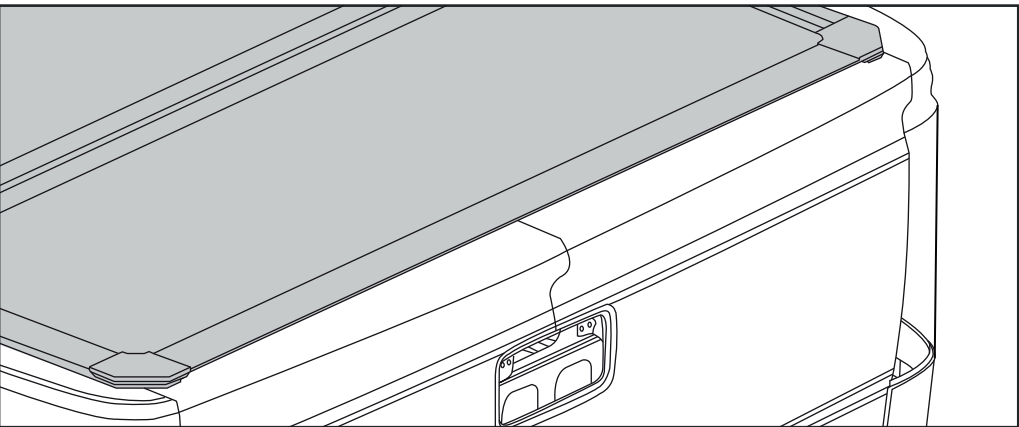

- 1. Close the tailgate and completely unfold the cover to check if it properly aligns on the tailgate.
  - 2. Move the cover to the front and back or left and right as required to ensure it's evenly spaced and sealing on the truck bed.
- Once the cover is correctly situated, fold it gently open so the tonneau does not move from the aligned position.

STEP SIX

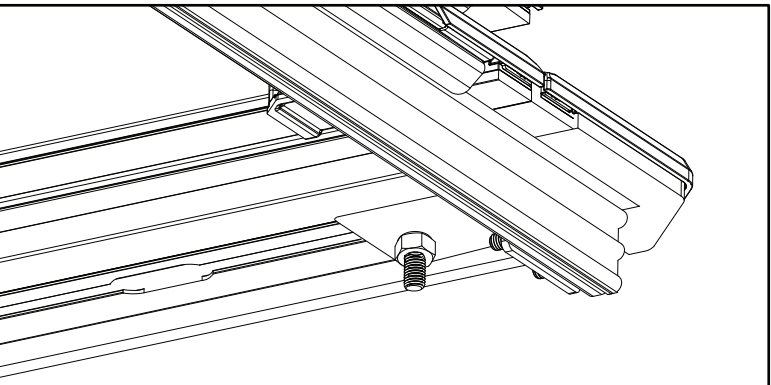

- 1. Tighten the nut on both sides down snugly.
- 2. Unfold the cover and ensure that everything remained aligned. If anything appears misaligned, repeat earlier steps.