

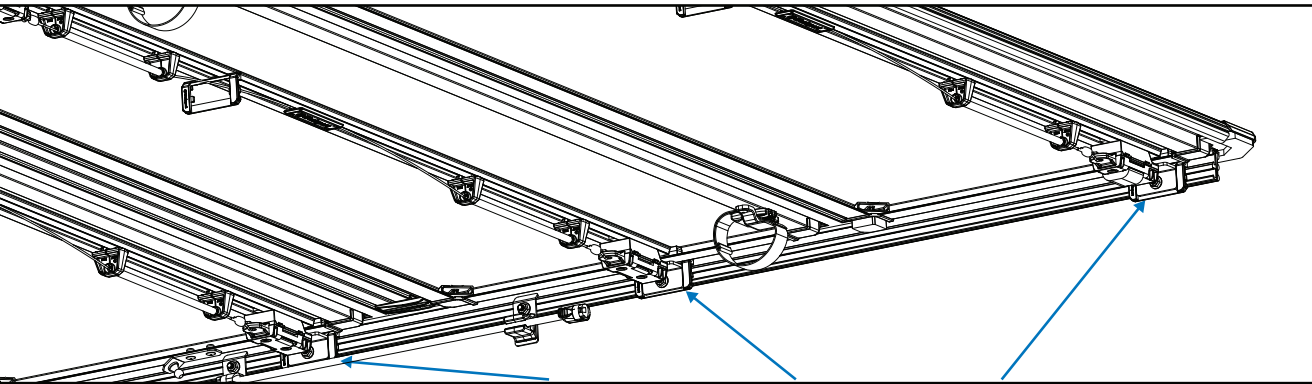


STEP SEVEN

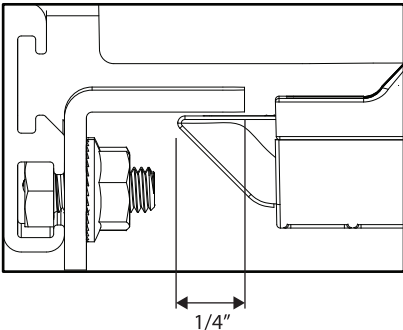

1. If needed loosen the 10mm nuts on the strikers aligning them with the slam latches and retighten the nuts. Striker should sit on the quick latches when in a rested position, align vertically as needed.


STEP EIGHT

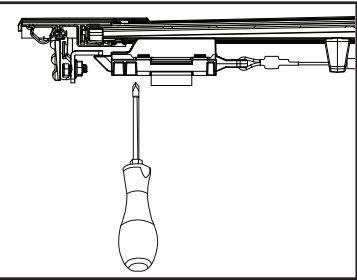

1. Completely fold and unfold the tonneau cover a couple of times to make sure it functions properly.

If needed, adjust the position of the quick latches using a #2 Phillips screwdriver. Loosen both screws and slide the quick latch to engage the striker approximately 6mm (1/4"). Tighten screws securely.

STEP NINE

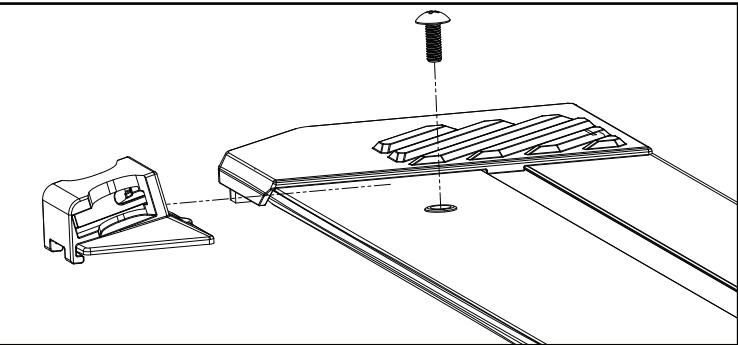


1. Install the female buckles by hooking the buckle ears under the front panel and then secure it with the provided screws

Workspport's AL4 comes with all the features you would expect in a quality tonneau cover and is proudly designed, manufactured, and stocked in the USA with domestic and imported parts and offer free, same-day shipping on most of our products.

Hardware Kit 103018:


- 1) 1 X #100267 Bulkhead Wall Seal
- 2) 1 X #103018 Rail Clamp Brackets
- 3) 2 X #102867 Female Buckle Kit
- 4) 1 X #102866 Retention Knob Assembly Kit
- 5) 1 X #102956 Retainer Bracket Kit

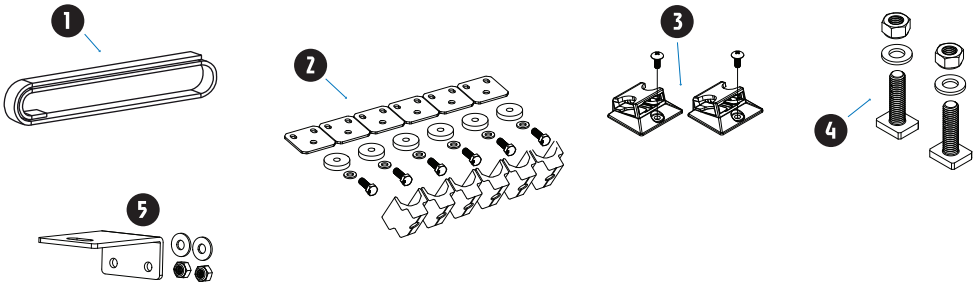

Tools Required:



- Utility Knife
- No. 2 Phillips Head Screwdriver
- 10mm & 13mm Socket or Wrench

Rails:

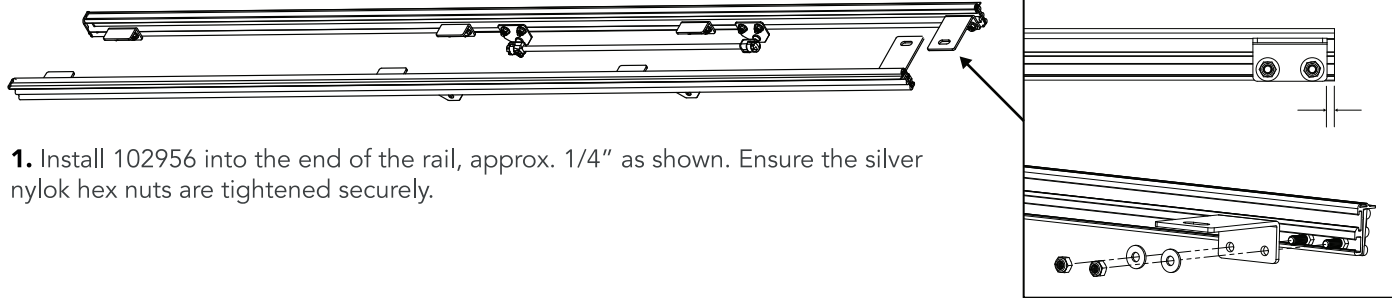


1. Install 102956 into the end of the rail, approx. 1/4" as shown. Ensure the silver nylok hex nuts are tightened securely.

STEP ONE

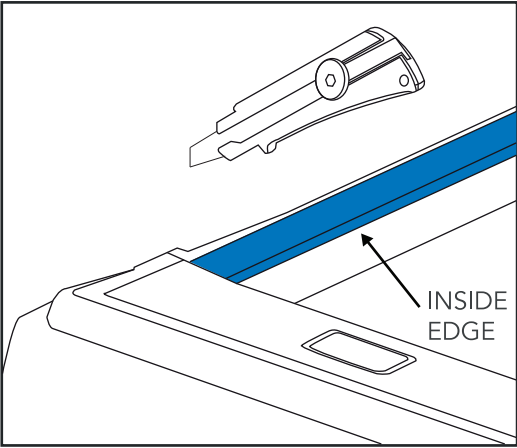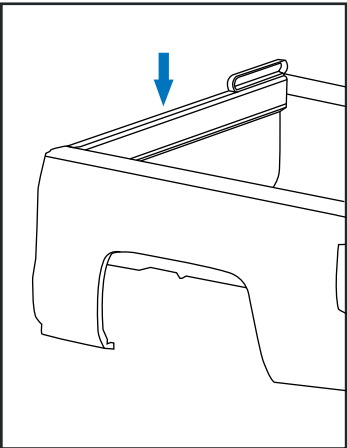


- 1. Clean the bulkhead wall of your truck bed (recommend alcohol) and allow to dry. Apply the adhesive foam seal to the inside edge of the bulkhead.
- 2. Ensure there is no gap between the seal and the plastic side caps of the bed. Trim any excess material flush using a knife.



STEP TWO

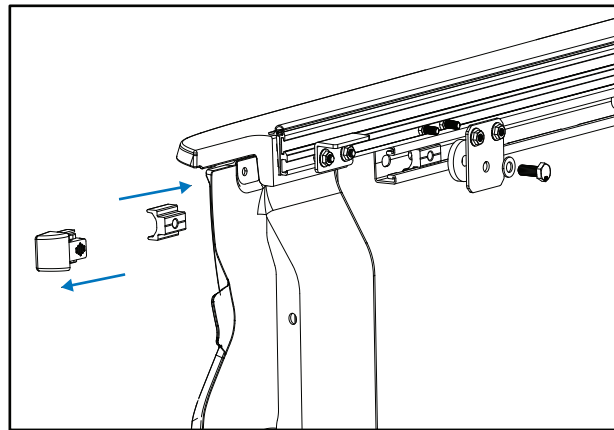

1. Remove the accessory rail end cap. Remove any tie down cleats. Insert three T-nut fasteners into each side of the accessory rail as shown.
2. Place rail assembly onto truck bed cap as shown, hold rail in place pushed against front bulkhead of the truck bed.
3. With assistance holding the rail in place if needed, remove the nuts from the bolts designated with arrows in the image to the left.
4. Install the hardware from kit 103018 in the order shown. Once installed tighten each assembly with 13mm wrench or socket. Reinstall the nuts onto the bolts you previously removed them from. Position of fasteners should be approximately front, middle and rear of rail as shown.
5. Reinstall the accessory rail end cap and tie down cleats.

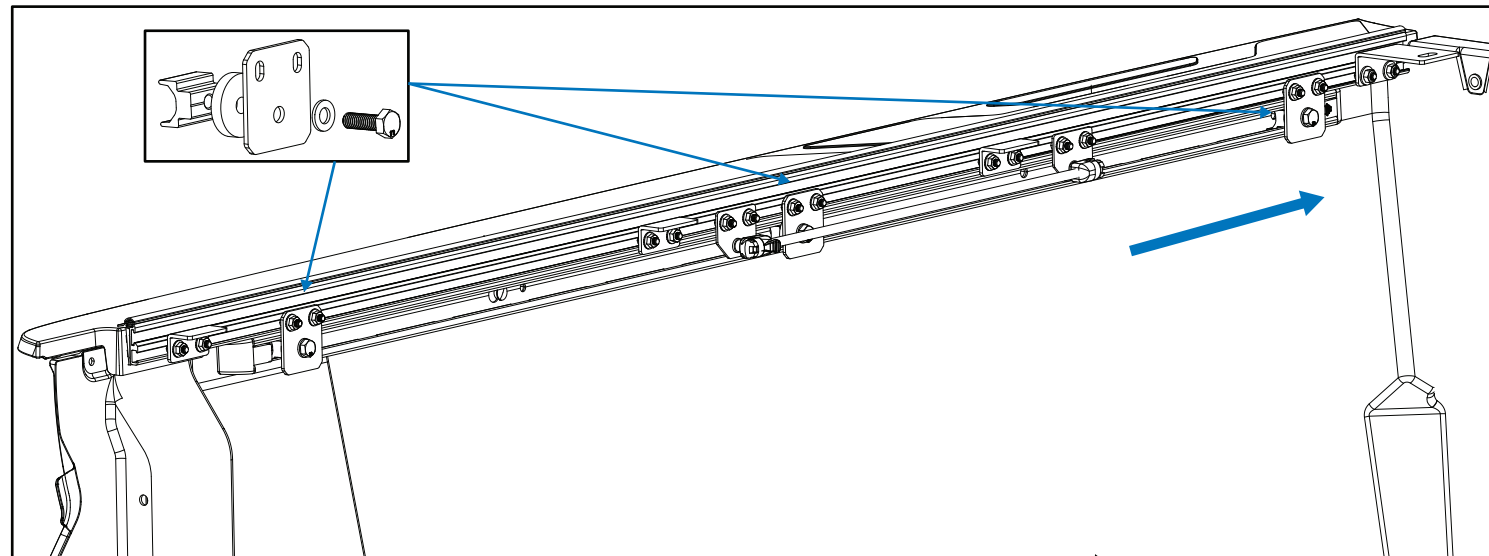


STEP THREE

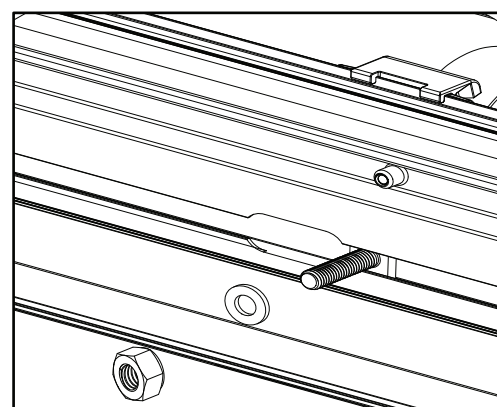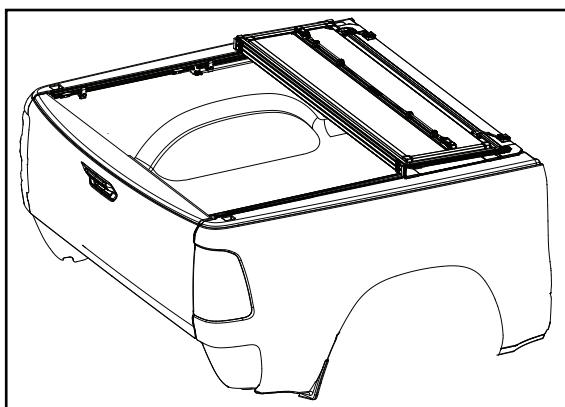


1. With assistance, take the tonneau cover from the box and place it near the bulkhead of the truck. Unfold the small panel from the stack, insert retainer bolts in each side of the panel. Remove the retainer nut and washer from the assembly.

STEP FOUR

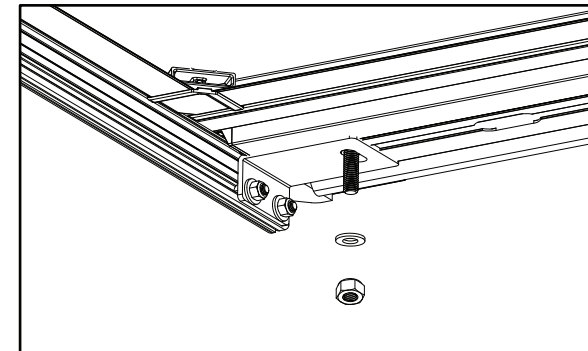


1. Fold the small front panel down, inserting the bolt into the retainer slot of the bracket mounted to the rail.
2. Put the washer and retainer nut back on the bolt, but leave it loose.

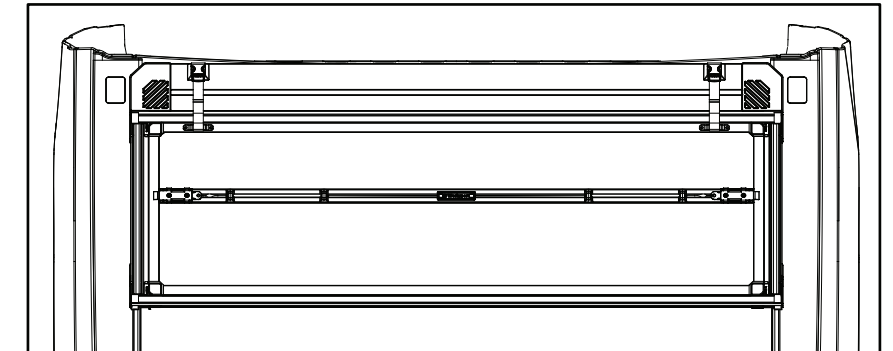

3. Align the tonneau cover on the bulkhead to the truck bed evenly spaced over the truck bed rails.
4. Ensure that the bulkhead seals are properly sitting on the previously applied adhesive foam seal.

STEP FIVE

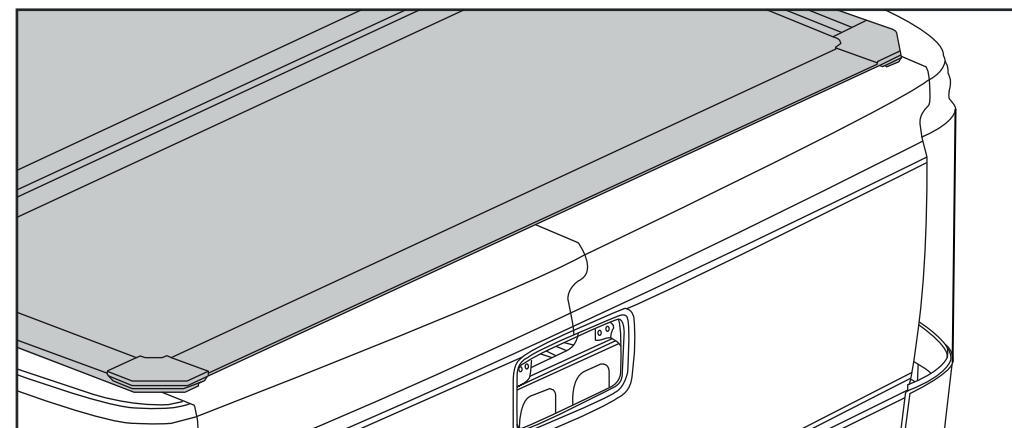


1. Close the tailgate and completely unfold the cover to check if it properly aligns on the tailgate.

2. Move the cover to the front and back or left and right as required to ensure it's evenly spaced and sealing on the truck bed.

Once the cover is correctly situated, fold it gently open so the tonneau does not move from the aligned position.

STEP SIX

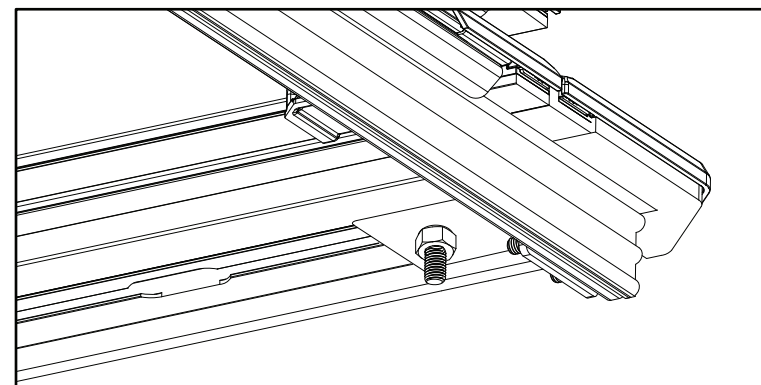

1. Tighten the nuts down snugly
2. Unfold the cover and make sure nothing unaligned during this step. if so repeat previous steps.