



# X-ACT CONTOUR® FLOOR LINERS

PT #50651


## CARE AND USE INSTRUCTIONS

---

Thank you for selecting an X-act Contour® Floor Liner from Husky Liners. Your new 3<sup>rd</sup> seat liner is custom molded to fit your vehicle. The liner is made to take the place of your factory floor mat(s). **For correct fit, it is necessary to remove the factory floor mats before installing your new floor liner.** However, do not remove the factory-installed carpeting.

Your liner is made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Use of Armor All®, Son-of-a-Gun® or similar items is discouraged as these products make the liner slick.

## INSTALLATION INSTRUCTIONS FOR YOUR X-ACT CONTOUR 3<sup>RD</sup> SEAT FLOOR LINER

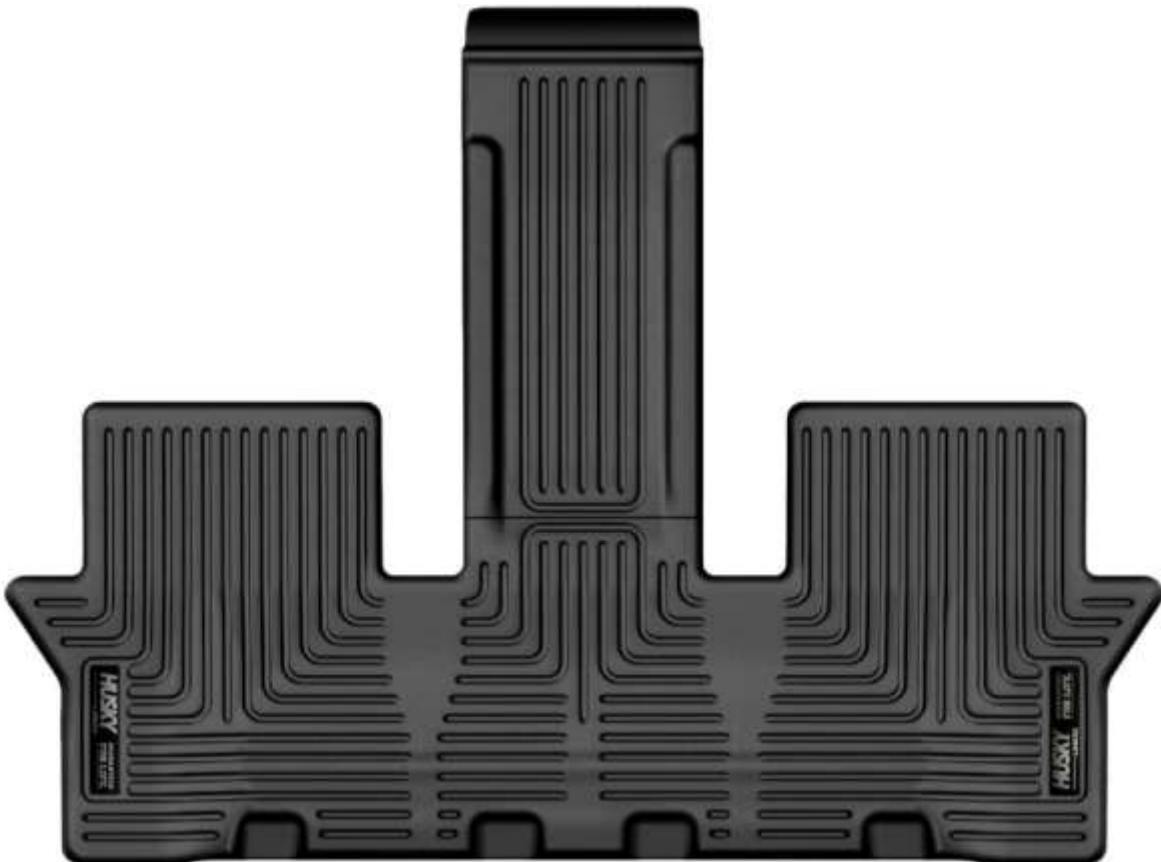

TO INSTALL YOUR LINER IN A KIA SORENTO WITH SECOND ROW BUCKET SEATS, FIRST SLIDE THE SECOND ROW SEATS COMPLETELY FORWARD. THEN, INSTALL YOUR LINER, POSITIONING IT AS SHOWN ABOVE. WITH THE LINER INSTALLED, REPOSITION THE SECOND ROW SEATS AS DESIRED.

IF YOUR SORENTO HAS SECOND ROW BENCH SEATING, THE TONGUE SECTION OF THE LINER CAN EASILY BE TRIMMED AWAY FOR EASIER INSTALLATION. PLEASE REFER TO THE INSTRUCTIONS ON THE BACK OF THIS PAGE FOR TRIMMING.

View the Husky Liner Lifetime Warranty at [www.huskyliners.com/lifetime-warranty](http://www.huskyliners.com/lifetime-warranty)

5065 Installation Instruction  
6\_18\_2022



## X-ACT CONTOUR® FLOOR LINERS

PT #50651

TO TRIM YOUR LINER, SIMPLY USE THE MOLDED IN TRIM GROOVE AS YOUR GUIDE AND REMOVE THE TONGUE PORTION OF THE LINER AS SHOWN. A PAIR OF HEAVY SHEARS OR A UTILITY KNIFE WORK WELL FOR TRIMMING.

