



X-ACT CONTOUR FLOOR LINERS

CARE AND USE INSTRUCTIONS – PN:5363

Thank you for selecting X-act Contour™ **Floor Liners** from Husky Liners. Your new second seat floor liner is custom molded to fit your **specific vehicle's floor board**. The liner is made to take the place of your factory floor mats. *For correct fit, it is necessary to remove the factory floor mats before installing your new floor liners.* However, do not remove the factory-installed carpeting.

Your liner is made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge and soap and water. Windex®, 409® and ArmorAll® type cleaners work as well.



Position your liner in the vehicle as shown above. To ease installation of your second seat liner, move the front row seats completely forward prior to installing liner. Once the liner is in place, move the front seats back to the desired position.

If your Ram truck is equipped with front row bench seats, the liner will need to be tucked under the air vent assembly that extends out onto the center hump area in the rear seat floor space. Please review the image on the back of this page which shows the liner tucked underneath of the air vents.

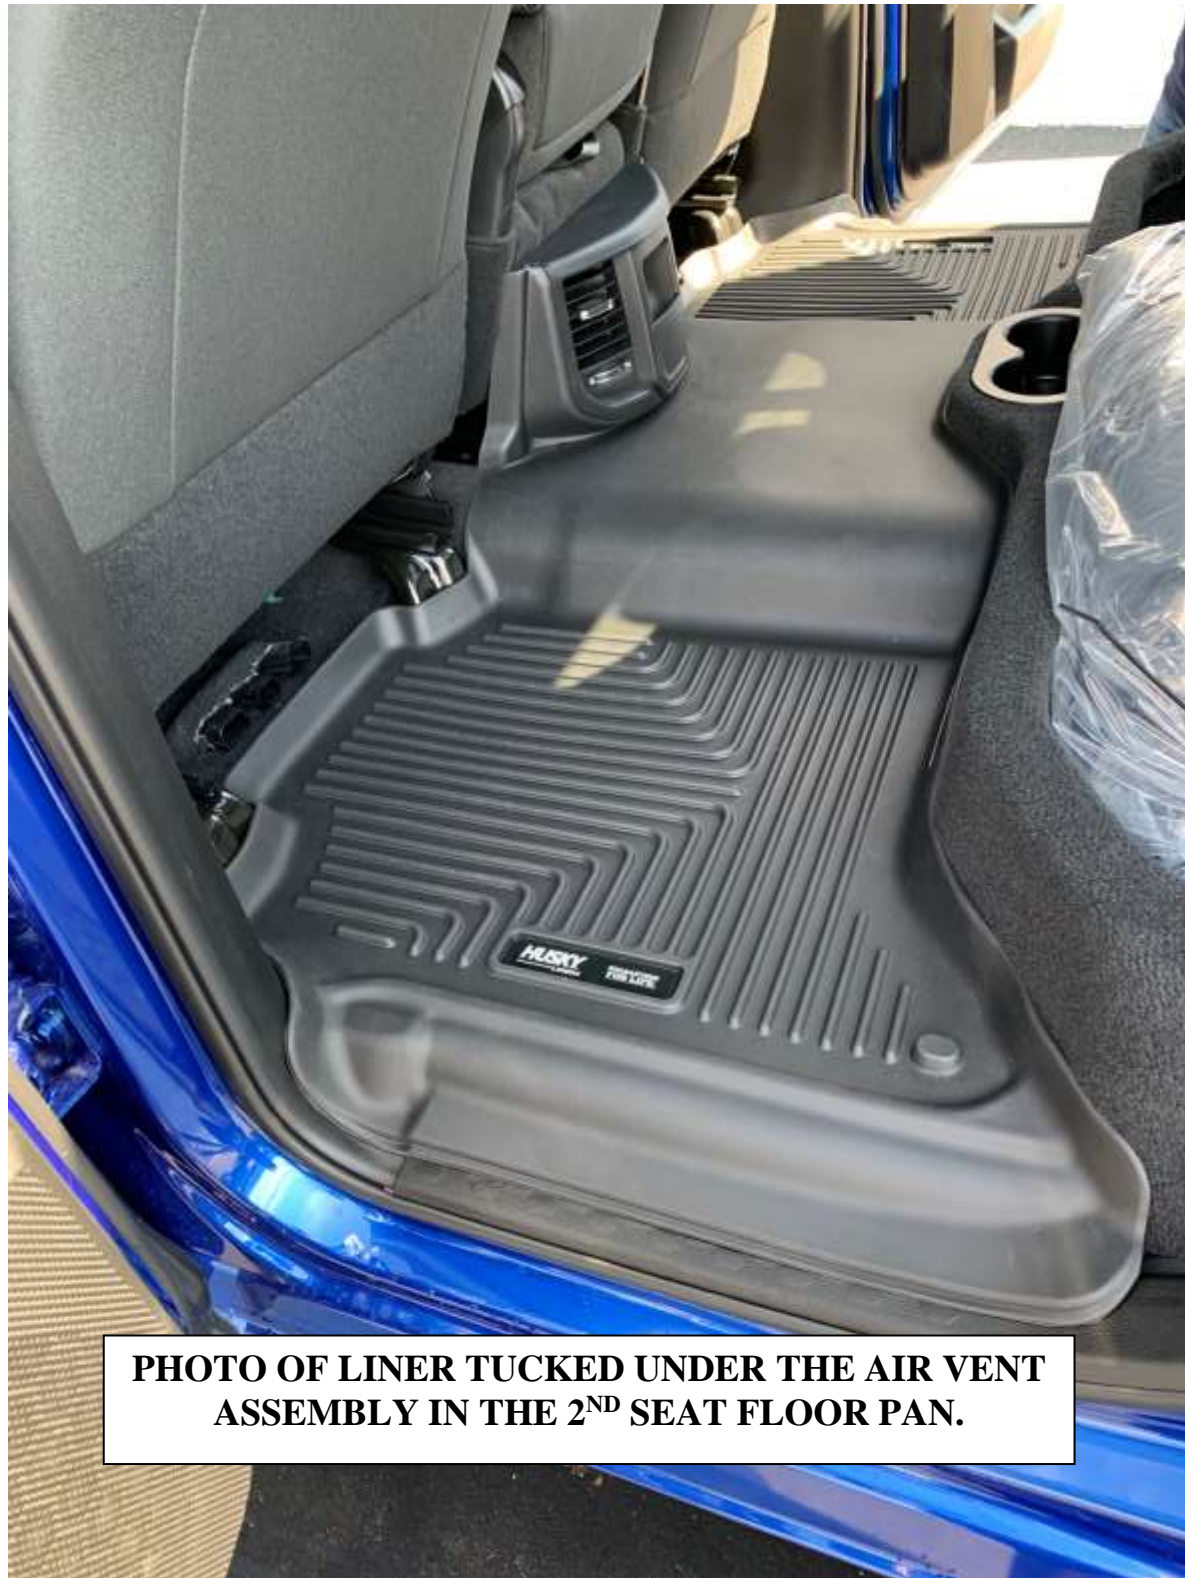


PHOTO OF LINER TUCKED UNDER THE AIR VENT ASSEMBLY IN THE 2ND SEAT FLOOR PAN.