



X-ACT CONTOUR

FLOOR LINERS

CARE AND USE INSTRUCTIONS – PN: 53741

Thank you for selecting X-act Contour™ Front Floor Liners from Husky Liners Inc. Your new front floor liners are custom molded to fit your Toyota Tacoma floor board. The liners are made to take the place of your factory floor mats. **For correct fit, it is necessary to remove the factory floor mats before installing your new floor liners.** However, do not remove the factory-installed carpeting.

When installing your floor liners make sure that the floor mat retention hook on your vehicles floor board installs thru the retention hole in your floor liner and turn the twist lock to secure the driver's side. Push the passenger side retention point over the factory carpet post

Your liners are made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liners is with a damp cloth or sponge and soap and water. Windex®, 409® and Armor All® type cleaners work as well.



LEFT OR DRIVER





RIGHT OR PASSENGER



PLEASE SEE BACK OF PAGE FOR PASSENGER SIDE CLIP INSTALLATION INSTRUCTIONS.

HUSKY FLOOR LINER RETAINING CLIP INSTALLATION INSTRUCTIONS

LOCATE THE TWO CLIPS IN YOUR LINER PACKAGING AND REMOVE THE CLIPS FROM THE BAGS. UNSCREW THE TOP AND BOTTOM HALVES OF THE RETAINING CLIP AND INSERT THE BOTTOM CLIP HALF INTO THE LINER AS SHOWN IN IMAGE 1 AND 2 BELOW.

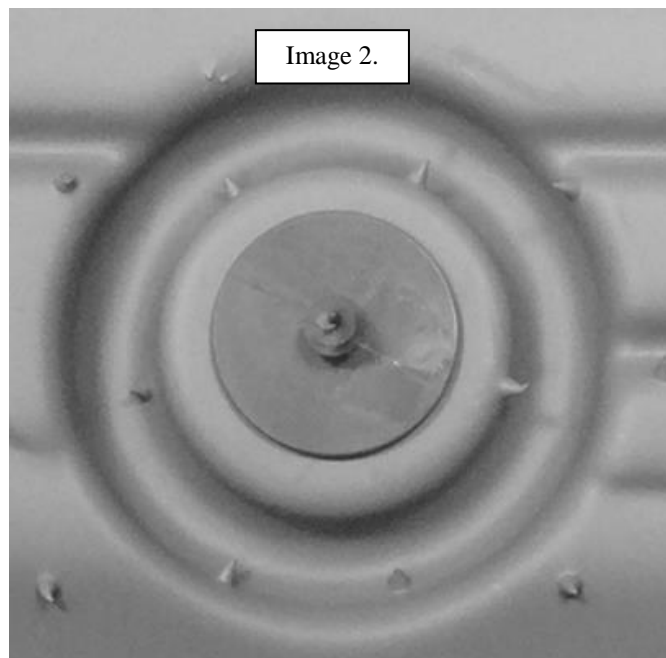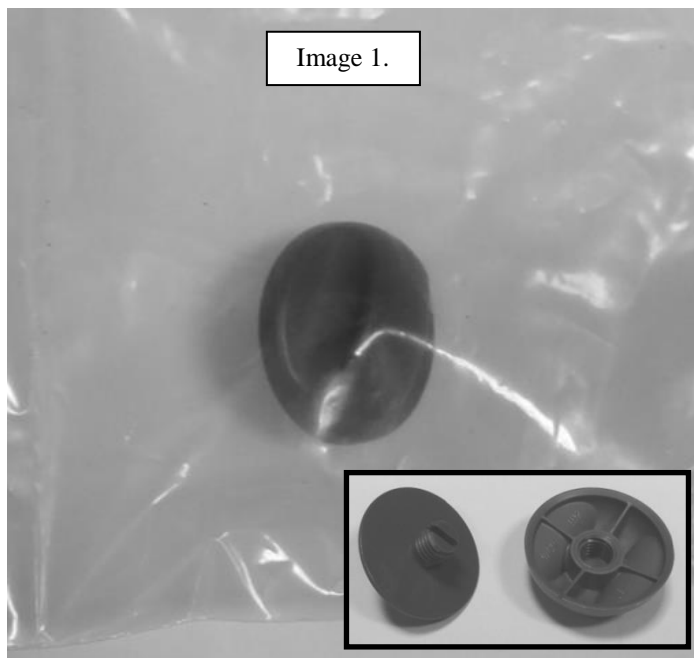

WITH THIS DONE, POSITION THE LINER IN THE VEHICLE AND, USING A COIN, SCREWDRIVER OR SIMILAR TOOL, SCREW THE BASES OF THE FASTENERS INTO THE CARPETING (SEE IMAGE 3). LASTLY, AS SHOWN IN IMAGE 4, INSTALL THE CAP ONTO THE BASE. TIGHTEN UNTIL THE CAP MEETS RESISTANCE, DO NOT OVER TIGHTEN.

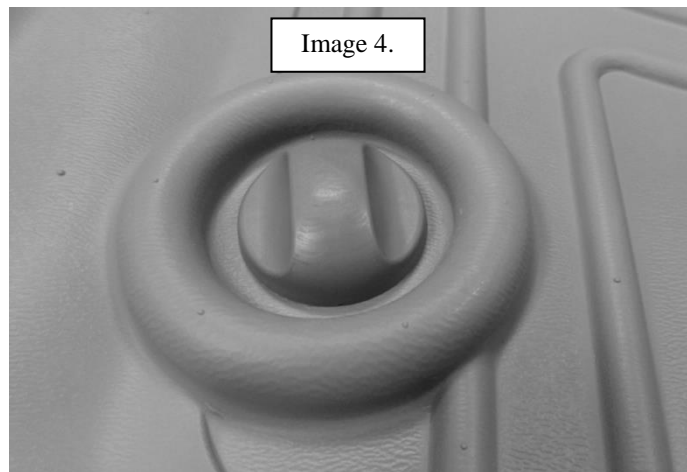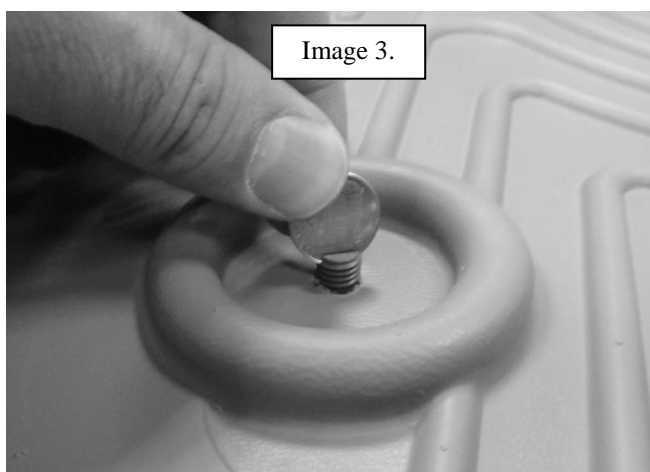

IF YOU HAVE ANY QUESTIONS REGARDING THE INSTALLATION OF YOUR HUSKY® LINER RETAINING CLIPS, JUST GIVE US A CALL MONDAY THROUGH FRIDAY FROM 8:00 AM – 5:00 PM CENTRAL TIME AT 800-344-8759 OR E-MAIL US AT: contactus@huskyliners.com.