

# 55364

CHRYSLER 300M  
CHRYSLER CONCORDE  
CHRYSLER INTREPID (CANADA ONLY)  
CHRYSLER LHS  
DODGE INTREPID

WIRING LOCATION GUIDE  
GUÍA DE UBICACIÓN DEL CABLEADO  
IDE D'EMPLACEMENT DES FILS



### MUST READ FIRST!

All steps must be followed to ensure correct function of the T-Connector. To verify proper installation once installed, test by connecting a test light or properly wired trailer.




### ¡DEBE LEERSE PRIMERO!

Debe seguirse todos los pasos para asegurar el correcto funcionamiento del Conector-T. Para verificar la correcta instalación, pruebe conectando una luz de prueba o un remolque debidamente cableado.

### À LIRE D'ABORD!

Pour assurer le bon fonctionnement du T-Connector, il faut suivre toutes les étapes. Pour vérifier que l'installation a été bien effectuée, branchez un feu de test ou une remorque correctement filéée.

02/04/09

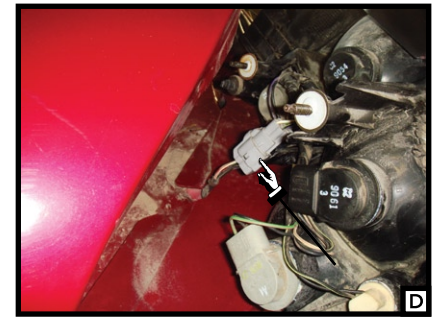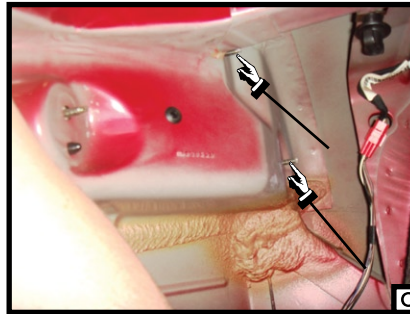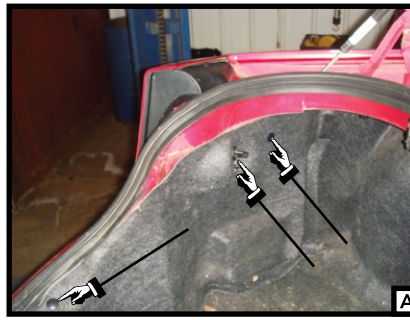

## English

1. Open the trunk on the drivers side remove the plastic wing nut and trim fasteners holding on the trunk liner.[A] Pull back on the trunk liner to expose two more plastic wing nuts.[B] Remove the last two plastic wing nuts and remove the taillight to expose the vehicles taillight wiring harness.[C] Separate the vehicles connectors.[D] Repeat on the passenger side.

2. On the drivers side route the T-connector end with the yellow wire up behind the bumper and thru the opening under the taillight assembly.[E] Insert the T-connector end with the yellow wire in-between the separated connectors.[F]

3. Route the T-connector end with the green wire to the passenger side behind the bumper. Repeat step 2 using the green wire on the passenger side. Re-install the taillights and trunk lining.


4. Locate a suitable grounding point near the connector such as an existing screw with nut in the vehicle's frame or drill a 3/32" hole and secure white wire using eyelet and screw provided.

5. Adhere the black converter box to the frame of the car using the double-sided tape provided. Secure any loose parts of the T-connector with the cable ties provided.

6. Route the 4-flat to the center of the vehicle and secure in a convenient out of the way location.

### WARNING!

Verify miscellaneous items that may be hidden behind or under any surface before drilling to avoid damage and/or personal injury.

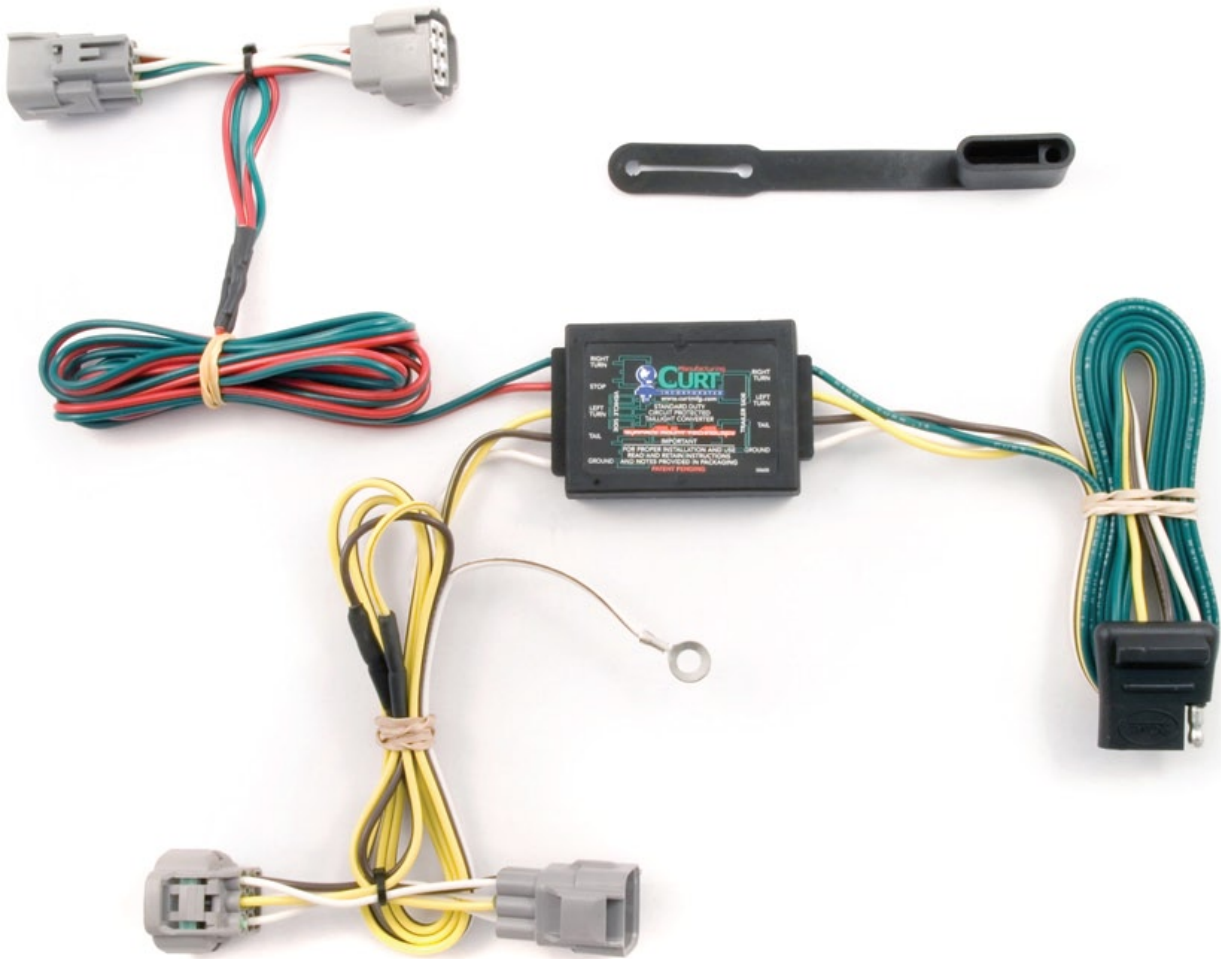

55364