

# INSTALLATION INSTRUCTIONS

**⚠ WARNING: DO NOT EXCEED PRODUCT RATING OR TOW VEHICLE LAMP LOAD RATING, WHICHEVER IS LOWER**

## APPLICATIONS

Make	Model
Jeep	Grand Cherokee

## WIRING LOCATION GUIDE


### SUVs, MINI & FULL-SIZED VANS (S)

Representative vehicle shown below

S3 - Behind driver side rear access panel



## CUSTOM WIRING CONNECTOR

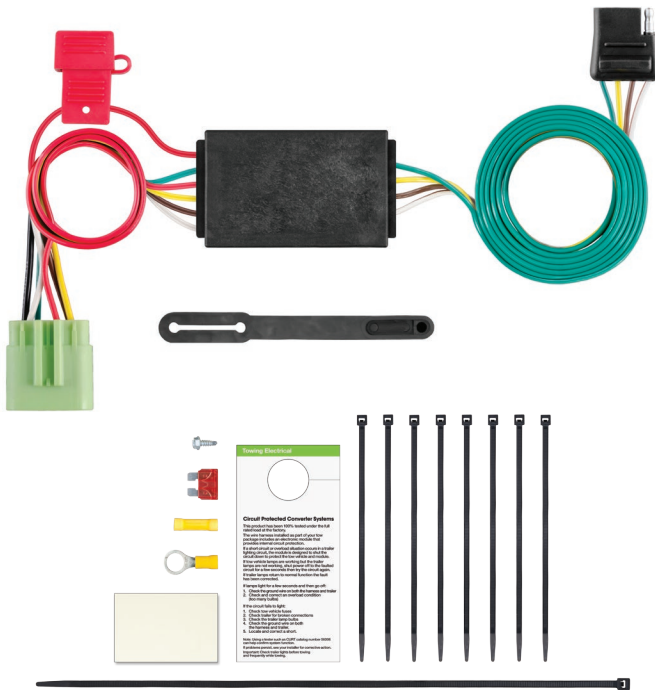

## NOTICE

All steps must be followed to ensure the wiring connector will function properly. Once installed, test for proper function by using a test light or connecting a properly wired trailer.

## TOOLS NEEDED

- Phillips screwdriver
- Panel trim removal tool

## ⚠ WARNING ⚠ ⚡

The battery connection must be fuse-protected, 10-amp max. Exceeding the product rating can cause loss of warranty, overheating and potential fire. Do not exceed product rating or tow vehicle lamp load rating, whichever is lower.

- Signal Circuits - 3.0 amps per side
- Tail / Running Circuits - 6.0 amps total

Check vehicle owner's manual or contact the vehicle manufacturer for more information.

# INSTALLATION / SAFETY INSTRUCTIONS

- Step 1**  
Locate vehicle battery on the driver side under the hood and disconnect the negative battery terminal.
- Step 2**  
Open the vehicle tailgate. Remove the cargo cover and net (A).
- Step 3**  
Remove the two screws securing the rear threshold (B,C).
- Step 4**  
Remove the screw on the driver side trim panel and pull back the panel to gain access to the green vehicle harness (D,E,F).
- Step 5**  
Insert the green custom wiring connector housing into the green vehicle harness housing. Make sure the connectors are fully inserted with locking tabs in place by pushing the red lock tab to the side (G).
- Step 6**  
Locate a flat spot inside the vehicle, near the taillight. Adhere the black converter box using the provided double-sided tape (H). Insert the 10-amp fuse provided into the red inline fuse holder.
- Step 7**  
When in use, route the 4-flat to the center of the vehicle. When not in use, roll up and store in a convenient, out of the way location. Secure any loose wires with the provided cable ties.
- Step 8**  
Reinstall all items removed during install and reconnect negative battery terminal. Install the provided 4-flat dust cover to help prevent corrosion.

