

55502

ACURA TSX
HONDA ACCORD

WIRING LOCATION GUIDE GUÍA DE UBICACIÓN DEL CABLEADO IDE D'EMPLACEMENT DES FILS



MUST READ FIRST!

All steps must be followed to ensure correct function of the T-Connector. To verify proper installation once installed, test by connecting a test light or properly wired trailer.



¡DEBE LEERSE PRIMERO!

Debe seguirse todos los pasos para asegurar el correcto funcionamiento del Conector-T. Para verificar la correcta instalación, pruebe conectando una luz de prueba o un remolque debidamente cableado.

À LIRE D'ABORD!

Pour assurer le bon fonctionnement du T-Connector, il faut suivre toutes les étapes. Pour vérifier que l'installation a été bien effectuée, branchez un feu de test ou une remorque correctement filée.

3/10/09

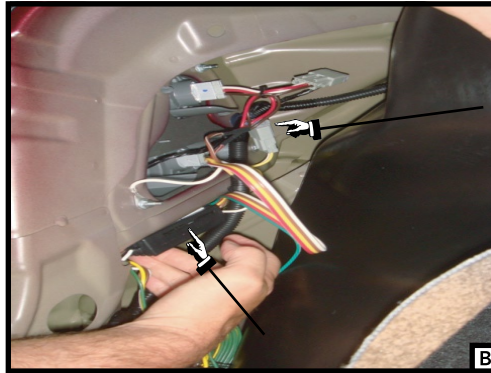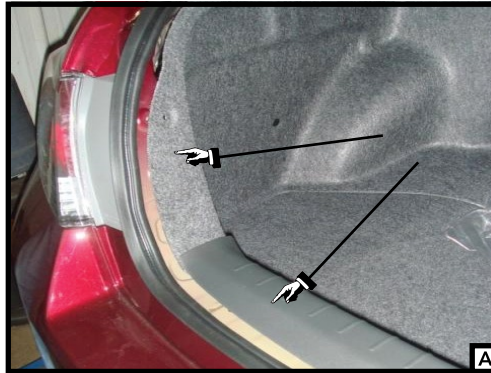

English

1. Open trunk and remove threshold panel. Partially remove the felt trunk liner on driver's side (P3), exposing the taillight wiring. **[A]**

2. The harness will have a connection point with connectors matching the ends of the T-connector adapter. Separate the harness connectors, being careful not to break the locking tabs.

3. Insert the T-connector between the harness connectors and lock into place. **[B]** Route the single connector with the green wire to the 2-way connector just below the threshold on driver's side of the car. **[C]**
Note: Be sure that the connectors are fully inserted with locking tabs in place.

4. Secure the black converter box using the double-sided tape to a suitable location as shown. **[B]** Locate a suitable grounding point near the connectors. Drill a 3/32" pilot hole and secure white wire with ring terminal using screw provided.

6. Reposition the trunk liner and reattach the threshold panel.

WARNING!

Verify miscellaneous items may be hidden behind or under and surfaces before drilling to avoid damage to vehicle and/or personal injury.



55502