



# INSTALLATION INSTRUCTIONS

**⚠ WARNING: DO NOT EXCEED PRODUCT RATING OR TOW VEHICLE LAMP LOAD RATING, WHICHEVER IS LOWER**

## APPLICATIONS

Make	Model
Chrysler	PT Cruiser

## CUSTOM WIRING HARNESS

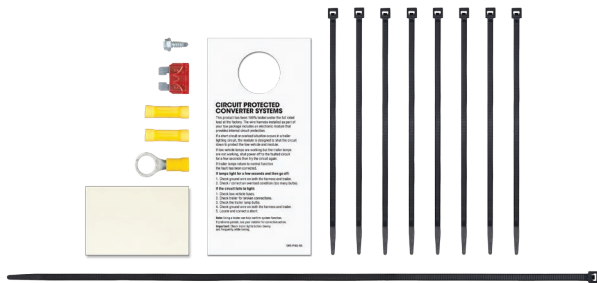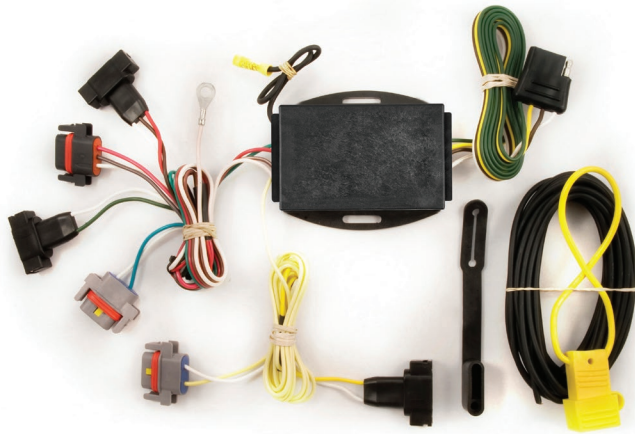

## WIRING LOCATION GUIDE

### PASSENGER CARS (P)

Representative vehicle shown below

P1 - Behind driver side taillight housing, outside of trunk

P2 - Behind passenger side taillight housing, outside of trunk



## NOTICE

All steps must be followed to ensure the wiring harness will function properly. Once installed, test for proper function by using a test light or connecting a properly wired trailer.

## TOOLS NEEDED

- |                         |               |
|-------------------------|---------------|
| Ratchet                 | Wire stripper |
| 10mm socket             | Wire crimper  |
| T-30 Torx bit           | Cutting tool  |
| Flat blade screwdriver  | Fishwire      |
| Panel trim removal tool |               |

## ⚠ WARNING

The battery connection must be fuse-protected, 10-amp max. Exceeding the product rating can cause loss of warranty, overheating and potential fire. Do not exceed product rating or tow vehicle lamp load rating, whichever is lower.

Signal Circuits - 3.0 amps per side

Tail / Running Circuits - 6.0 amps total

Check vehicle owner's manual or contact the vehicle manufacturer for more information.

# INSTALLATION / SAFETY INSTRUCTIONS

## Step 1

Remove the T-30 Torx screw securing the driver side taillight assembly. Carefully pull the taillight rearward taking care not to damage the locking tabs. Repeat on the passenger side.

## Step 2


Behind the removed taillight locate the vehicle taillight wiring harness connectors. The connectors will be similar to those on the custom wiring harness. Separate the connectors from the taillight housing taking care not to damage the locking tabs.

## Step 3

Starting on the driver side, insert the custom wiring harness end with yellow wire between the separated connectors. Make sure the connectors are fully inserted with locking tabs in place.

## Step 4

Locate a suitable grounding point near the connector such as an existing screw with nut in the vehicle frame or drill a 3/32" pilot hole for the provided screw. The area should be free of rust, dirt and paint. Secure the white ground wire using the ring terminal and provided screw.

 **WARNING:** Check for miscellaneous items that may be hidden behind or under any surface before drilling to avoid damage and / or personal injury.

## Step 5

Route the custom wiring harness end with the green wire to the passenger side. Repeat steps 2-3 on the passenger side using the harness end with the green wire.

## Step 6

Locate a flat spot inside the vehicle, near the taillight. Adhere the black converter box using the provided double-sided tape.

## Step 7

When in use, route the 4-flat to the center of the vehicle and out of the trunk. When not in use, roll up and store in a convenient, out of the way location inside the trunk. Secure any loose wires with the provided cable ties.

## Step 8

Insert the provided 10-amp fuse into the in-line fuse holder.

## Step 9

Reinstall all items removed during install. Install the provided 4-flat dust cover to help prevent corrosion.