

# **Mud Flap Mounting Bracket Set** Universal, 12", 1" Offset **Mounting Diagram & Instructions GB756729** (Black Power Coated)

# **IMPORTANT:**

The manufacturer is not responsible for negligent use of vehicle with mud flaps installed, including over-tightening of screws and bolts causing damage to vehicle or mud flaps.

### **TOOLS REQUIRED:**



Electric or re-chargeable 1/2" or 3/8" drill.



3/16" Drill bit



Phillips Screw Driver



3/8" Socket Driver

#### KIT CONTAINS:



(1)Upper Panel, PS Part #755779



(2) Back Strip, 12" Part #755764



#### PARTS BAG #755638:

a) (8) Capscrew, Black #8-32x1/2"Oval HD Part #012035



b) (8) Tek Screw, SS 1/4" x 1" Part #010011




**c**) (8) Washer, SS 0.28" x 1" Part #018028



## **INSTRUCTIONS:**

- 1. Before you install your upper mounts, see the Diagram and parts list for all necessary parts. Start on the Driver's Side.
- 2. Cut the optional rubber flap to the required height, Minimum 10 – 11/16" (See Diagram #1)
- 3. Lay upper panel on the cut rubber flap and drill four 3/16" (4) Holes from the panel holes thorough the rubber flap. (See Diagram #2)
- 4. Fasten the panel and the back strip to the rubber flap with the four (4) Capscrews. (See Diagram #3)
- 5. Square the flap with the tire while holding the flap up against the wheel well and the offset flange tuck underneath the wheel well. (See Diagram #3)
- 6. Locate the center of the wheel well or wheel flare on the back side of the stainless steel panel and drill four 3/16" holes from 'A' to 'D' on the stainless steel panel only.

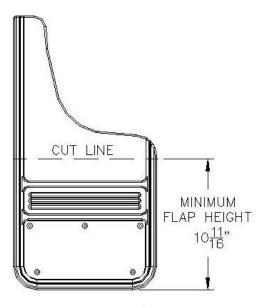







Instructions: #756729 Page 2

# Note: Drill with caution, do not drill through the wheel well or wheel flare.

- 7. Cut protective plastic and peel away from the stainless steel.
- 8. Secure the flap with four flat washers and four tek screws on hole 'A' to 'D'.
- 9. Repeat procedure for the passenger side. Mud Flaps are now ready to install onto a vehicle.

