



Installation Instructions

Bolt-On Fender Flares
Chevrolet Colorado (15-On)

FF853

Please read instructions entirely before installing this product.

Hardware Included	QTY
ALCOHOL TOWELETTE	4

Hardware Included	QTY
Large U-Style Clip	4
Small U-Style Clip	12

Bolt Kit Included	QTY

Ensure that both left and right hand Fender Flares suit the profile of the vehicle. Note the areas where the Fender Flares come in contact with the vehicle. NOTE: Before fitting Fender Flares remove any moldings, strips or existing flares from the wheel arch. If there is a body side molding, mark where the molding is to be cut, alternatively the Fender Flare can be cut to go around the molding. Be sure to allow enough room for the extrusion.

***PRIOR TO ANY PAINTING & INSTALLATION, PRODUCT SHOULD BE THOROUGHLY INSPECTED FOR ALL COMPONENTS LISTED ABOVE. PRODUCT SHOULD ALSO BE TEST FITTED PRIOR TO ANY PAINTING & INSTALLATION. PLEASE CONTACT EGR IF YOU HAVE ANY FITMENT QUESTIONS AND OR MISSING COMPONENTS.**



STEP 1: Clean the body areas where the Fender Flares will make contact with a clean cloth.

For models equipped with factory fender flares, removal of factory flares is required, please consult the vehicle service manual for factory fender flare removal.



STEP 2: Locate the Torx screw at the lower section of the wheel well. Remove the Torx screw using a #15 Torx head screwdriver. Retain the screw for installation.

For Technical Support/Warranty Information please call 800-757-7075
EGR Inc., 4000 East Greystone Drive, Ontario, CA 91761



Installation Instructions

Bolt-On Fender Flares
Chevrolet Colorado (15-On)

FF853



STEP 3: Place the Fender Flare onto the vehicle and fit into the correct position following the contours of the body. Locate the 2 mounting slots on the top of the fender flare. Use 2 of the large U-style clips (indicated with an X on the clip) to attach the fender flare. Make sure the barb in the clip securely attaches in the slot on the Fender Flare.



STEP 4: Use 2 of the small U-style clips to secure the Fender Flare to the body. Make sure the barb in the clip securely attaches in the slot on the Fender Flare.



STEP 5: Reinstall the #15 Torx head screw.



STEP 6: Repeat installation method for other side. Double check the front Fender Flares to make sure all bolts are tight and clips are securely fastened.

For Technical Support/Warranty Information please call 800-757-7075
EGR Inc., 4000 East Greystone Drive, Ontario, CA 91761



Installation Instructions

Bolt-On Fender Flares
Chevrolet Colorado (15-On)

FF853

REAR FENDER FLARE INSTALLATION




STEP 7: Clean the body areas where the Fender Flares will make contact with a clean cloth.


For models equipped with factory fender flares, removal of factory flares is required, please consult the vehicle service manual for factory fender flare removal.



STEP 8: Locate the 2 outer screws. Remove the screws using a #15 Torx head screwdriver. Retain screws for installation.

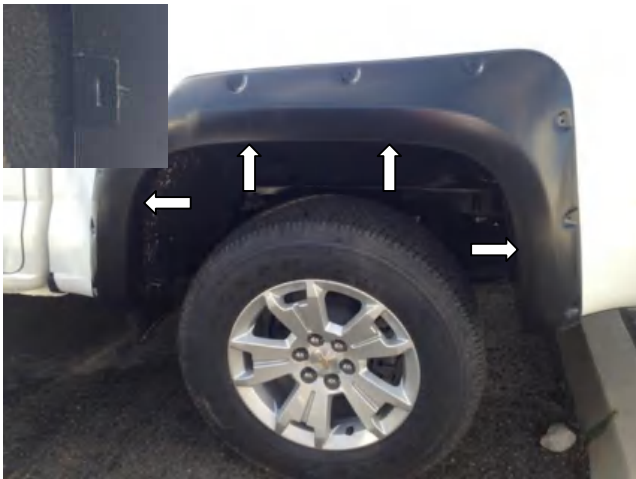

STEP 9: Place the Fender Flare onto the vehicle and fit into the correct position following the contours of the body. Use 4 of the U-style clips to secure the Fender Flare to the body. Make sure the barb in the clip securely attaches in the slot on the Fender Flare.

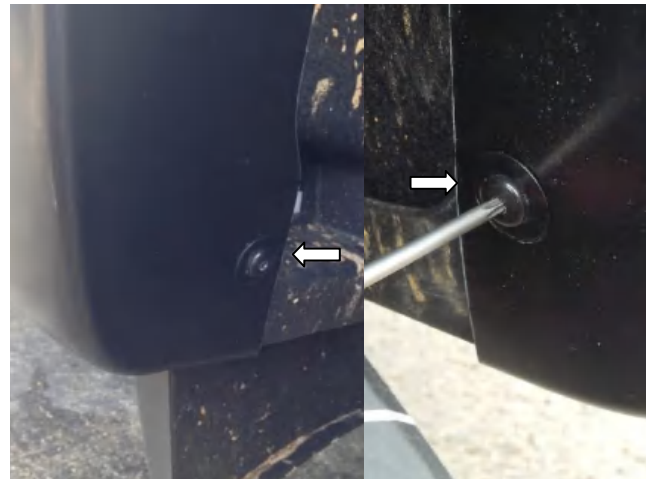

STEP 10: Reinstall the #15 Torx head screws.

For Technical Support/Warranty Information please call 800-757-7075
EGR Inc., 4000 East Greystone Drive, Ontario, CA 91761



Installation Instructions

**Bolt-On Fender Flares
Chevrolet Colorado (15-On)**

FF853



STEP 11: Repeat installation method for other side. Double check the front Fender Flares to make sure all bolts are tight and clips are securely fastened. Your installation is now complete. Do not use abrasive cleaners.

**For Technical Support/Warranty Information please call 800-757-7075
EGR Inc., 4000 East Greystone Drive, Ontario, CA 91761**