

WeatherTech®

Carbon Fiber License Plate Frame


Carbon Fiber License Plate Frame Mounting Instructions

TOOLS NEEDED • #2 Phillips Head Screwdriver • 7/16" Wrench

1. Select the four mounting screws that are most appropriate for your vehicle.
2. If your mounting location only uses 2 holes, then see step 2A FIRST. Carefully position your Carbon Fiber frame and license plate assembly into place on your vehicle and using a #2 Phillips Head Screwdriver, securely fasten with the screws you have chosen, BEING CAREFUL NOT TO OVER-TIGHTEN.
- 2A. If the mounting location on your vehicle only uses two screws, then first select machine screws and matching nuts from the hardware pack. Install these two screws through the Carbon Fiber frame and the license plate holes that DO NOT go to the mounting holes on the vehicle. Using a #2 Phillips Head screwdriver and a wrench, tighten the two nuts onto the end of each screw, locking the assembly together, BEING CAREFUL NOT TO OVER-TIGHTEN.

HELP!

If you have questions regarding installation of this or any other WeatherTech® product, please call our customer service department at (630) 769-1500. We want to help you get the most out of your new WeatherTech® product.

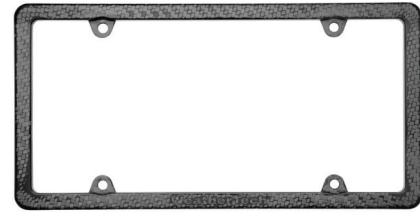

CONTENTS:

- Carbon Fiber License Plate Frame
- Stainless Steel Universal Fastener Kit

CARE INSTRUCTIONS:

- Clean with TechCare® Gentle Car Shampoo
- Do not use abrasive pads on your Carbon Fiber License Plate Frame

High Quality Stainless Steel Universal Fastener Kit*



* Some vehicle models may require re-use of existing fasteners

For joining cover & plate without mounting holes

FITS THESE MODELS AND MORE:

Acura, AM General, Audi, BMW, Buick, Cadillac, Chevrolet, Chrysler, GMC, Daewoo, Dodge (except Viper), Ferrari, Ford, Honda, Hummer, Hyundai, Isuzu, Infiniti, Jaguar, Jeep, Kia, Land Rover, Lexus, Lincoln, Mazda, Mercedes-Benz, Mitsubishi, Nissan, Oldsmobile, Pontiac, Porsche, Range Rover, Saab, Saturn, Scion, Subaru, Suzuki, Toyota, Volkswagen, Volvo

