


I-SHEET PART NUMBER: INST-00173  
 PART NUMBER: **219418012**  
 PRODUCT: **HOOP STEP**  
 APPLICATION: **19-20 RAM 1500 CC**

HARDWARE DESCRIPTION		QTY.
HWKT-00031X		
FLNT-00696X	M8-1.25 CLASS 8 SERRATED FLANGE NUT	18
FDRW-00736X	M8 FENDER WASHER	18



PARTS INCLUDED	QTY
DRIVER SIDE STEP	1
PASSENGER SIDE STEP	1

**Step 1:** Identify driver side step.

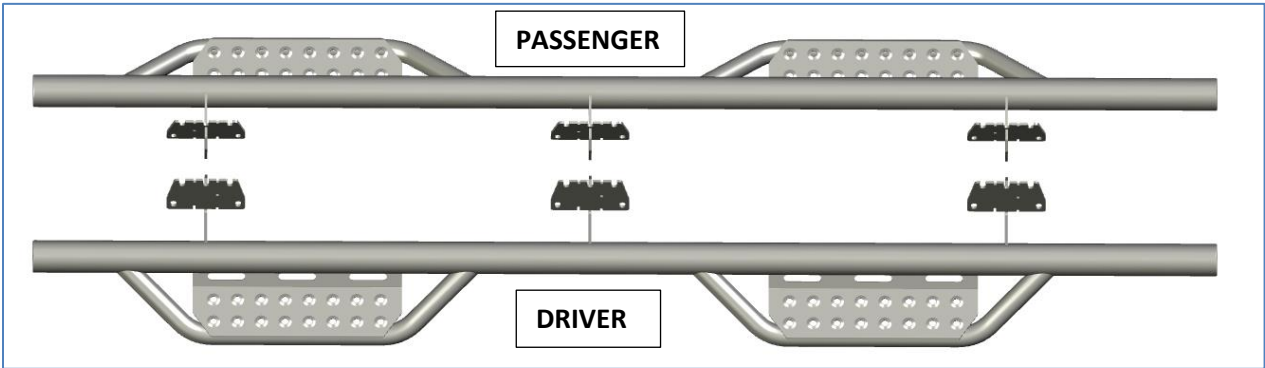

**Step 2:** Starting with the driver side, remove any steps and old hardware from the vehicle.



**Step 3:** On the inside rocker panel there will be three attachment points consisting of three 8mm studs coming out from the panel. These studs may be covered in paint and will need to be cleaned before the installation.



**Step 4:** An additional person is recommended for this step. Carefully install the Hoop step to the three factory attachment points using the provided M8 flanged hex nuts. Leave finger tight for now.





n-fab.com

a TRUCK HERO  
company

nfabinc f t

I-SHEET PART NUMBER: INST-00173  
PART NUMBER: **219418012**  
PRODUCT: **HOOP STEP**  
APPLICATION: **19-20 RAM 1500 CC**

**Step 5:** Next, adjust the Hoop step level with the body of the cab and tighten all hardware 30 ft. /lbs.



**Step 6:** Re-peat steps 3-5 for passenger side.

Your install in now complete.