

I-SHEET NUMBER: **INST-00330** PART NUMBER: **T22-CCTX**


PRODUCT: **Growler Running Board**APPLICATION: **22-C Tundra Crew Max**

HARDWARE DESCRIPTION		OTV
HWKT-00025X		QTY.
FLBW-00894	M8-1.25 X 30MM CLASS 8.8 FLANGE CAP	16
	SCREW W/WASHER	
FLHB-00688	3/8"-16 X 1" GRADE 5 HEX SERRATED	16
	FLANGE BOLT	


PARTS INCLUDED	
Running Boards	
Rocker Panel mounting Brackets	
Threaded clamp plates	






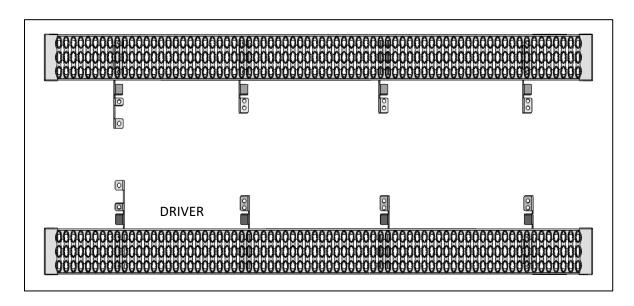

Step 1 Beginning with the driver side, remove the factory hardware and discard. **Step 2** Next, install the (X4) rocker panel mounting brackets with the supplied M8x25mm Hex bolts with integrated washers and leave loose.

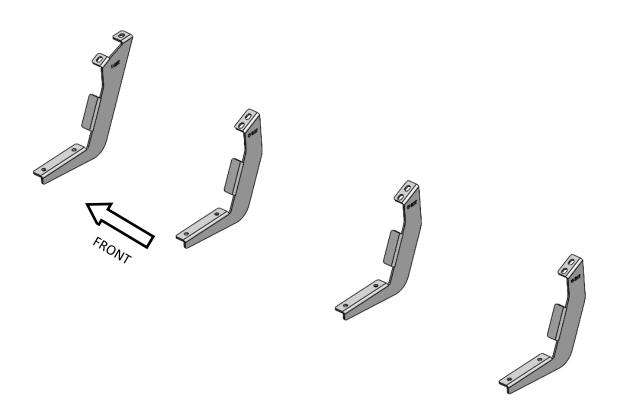

Step 3: Set running board along the top of all four brackets and center along the cab.

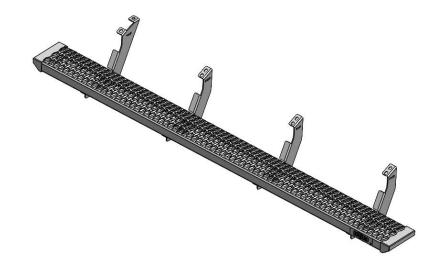



I-SHEET NUMBER: INST-00330 PART NUMBER: T22-CCTX


PRODUCT: **Growler Running Board**APPLICATION: **22-C Tundra Crew Max**

<u>Step 4:</u> Insert the supplied threaded brackets (x4) inside the running board lip over the top of each bracket.

Step 5: With the supplied 3/8" x 1" hex bolts, secure each mounting location and leave loose.

Step 6: After final adjustment, tighten all running board threaded mounts.

Step 7: Next, adjust frame brackets so the running board is level with body of the vehicle and tighten all factory-mounting locations.

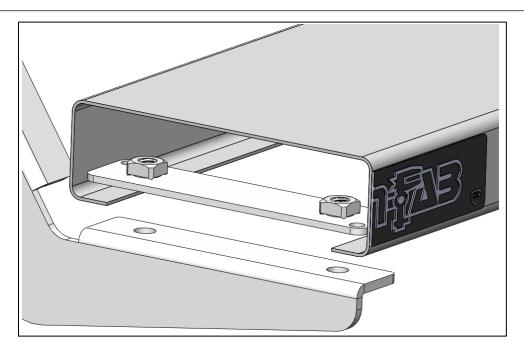

Step 8: Re-peat steps 2-7 for passenger side.