


Components and Hardware: HWKT-12711X

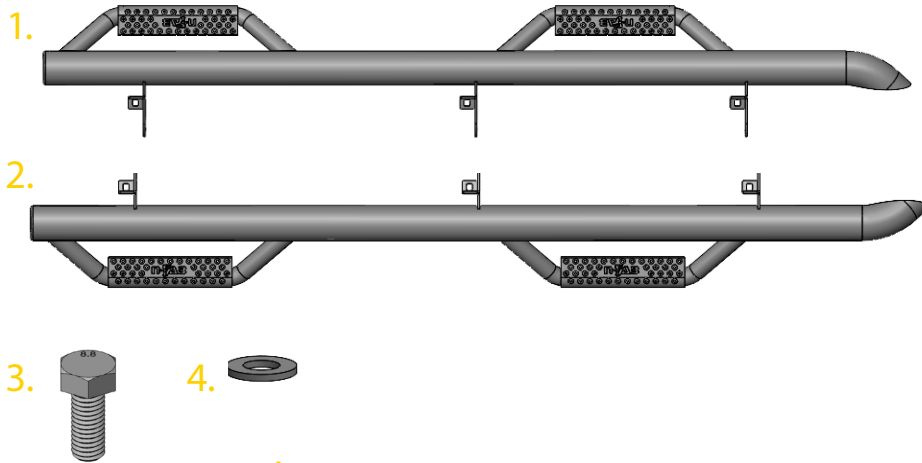

Components and Hardware:

- 1. Driver side step.....(1)
- 2. Passenger side step.....(1)
- 3. M8-1.2x20mm hex bolt.....(6)
- 4. M8 flat washer.....(6)

Tools for Installation:

- Ratchet wrench
- Short extension
- 13mm socket



DESERT BORN, ROAD READY.™

PART# C1573T/-TX
15-19 TAHOE/YUKON

NERF STEP
INST-02845

INSTALL

Step 1. Lift (#1) driver side step into place, aligning brackets with OE mounting locations and loosely fasten using (#3)x6 M8x20mm Hex bolt and (#4)x6 M8 flat washer.
Step 2. After final adjustment, fully tighten hardware starting with the bottom mounts and then with the top mounts. (15-20 ft/lbs) of torque.



Step 3. Repeat install process with passenger side step.

⚠ NOTE: Use caution when mounting step; not to damage AC lines.

