


PUTCO®

MOLLE PANELS

- MODULAR LIGHTWEIGHT LOAD CARRYING EQUIPMENT -

INSTRUCTION GUIDE

TOYOTA TACOMA

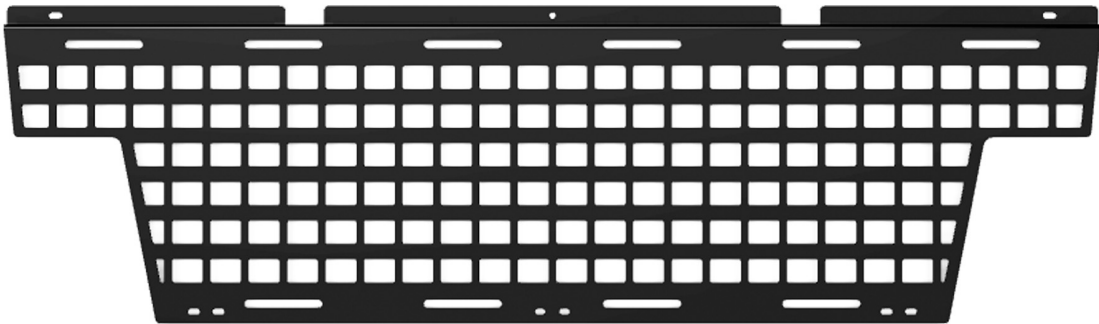

FRONT PANEL

Congratulations on your purchase of a high quality PUTCO® product. Should you need any application or technical assistance, feel free to call us at:

1-800-247-3974

Monday-Friday 8:00am - 5:00pm (Central Standard Time)
Contact your PUTCO® dealer for other quality accessories.



**PLEASE READ ALL INSTRUCTIONS BEFORE INSTALLATION
AND CHECK TO SEE THAT ALL PARTS ARE INCLUDED**

REQUIRED TOOLS

PHILLIPS SCREWDRIVER



T30 TORX DRIVER



CONTENT LIST


DESCRIPTION	QTY
Molle Front Plate	1
Front Brackets	3
M6 Torx-Head Bolts	6
8-32 Philip's-Head Screws	3
5/16 Well Nuts	3



INSTALLATION INSTRUCTIONS

- 1** Loosely assemble a well nut and Philip's-head screw onto each of the three front brackets. Insert the well nuts down into each of the three drain holes located towards the front of the bed floor, then tighten the screw until the well nut is snug in the hole, but do not overtighten.

NOTE: if desired, you may omit the middle bracket if you want to keep an open drain hole.

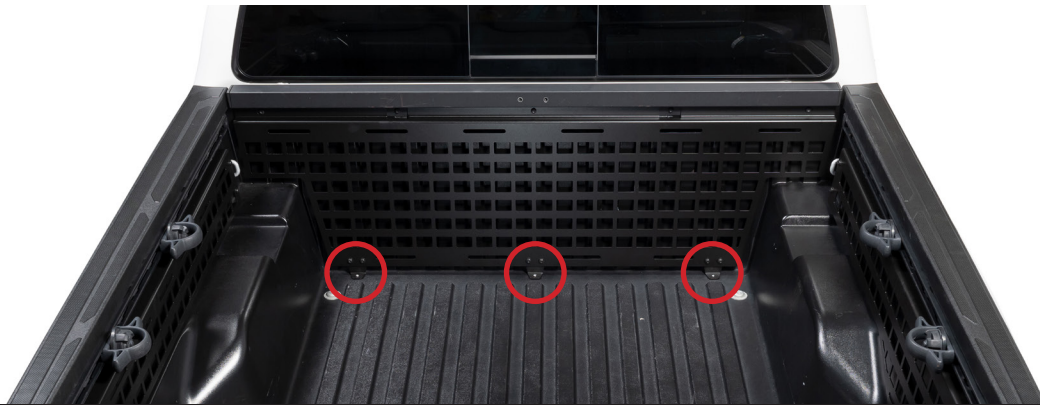

Front bracket locations circled in red

- 2** Unscrew and remove the three required T30 Torx-head fasteners from the upper part of the bed front, then set the front molle plate in place, and attach to the bed re-using these three fasteners.
- 3** Fasten the molle plates to their brackets using the supplied M6 bolts and a T30 Torx driver.
- 4** Once the front plate is installed in the vehicle, ensure all fasteners are tightened until snug, but do not overtighten.

Your new MOLLE Panel is now successfully installed on your vehicle!



Completed Tacoma MOLLE Front Plate