


PUTCO®

# MOLLE PANELS

- MODULAR LIGHTWEIGHT LOAD CARRYING EQUIPMENT -

## INSTRUCTION GUIDE

### TOYOTA TACOMA

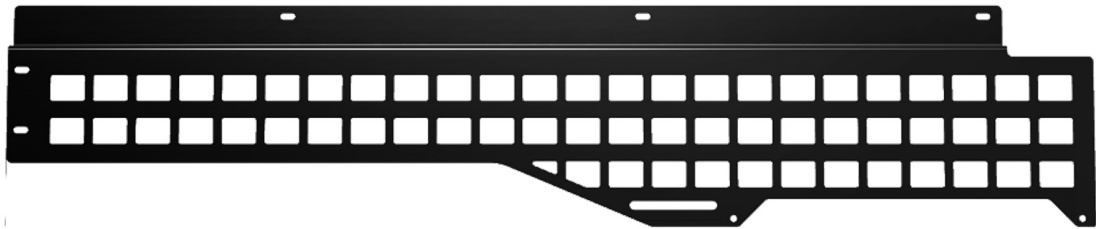

SIDE PANEL

Congratulations on your purchase of a high quality PUTCO® product. Should you need any application or technical assistance, feel free to call us at:

**1-800-247-3974**

Monday-Friday 8:00am - 5:00pm (Central Standard Time)  
Contact your PUTCO® dealer for other quality accessories.



**PLEASE READ ALL INSTRUCTIONS BEFORE INSTALLATION  
AND CHECK TO SEE THAT ALL PARTS ARE INCLUDED**

#### REQUIRED TOOLS

T40 TORX DRIVER



T30 TORX DRIVER



#### CONTENT LIST

DESCRIPTION	QTY
Molle Side Plate	1
Side Brackets	1
M6 Torx-Head Bolts	2



## INSTALLATION INSTRUCTIONS

- 1** Unscrew and remove both in-bed rails using a T30 Torx driver.
- 2** Using a T40 Torx driver, unscrew and remove the tie-down hook located towards the front of the bed. Place the supplied side bracket behind the tie-down hook, then fasten to the bed re-using factory hardware.
- 3** For the passenger side, remove and set aside the two T30 Torx-head fasteners from the bed cubby shown below. The passenger-side molle plate will mount to this location re-using these fasteners.



- 4** Place the side plate on the backside of the in-bed rail, then fasten to the bed re-using the factory hardware.
- 5** Fasten the side plate to its bracket using the supplied M6 bolts and a T30 Torx driver.
- 6** Once all the plates are installed in the vehicle, ensure all fasteners are tightened until snug, but do not overtighten.

**Your new MOLLE Panel is now successfully installed on your vehicle!**