



**KIT INCLUDES:**

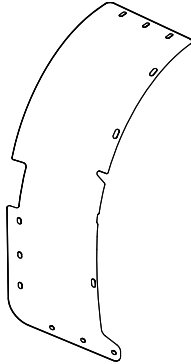

(2) Rear Wheel Liner Front  
Part#702352

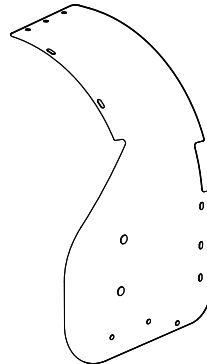


(2) Rear Wheel Liner Rear  
Part#702519


**TOOLS:**




Push Pin Pry Tool



5/16" Socket Wrench



a) (16) Black SS Sheet Metal  
Screw 1"  
Part #016055



b) (16) Aluminum Flat Washer  
1"  
Part #018053



c) (16) Spring Nut  
Part #028004


**PARTS BAG: #702354**

**INSTALLATION INSTRUCTIONS**

1. Review instructions & ensure all parts are included prior to install.
2. Start on the driver side. Remove the factory liner by removing push pins, & factory screws. Keep aside for later reinstallation.





2 continued...  
Remove hardware shown here.

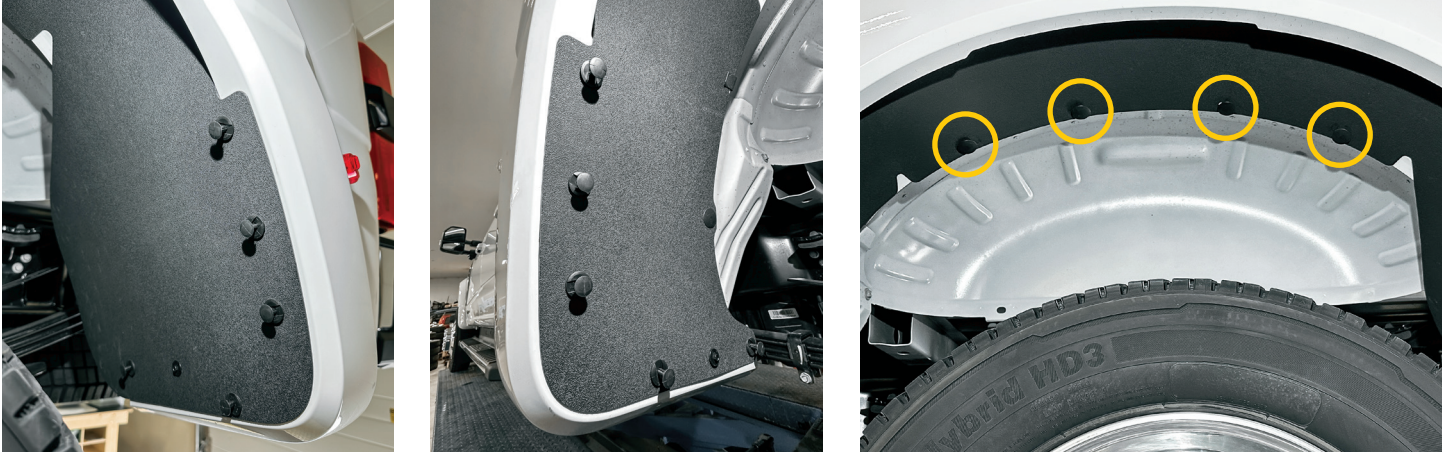


3. Leave the factory spring nuts in place on the front & rear.



4. Install 3 spring nuts on the top of the rear wheel liner.

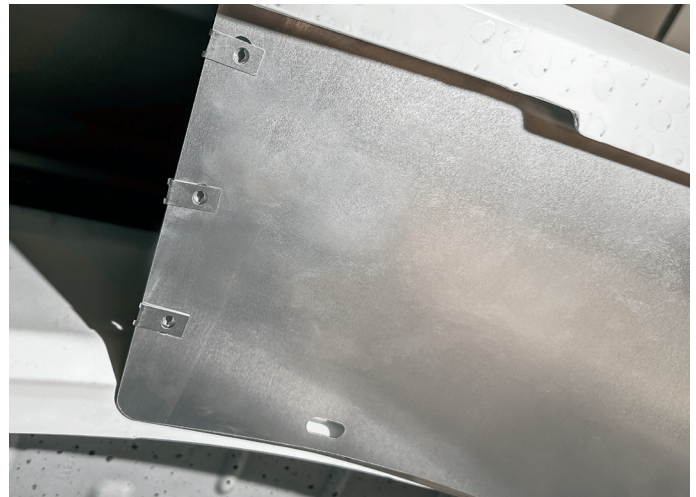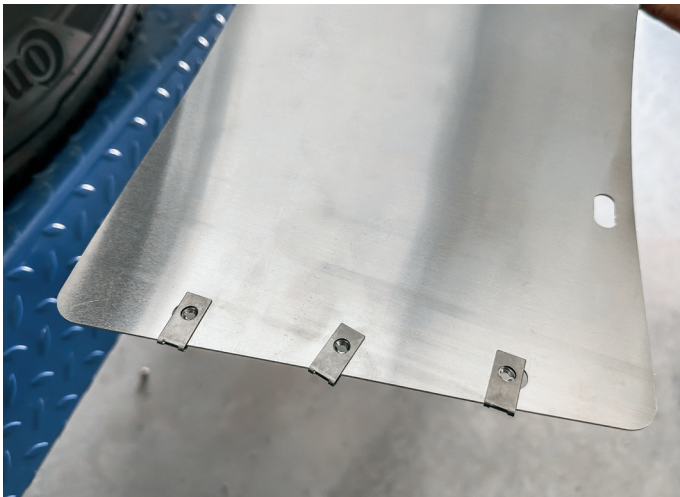

5. Install 5 spring nuts on the inside wheel hub edge.

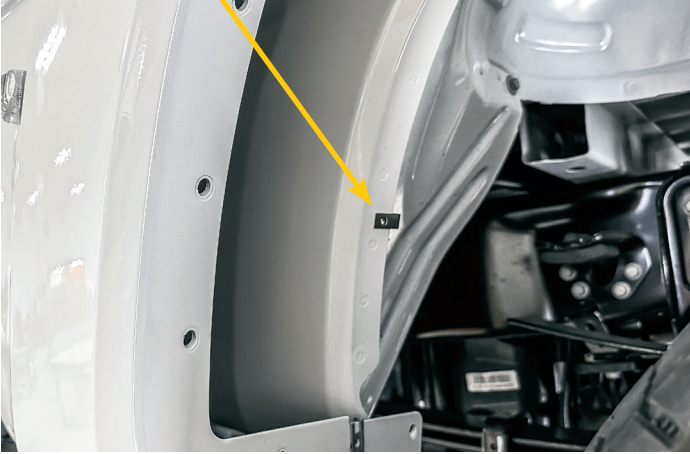

6. Lightly handroll the supplied liner to shape with the wheel well.


7. Start with the rear liner & begin installing it using the factory hardware removed in step 2. Start from the bottom & work your way up. Do the same for the front piece.



8. Loosly install the liner using the remaining holes along the edge using sheet metal screw (a) & flat washer (b).



9. Now, loosely secure the top end of the front liner to the top end of the rear liner with 3 sheet metal screws (a) & flat washers (b).

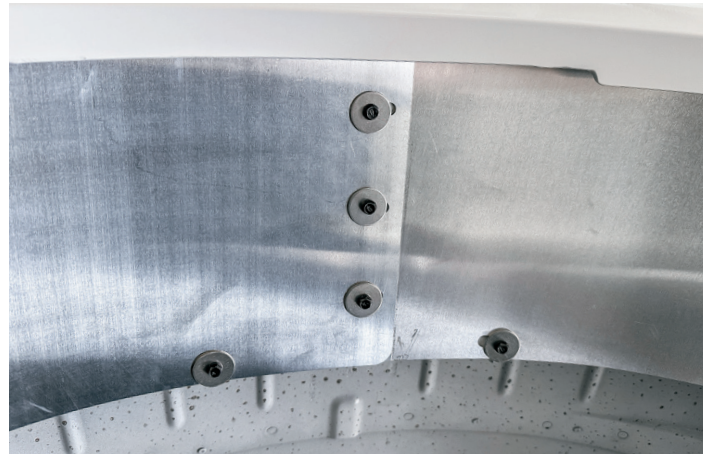

10. Now that everything is in place, tighten all fasteners. Repeat the process on the passenger side.

