


WeatherTech®

StainlessFrame

License Plate Frame Mounting Instructions

TOOLS NEEDED • #2 Phillips Head Screwdriver • 7/16" Wrench

1. Unscrew the license plate frame from the vehicle and keep existing screws together as you will use them to mount the StainlessFrame.
2. Lay the StainlessFrame face down on a soft or non-abrasive surface.
3. The bottom of the StainlessFrame is the edge with the (2) metal tabs. Place the bottom of your license plate under these (2) tabs.
4. Place the included PlateSpacer™ onto the back of the license plate by lining it up to the four holes.
5. Provided in the parts kit are (4) cap anchors and (4) chrome caps. Place the cap anchors under the screws previously removed see FIGURE 1.
6. Pick up the assembly, with the holes still aligned, and place the screws into the top two holes to help hold the assembly together.
7. Loosely attach all screws and cap anchors on your vehicle. Tighten all screws after alignment.
8. After tightening, snap the (4) chrome caps on the top of the screws.

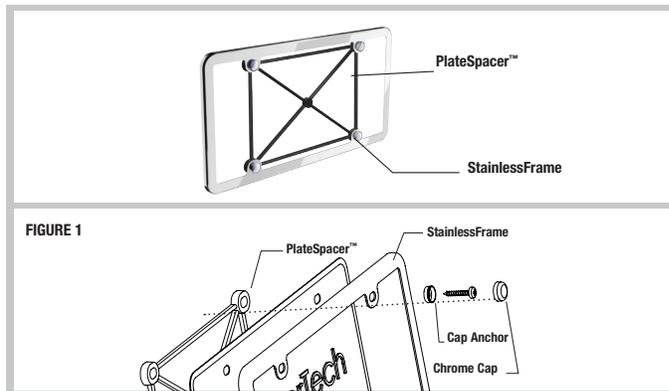

HELP!

If you have questions regarding installation of this or any other WeatherTech® product, please call our customer service department at (630) 769-1500, Monday through Friday, 9 a.m. to 5 p.m. Central Time. We want to help you get the most out of your new WeatherTech® product.

PLEASE CHECK STATE AND LOCAL LAWS PRIOR TO USE.



CONTENTS:

- StainlessFrame License Plate Cover
- (4) Accessory Chrome Caps
- (4) Cap Anchors
- PlateSpacer™

CARE INSTRUCTIONS:

- Clean with soapy water or window cleaner
- Do not use abrasive pads, harsh detergents or degreasers on the StainlessFrame

FITS THESE MODELS AND MORE:

Acura, AM General, Audi, BMW, Buick, Cadillac, Chevrolet, Chrysler, GMC, Daewoo, Dodge (except Viper), Ferrari, Ford, Honda, Hummer, Hyundai, Isuzu, Infiniti, Jaguar, Jeep, Kia, Land Rover, Lexus, Lincoln, Mazda, Mercedes-Benz®, Mitsubishi, Nissan, Oldsmobile, Pontiac, Porsche®, Range Rover, Saab, Saturn, Scion, Subaru, Suzuki, Toyota, Volkswagen, Volvo and More!