

Parts Included:	Qty
MRSP Bumper	1
Hardware Pack:	
Uses Factory hardware	




INSTRUCTIONS:

NOTE: Carefully read entire instructions toughly before attempting to install this part


Step 1: Remove factory bumper. Start by removing the front fender splash guard (both sides). **Fig A**



Step 2: Unplug factory fog lights and sensors. Next, remove the (4) 14mm hex nuts (both sides) from the frame studs and set aside. This hardware will be re-used in the installation. **Fig. B**

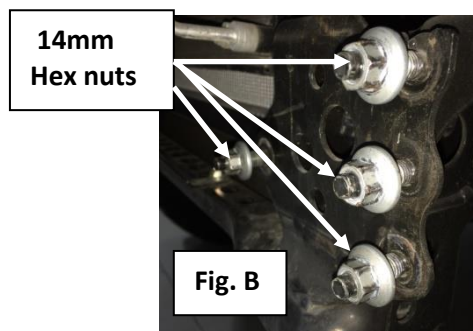

Step 3: Carefully pull bumper straight forward and away to remove from vehicle and set aside. ***Fig. C***

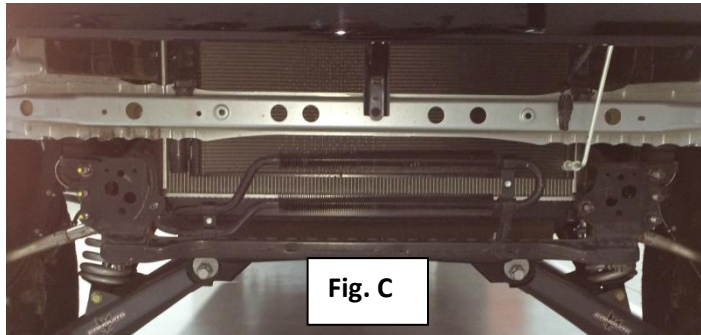

Step 4: Install MRDS bumper to factory mounting studs and loosely fasten with the 14mm hex nuts that were removed step 2.

Step 5: After final adjustment, tighten all hardware to factory specs. Your install is now complete.