

2015-17, GMC HD Dually

Rear Mount Bracket
Mounting Diagram & Instructions
GB756991

IMPORTANT:

The manufacturer is not responsible for negligent use of vehicle with mud flaps installed, including over-tightening of screws and bolts causing damage to vehicle or mud flaps.

TOOLS REQUIRED:













KIT CONTAINS: PARTS BAG #755934

- a) (1)Mount Bracket, Rear, DS Part #755932
- b) (1)Mount Bracket Rear, PS Part #755933



c) (14) Machine Screw SS #8-32 x 5/16" oval hd Part #012023



e) (4) Machine Screw SS M6-1x1-1/4" Button Head Part #014048



f) (14) Nut, T, SS, 3 Prong #8-32UNCx ¼"Barrel Part #016028




g) (4) Flat Washer 0.281" x 1" Part #018028



INSTALLATION

For ease of installation, it is suggested that the wheel be removed.

- 1. Before you install your mud flap set, see the diagram and parts list for all necessary parts. Cut protective plastic and peel away from stainless steel. Start on driver's side.
- 2. Use the DS mount bracket to locate holes #9 to #13 and drill a 1/4" hole (5) from #9 to #13. (See diagram #1)

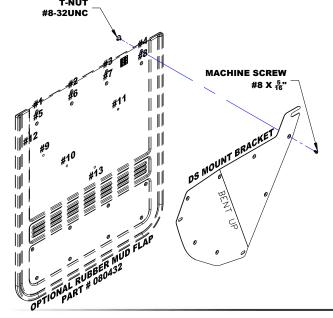

- 3. Fasten the DS mount bracket to the rubber mud flap with the seven machine screws #8 x 5/16" and seven t-nut #8 in holes #1 to #4 and #9 to #11. (See diagram #1)
- 4. Remove the factory bolts #4 and #5 on the wheel well as shown on the diagram and discard. (*See diagram* #2)
- 5. Loosen factory bolt #6 approximately ½", then slide the opened slot hole #3 of the upper mount bracket into the factory bolt #6 and hold it in that position. (*See diagram* #2)
- 6. Now install two machine screws and two flat washers on holes #1 and #2 through the factory holes #4 and #5. Loosely secure at this point. (*See diagram* #2)
- 7. Square the flap with the tire and push the flap up against the wheel well.
- 8. Tighten all three screws/bolts on holes #1 to #3.





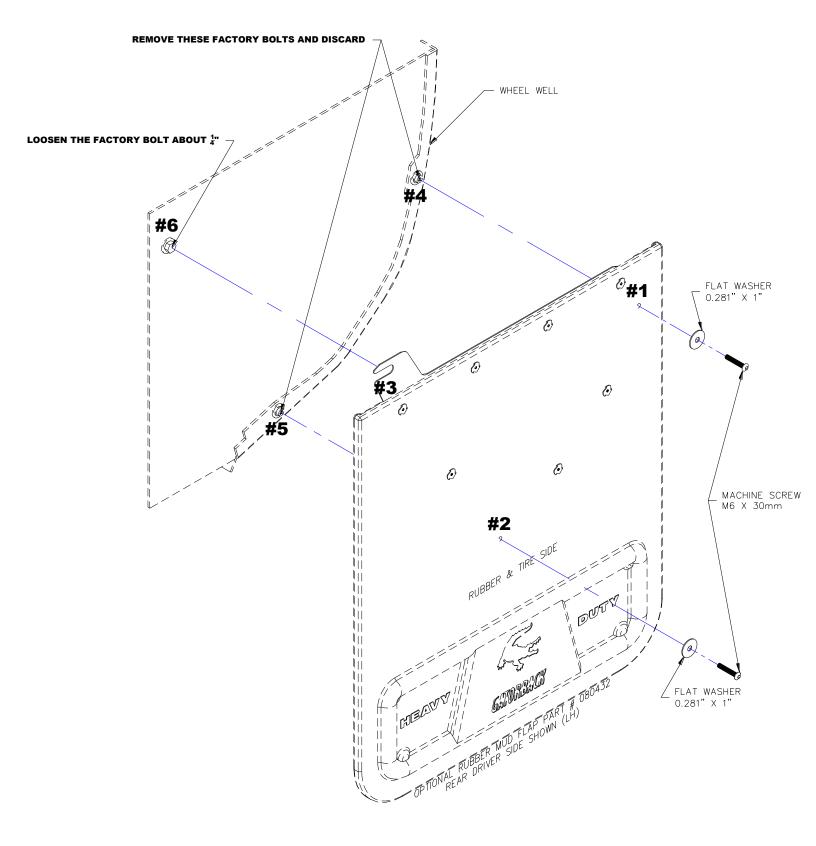


Diagram #2