

INSTALLATION INSTRUCTIONS AND PARTS LIST

VEHICLE APPLICATION:

MODEL 251724 (20.25" X 23.00") DUAL WHEEL MUDGUARDS 2017 FORD SUPER DUTY DUAL WHEEL TRUCKS

1. READ INSTRUCTIONS COMPLETELY AND CHECK TO MAKE SURE THAT ALL REQUIRED PARTS (LISTED ON SERVICE PARTS LIST) ARE ON HAND BEFORE STARTING THE INSTALLATION.
2. PREPARE THE VEHICLE FOR MUDGUARD INSTALLATION AS FOLLOWS:
 - 2.1. REMOVE FACTORY BOLT (SEE FIG. 1) AND INSTALL THE SUPPORT BRACKET (ITEM#11) WITH THE FACTORY BOLT USING THE NYLON WASHER (ITEM#9) BETWEEN THE BRACKET AND VEHICLE BODY METAL.
 - 2.2. REMOVE THE FACTORY SCREW (BOTTOM CENTER) AND 5 PLASTIC RETAINERS THAT HOLD THE FENDER LINER TO THE FENDER BEHIND THE DUAL WHEELS.
 - 2.3. INSTALL FOUR U-NUTS (ITEM #8) (THREADS TOWARD THE REAR OF THE VEHICLE) INTO THE FOUR OUTBOARD FENDER FLARE HOLES (SEE FIG. 1).


MOUNTING 251724 MUDGUARDS:

3. INSTALL THE MUDGUARDS AS FOLLOWS:
 - 3.1. POSITION THE MUDGUARD AGAINST THE WHEEL WELL FLANGE AND PLASTIC LINER SO THAT THE HOLE IN THE MUDGUARD LINES UP WITH THE HOLE IN THE SUPPORT BRACKET. INSTALL 1/4-20 X 1-1/4" BUTTON HEAD SCREW (ITEM #5) AND 1/4" FENDER WASHER (ITEM #7) THRU THE MUDGUARD AND SUPPORT BRACKET, THEN ATTACH THE 1/4-20 SERRATED FLANGE NUT (ITEM #6).
 - 3.2. INSTALL 1/4-20 X 1-1/4" BUTTON HEAD SCREWS (ITEM #5) AND 1/4" FENDER WASHERS (ITEM #7) THRU THE MUDGUARD, FENDER LINER AND OUTBOARD PLASTIC FENDER FLARE HOLES INTO THE FOUR (4) PREVIOUSLY INSTALLED U-NUTS.
 - 3.3. INSTALL 7MM SEMS SCREW (ITEM#10) THROUGH MUDGUARD AND FENDER LINER INTO THE BOTTOM CENTER FACTORY SCREW LOCATION.
 - 3.4. MOVE THE MUDGUARD IN OR OUT AS DESIRED, LEVEL THE MUDGUARD AND TIGHTEN THE FASTENERS.

SERVICE PARTS LIST

fig.1

2017 FORD SUPER DUTY DUALY
MODEL NO. - 251724

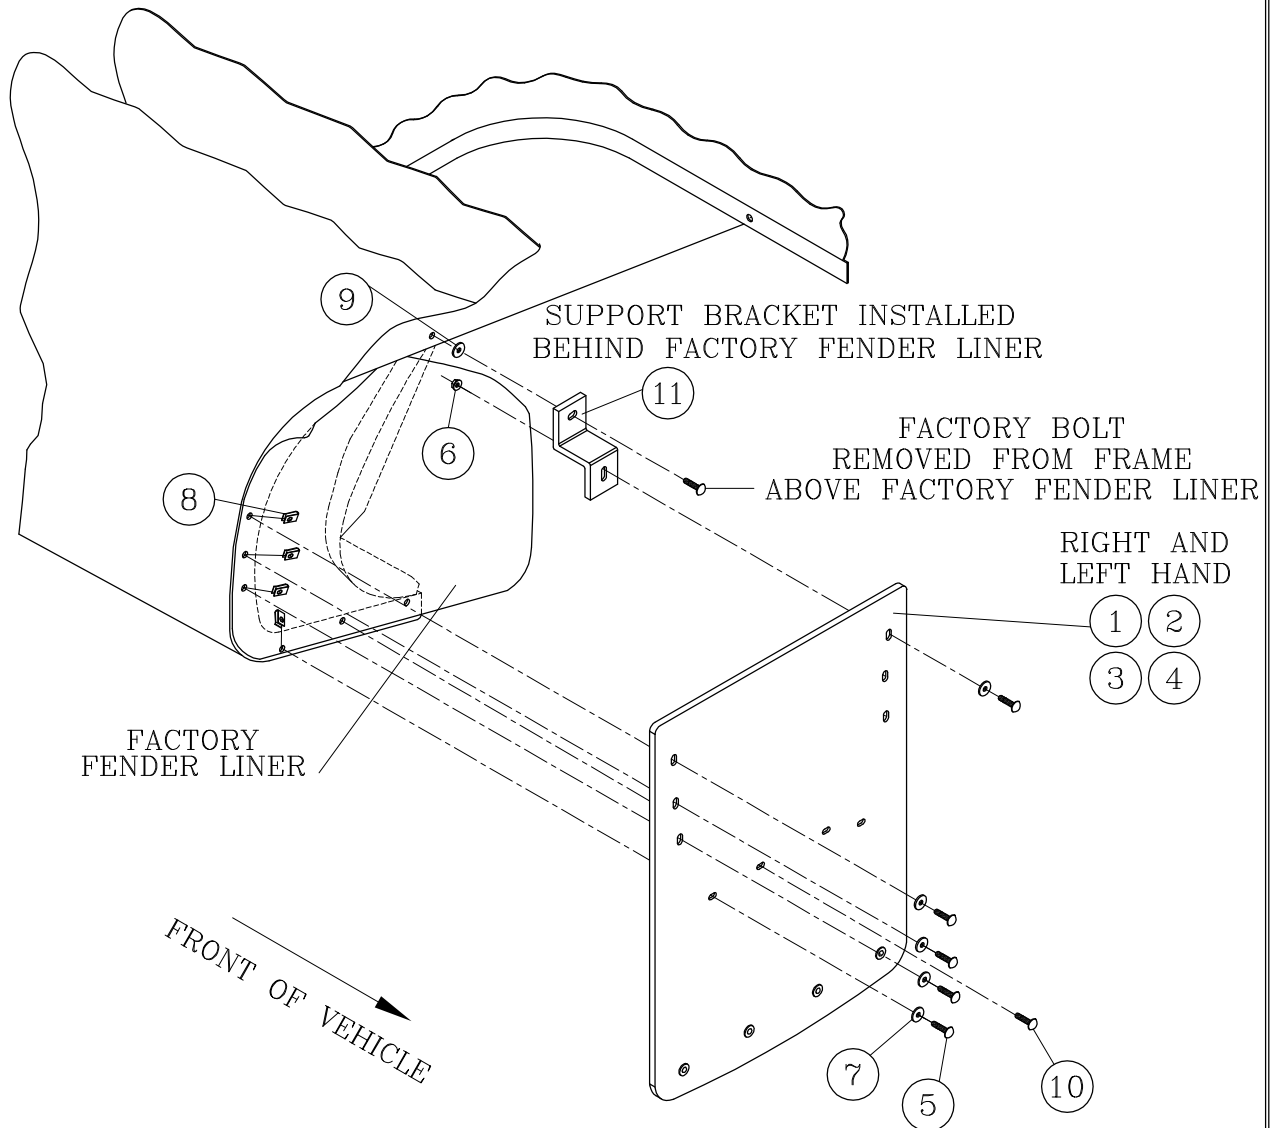

RIGHT (PASSENGER) SIDE SHOWN

ITEM	PART NO.	QTY	DESCRIPTION
1	553135	2	MUDGUARD-RUBBER,20.25 X 23.00, 251724
2	550193	2	INSERT-MUDGUARD, SST, LH/RH
3	108052	8	RIVET-3/16, SST
4	105511	8	WASHER-FLAT
5	108053	10	SCR-BTN HD SOC, SST, 1/4-20 X 1-1/4", BZP
6	102366	2	NUT- HEX, SERRATED FLANGE,SST, 1/4-20
7	108521	10	WASHER- FENDER, 1/4 X 1, SST, 18-8, BZP
8	106604	8	NUT-U, MULTI-THREAD, 1/4-20, BLK
9	108442	2	WSHR-NYL,.360X1.50X.032,BLK
10	105514	2	SCR-SEMS,7MMHH,M4.2-1.41X30MM
11	553136	2	BRACKET - MOUNTING, 251724

